
# NASA Contractor Report 3646

User's Manual for the REEDM (Rocket Exhaust Effluent Diffusion Model) Computer Program

J. R. Bjorklund, R. K. Dumbauld, C. S. Cheney, and H. V. Geary

CONTRACT NAS8-34132 DECEMBER 1982

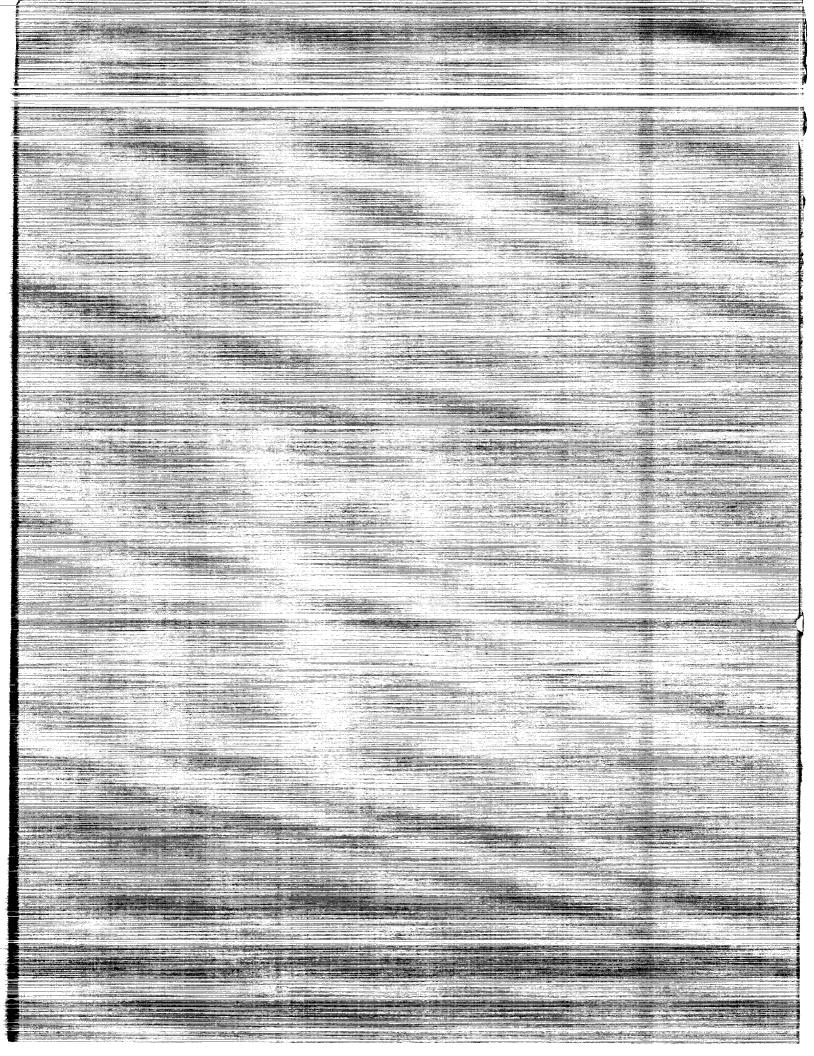



User's Manual for the REEDM (Rocket Exhaust Effluent Diffusion Model) Computer Program

J. R. Bjorklund, R. K. Dumbauld, C. S. Cheney, and H. V. Geary H. E. Cramer Company, Inc. Salt Lake City, Utah

Prepared for George C. Marshall Space Flight Center under Contract NAS8-34132



National Aeronautics and Space Administration

Scientific and Technical Information Branch

1982

				**************************************		-	:
							-
							:
							-

#### FOREWORD

This final report is submitted to the Atmospheric Sciences Division,

Space Science Laboratory, Marshall Space Flight Center, in partial fulfillment of the requirements of Contract No. NAS8-34132.

This report contains a description of the models, model input parameters, user's instructions for the program, and worked example problems. A listing of the REEDM computer program is contained in NASA CR-3647.

The H. E. Cramer Company, Inc. is indebted to Mr. Joseph C. Sloan and Dr. Briscoe Stephens of the Atmospheric Sciences Division at MSFC for technical guidance and helpful suggestions in the development of the REEDM program and in the design of output formats. Mr. Norman Reavis, Atmospheric Sciences Division, MSFC, and Mr. Joseph Parker, KSC, assisted in the implementation of the program at MSFC and KSC.

## TABLE OF CONTENTS

Section	<u>Title</u>	Page
	FOREWORD	i
1	INTRODUCTION	1
	1.1 Background 1.2 Purpose	1 2
	1.3 Organization of the Manual	2
2	OVERVIEW OF THE NASA/MSFC REEDM PROGRAM	3
	<ul><li>2.1 Components of the REEDM Computer Program</li><li>2.2 Launch Types and Vehicle Parameters</li><li>2.3 Meteorological Layers</li></ul>	3 7 11
3	REEDM CLOUD AND PLUME RISE MODELS, SOURCE AND METEOROLOGICAL ALGORITHMS	15
	<ul><li>3.1 REEDM Cloud and Plume Rise Model</li><li>3.2 Source-Dimensions, Material Distribution, and Spatial Position of the Stabilized</li></ul>	15
	Ground-Cloud	19
	3.3 Turbulence Profile Algorithm	24
4	REEDM DISPERSION MODELS	31
	<ul><li>4.1 Dosage and Concentration Models</li><li>4.2 Gravitational Deposition Model</li></ul>	31 36
5	REEDM COMPUTER PROGRAM OPERATION	41
	<ul><li>5.1 General REEDM Operation Instructions</li><li>5.2 Warning and Error Messages</li><li>5.3 Meteorological Upper Air Sounding Data</li></ul>	41 83
	File Formats	90
	5.4 Assembling and Loading the REEDM Programs	90
	REFERENCES	113
Appendix		
A	EXAMPLE REEDM PROGRAM CALCULATIONS	A-1
	A.1 Meteorological Data A.2 REEDM Calculation Results	A-1 A-2

		:

# SECTION 1 INTRODUCTION

### 1.1 BACKGROUND

NASA, and particularly Marshall Space Flight Center (MSFC), have pursued the development of computerized atmospheric dispersion models for predicting the behavior or rocket exhaust clouds in the troposphere since the mid 1960's. These models are routinely used to assess the environmental impact of exhaust products from rocket engines with respect to air quality standards, toxicity thresholds and potential bio-ecological effects and to evaluate requirements, of any, for launch constraints. The concept of using generalized multilayer dispersion models for these applications was first outlined in 1969 in Ref. 1 and the models have been continuously updated and improved since that time (Refs. 2-5). In 1973, a joint program for rocket exhaust prediction and launch monitoring was initiated by NASA for all Titan launches from Kennedy Space Center (KSC). In this program, MSFC had the responsibility of supplying dispersion predictions, Langley Research Center (LaRC) had responsibility for making concentration measurements of rocket exhaust products at the surface and aloft through the use of aircraft sampling techniques, and KSC provided local support for these activities. This program revealed the need for the development of realtime dispersion prediction capability (Refs. 4-6) and the results of the program provided measurements for use in verifying the accuracy of model predictions (Refs. 7-11) as well as providing a data base which could be used in making model improvements. The work under previous contracts and current work under Contract No. NASS-34132 have culminated in the development of the REEDM computer code described in this user's manual. The REEDM code has been used to assess the environmental impact of Space Shuttle operations and to support the first launches of the Space Shuttle.

### 1.2 PURPOSE

The purpose of this report is to provide complete documentation for the following:

- Mathematical description of the atmospheric dispersion models, cloud-rise models and other mathematical formulas used in the current version of the REEDM code
- Vehicle and source parameters, other pertinent physical properties of the rocket exhaust cloud and meteorological layering techniques
- User's instructions for the REEDM computer program

### 1.3 ORGANIZATION OF THE MANUAL

The main body of the user's manual contains five sections. Section 2 contains a brief overview of the REEDM code. The cloud and plume rise models used in the code to position the cloud in space as it rises from the ground and the meteorological algorithms used to describe the state of the lower troposphere are described in Section 3. Section 4 contains a mathematical description of the atmospheric dispersion models implemented by the computer code. Section 5 describes the user operation of the REEDM computer program.

Appendix A of this manual contains example executions of the computer program. A program listing is presented in Volume 2 of this report.

# SECTION 2 OVERVIEW OF THE NASA/MSFC REEDM PROGRAM

The burning of rocket engines during the first few seconds prior to and immediately following vehicle launches results in the formation of a large cloud of hot, buoyant exhaust products near the ground level which subsequently rises and entrains ambient air until the temperature and density of the cloud reach an approximate equilibrium with ambient conditions. By convention, this cloud is referred to as the ground-cloud. The rocket engines also leave an exhaust trial from normal launches which extends throughout the depth of the troposphere and beyond. The NASA/MSFC REEDM code is designed to calculate peak concentration, dosage and deposition (resulting from both gravitational settling and precipitation scavenging) downwind from normal launches and launch aborts for use in:

- Mission planning activities and environmental assessments
- Prelaunch forecasts of the environmental effects of launch operations
- Postlaunch environmental analysis

### 2.1 COMPONENTS OF THE REEDM COMPUTER PROGRAM

Figure 1 is a schematic diagram showing the major components of the REEDM computer program. Requisite meteorological inputs to the computer program are obtained from the vertical profiles of wind direction, wind speed, air temperature, atmospheric pressure and dew point or relative humidity between the earth's surface and 3000 m. This information is obtained during launch support activities from rawinsonde measurements routinely made at scheduled times throughout the pre-launch countdown and after the

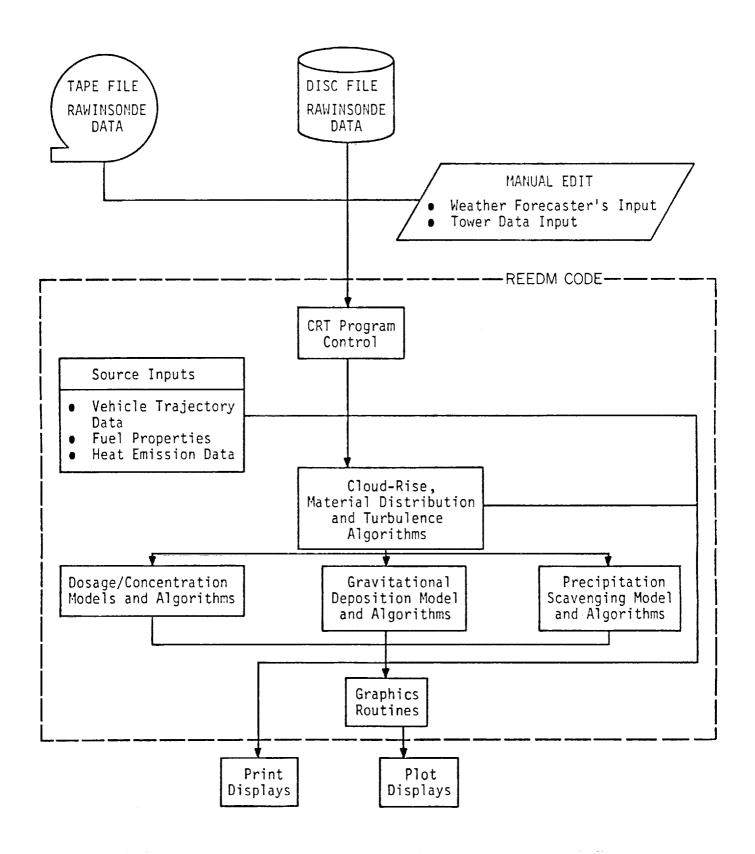


FIGURE 1. Schematic diagram illustrating major components of the REEDM computer program.

launch has occurred. The REEDM program accepts the rawinsonde data from either a disc or data tape file. As shown in Figure 1, the rawinsonde data file can be manually edited to provide for any changes in the vertical profiles that weather forecasters assigned to the launch support team expect to occur between the time of the latest available rawinsonde measurements and the projected time of launch. Similarly, the meteorological inputs for the layers near the surface may also be manually adjusted to reflect changes in the low-level data available from the Wind System. The Wind System is a series of 30-m towers located throughout Kennedy Space Center and one 152-m meteorological tower instrumented to measure wind direction, wind speed, turbulence and air temperature.

The REEDM program is controlled by operator input and internal management routines based on operator response to plain-language queries displayed on a CRT terminal. In Figure 1, this complex interactive function is simply designated by CRT Program Control. Once the operator has elected to perform calculations for the launch of a particular vehicle (for example, the Space Shuttle, Titan, or Delta Thor) and designated a normal launch or one of two launch-abort modes, the program automatically selects a proper set of source inputs for use in algorithms designed to calculate the following parameter values:

- Position in space of the rising ground cloud as a function of time after launch until the internal cloud temperature equals the ambient air temperature (cloud stabilization time)
- Dimensions of the ground cloud as a function of height
- Distribution of vehicle exhaust products within the cloud as a function of height

At this point, the rawinsonde meteorological data, cloud-rise, cloud dimension and exhaust-product distribution calculations are output to a printer

and, if desired by the operator, are also output to a plotted display of vertical profiles of wind direction, wind speed, temperature and virtual potential temperature as well as the dimensions of the stabilized cloud. The operator then has the option of modifying the default values selected and calculated by the program to represent the major meteorological layer structure parameters (the height of the base and top of an elevated inversion layer, for example) and the turbulence parameters that will be used in the dispersion calculations.

After the final selection of model input parameters has been made by the operator, the program performs the selected calculations (dosage/ concentration, gravitational deposition, or deposition due to precipitation scavenging, etc.). When these calculations are completed, the results are printed and, at the operator's option, plotted. If the dosage/concentration option was selected, the print output includes peak concentration at 1-km intervals downwind from the launch pad, the cloud arrival and departure times at 1-km intervals downwind from the pad, and the total dosage and time-mean concentration for the period of interest at these distances. The operator has the option of requesting the REEDM program to plot these results versus distance from the pad and/or isopleths of these quantities on a map of KSC. The print output for the gravitational deposition model contains maximum ground-level deposition versus distance from the pad. If selected by the operator, plots are made of maximum gravitational deposition versus distance from the pad and of deposition isopleths on a map of KSC. Finally, if the operator chooses to calculate deposition due to precipitation scavenging, maximum deposition or maximum surface water pH is also printed and plotted.

Although not shown in Figure 1, there are three major run modes that an operator can choose for making calculations with the REEDM code (operational, research and production). The operational mode is designed for use during launch support operations and automatically calculates various user inputs. For example, in the operational mode, the REEDM code uses an algorithm to calculate appropriate turbulence parameters near the surface,

although an option is provided permitting the operator to modify the values. Either the values calculated by the REEDM code or the operator input values are then used to automatically construct a vertical profile of turbulence for the first 3000 m above the surface which is used in the dispersion calculations. When the research mode of the REEDM code is selected, more information is usually input by the operator. For example, the operator can specify values of the turbulence parameters at each height where rawinsonde data is available. Finally, the production mode of the REEDM code is used to process multiple rawinsonde soundings which are read from a tape or disc file. While the production mode can be run interactively from the CRT terminal, the primary purpose of the production mode is to facilitate batch processing of multiple cases without operator attention. The graphics package is not used with the production mode.

#### 2.2 LAUNCH TYPES AND VEHICLE PARAMETERS

The REEDM code is designed to provide dispersion estimates for normal launches and two types of launch failures. For a normal launch, the assumption is made that all engines and the pad deluge system operate normally. In the case of a launch failure (single engine burn on pad), one solid engine of the Space Shuttle, Titan III and Delta vehicles is assumed to fail to ignite, causing the vehicle to remain on the pad in a hold-down configuration while the other solid engine is assumed to ignite and burn with the pad deluge system operating normally. In the other failure mode (slow burn on pad), an on-pad explosion is assumed to rupture the casings of the solid engines, scattering solid propellant over the area in the vicinity of the launch pad. The scattered solid propellant continues to burn over an extended period at a constant rate. It is assumed that the heat liberated by the explosion of liquid propellant (Space Shuttle and Delta Thor vehicles) does not contribute to plume rise because this heat is liberated over a very short time period compared to the burn time of the scattered solid propellant.

The fuel expenditure, heat content and burn time data currently used in the REEDM code are presented in Table 1 (Ref. 12). The fuel

TABLE 1. FUEL EXPENDITURE AND HEAT CONTENT DATA

	Vehicle Type						
Property	Space Shuttle	Titan III	Delta 2914	Delta 3914			
	(a) Nor	mal Launch					
Fuel Expenditure Rate W (g s )	1.5219×10 <sup>7</sup>	5.4375x10 <sup>6</sup>	8.3607x10 <sup>5</sup>	1.0576x10 <sup>6</sup>			
Effective Fuel Heat Content H (cal g )	1479.7	2021.1	1766.0	1449.9			
	(b) Singl	e Engine Burn					
Fuel Expenditure Rate W (g s )	3.8451x10 <sup>6</sup>	2.7188x10 <sup>6</sup>	$\mathtt{NA}^1$	NA			
Effective Fuel Heat Content H (cal g )	1062.4	1010.6	NA	NA			
Burn Time t <sub>B</sub> (s)	132.0	60.0	NA	NA			
	(c)	Slow Burn					
Fuel Expenditure Rate W (g s )	9.8873x10 <sup>5</sup>	1.3594x10 <sup>6</sup>	2.7294x10 <sup>5</sup>	3.7073×10 <sup>5</sup>			
Effective Fuel Heat Content H (cal g <sup>-1</sup> )	1000.0	1000.0	690.0	411.2			
Burn Time t <sub>B</sub> (s)	1027.0	240.0	69.0	126.0			

<sup>&</sup>lt;sup>1</sup> NA - Not applicable.

expenditure rates for normal launches were obtained by averaging the fuel expenditure rates for the engines over the approximate period from lift-off until the vehicle is about 3000 m above the surface. The fuel expenditure rates for the single engine burn are an average for the normal firing period of the engine. For the slow burn, the rates in the table are an average over the estimated total burn time of the scattered propellants. The effective fuel heat contents, which are used in calculating buoyant cloud rise for normal launches and plume rise for launch failures, include the effects of heat produced by afterburning as well as heat losses due to radiation.

Table 2 shows the exhaust cloud constituents, expressed as a fraction of the total weight of the exhaust products. These fractions have been adjusted to yield the weight of HCl,  $Al_2O_3$ ,  $CO_2$  and CO in the exhaust cloud when multiplied by the appropriate fuel expenditure rates in Table 1.

The cloud-rise and dispersion calculations for normal launches require specification of the time-height profile of the launch vehicle. The vehicle flight profile data for the first 3000 m above the surface were used to obtain a least-squares fit to the expression

$$T_{k} = az^{b} + c (1)$$

where

 $T_{k}$  = time for the vehicle to reach the altitude z

The values thus obtained (Ref. 12) for the constants a, b and c in Equation (1) are given in Table 3.

by the program to the kth level closest to twice the cloud stabilization height (see Section 3 for the mathematical definition of cloud stabilization height). Also, the height of the base of the upper layer is set equal to the height of the top of the lower layer and the program sets the height of the top of the upper layer to the kth height closest to 3000 m.

Rawinsonde measurements at heights greater than 3000 m are not read by the REEDM code. The layer heights are treated as defaults because the use of a kth height between the cloud stabilization height and twice the cloud stabilization height to represent the top of the lower layer maximizes the calculated ground-level vapor concentrations.

In general, program users should select the height of the base of an elevated inversion to represent the top of the lower layer. Because the top of the lower layer is defined in the program as the upper boundary of turbulent mixing, the user should select a height above which the temperature either increases or remains constant for at least to 50 to 100 m. At KSC, the transition zone between the afternoon sea breeze and the return flow aloft or the synoptic wind circulation may be characterized by large wind direction and wind speed shears. While this shear zone presents some problems in the interpretation of model calculated vapor concentrations/dosages, the transition zone likely does not present a barrier to vertical dispersion. Thus, the lowest layer should be placed above the transition zone, especially when ground-level concentrations/dosages are being calculated with the operational version of the REEDM code. Because the primary purpose of the REEDM code is to assist in estimating ground-level environmental effects produced by vehicle launches, the user should generally ignore surface-based inversions or elevated inversions with tops less than a few hundred meters above the surface in the selection of the top of the lowest layer.

The selection of the height of the base and top of the upper layer is also made from an interpretation of the rawinsonde observations. If, for example, the model is being used to estimate concentrations at the flight level of a sampling aircraft and this flight level is in an elevated inversion, the height of the base and top of the upper layer should corre-

expenditure rates for normal launches were obtained by averaging the fuel expenditure rates for the engines over the approximate period from lift-off until the vehicle is about 3000 m above the surface. The fuel expenditure rates for the single engine burn are an average for the normal firing period of the engine. For the slow burn, the rates in the table are an average over the estimated total burn time of the scattered propellants. The effective fuel heat contents, which are used in calculating buoyant cloud rise for normal launches and plume rise for launch failures, include the effects of heat produced by afterburning as well as heat losses due to radiation.

Table 2 shows the exhaust cloud constituents, expressed as a fraction of the total weight of the exhaust products. These fractions have been adjusted to yield the weight of HCl,  ${\rm Al}_2{}^0{}_3$ ,  ${\rm CO}_2$  and CO in the exhaust cloud when multiplied by the appropriate fuel expenditure rates in Table 1.

The cloud-rise and dispersion calculations for normal launches require specification of the time-height profile of the launch vehicle.

The vehicle flight profile data for the first 3000 m above the surface were used to obtain a least-squares fit to the expression

$$T_{k} = az^{b} + c (1)$$

where

Ť

---

 $T_{k}$  = time for the vehicle to reach the altitude z

The values thus obtained (Ref. 12) for the constants a, b and c in Equation (1) are given in Table 3.

TABLE 2. EXHAUST CLOUD CONSTITUENTS (FRACTION BY WEIGHT)

Constituent	Vehicle Type				
	Space Shuttle	Titan III	Delta 2914	Delta 3914	
HC L	0.1146	0.1932	0.1218	0.1589	
Al <sub>2</sub> 0 <sub>3</sub>	0.1828	0.2819	0.2214	0.1936	
co <sub>2</sub>	0.2503	0.2665	0.2055	0.2783	
CO	0.00042	0.0222	0.0156	0.0331	

TABLE 3. VALUES OF THE CONSTANTS IN THE EXPRESSION FOR VEHICLE ALTITUDE VERSUS TIME<sup>1</sup>

Vehicle Type		Constant	
	a	Ъ	c
Space Shuttle	0.652213	0.468085	0.375
Titan III	0.429580	0.518422	5.0
Delta 2914	0.922156	0.432703	0.54
Delta 3914	1.245756	0.418095	0

See Equation (1).

### 2.3 METEOROLOGICAL LAYERS

As noted above, the primary meteorological input to the REEDM code is in the form of rawinsonde observations. Each level of information (standard, mandatory and significant levels) in the rawinsonde data stream (kth observation level) is used in the REEDM calculations to obtain the wind and temperature profiles. The REEDM code is currently constructed to perform dispersion calculations in two major, meteorologically-defined, layers. The base of the lower layer (L=1) is assumed to be at the earth's surface and top of the layer is assumed to be given by the base of an elevated inversion (top of the mixing layer). The boundaries of the upper layer (L=2), are set by the operator. For example, if calculations are desired of dosage/concentration at the altitude of a sampling aircraft flying in an elevated inversion, the boundaries of the upper layer are defined by the base and top of the elevated inversion. The boundaries of the layers must coincide with a height or level reported on the rawinsonde observation. If the user designates a height other than a kth height, the program automatically selects the kth height closest to the user input value.

The selection of the boundaries of the two major layers is critical to the outcome of the dispersion calculations. Both gases (vapor) and particulates (Al<sub>2</sub>O<sub>3</sub>) are assumed to be reflected toward the earth's surface at the tops of major boundaries. Vapor and particulates can be totally or partially reflected at the base of the lower layer according to a userspecified input for the fraction of material reflected (l=complete reflection, O=no reflection). Material is never reflected at the base of the upper layer when gravitational settling or precipitation scavenging calculations are made, but gases are always reflected at the base of the upper layer. Thus, gases are assumed to be trapped in the upper layer for dosage/concentration calculations. The boundaries of these two major layers are also used in the determination of vertical turbulence profiles as explained below in Section 3. In the absence of user input of the layer boundaries, the height of the top of the lower layer is automatically set

by the program to the kth level closest to twice the cloud stabilization height (see Section 3 for the mathematical definition of cloud stabilization height). Also, the height of the base of the upper layer is set equal to the height of the top of the lower layer and the program sets the height of the top of the upper layer to the kth height closest to 3000 m.

Rawinsonde measurements at heights greater than 3000 m are not read by the REEDM code. The layer heights are treated as defaults because the use of a kth height between the cloud stabilization height and twice the cloud stabilization height to represent the top of the lower layer maximizes the calculated ground-level vapor concentrations.

In general, program users should select the height of the base of an elevated inversion to represent the top of the lower layer. Because the top of the lower layer is defined in the program as the upper boundary of turbulent mixing, the user should select a height above which the temperature either increases or remains constant for at least to 50 to 100 m. At KSC, the transition zone between the afternoon sea breeze and the return flow aloft or the synoptic wind circulation may be characterized by large wind direction and wind speed shears. While this shear zone presents some problems in the interpretation of model calculated vapor concentrations/dosages, the transition zone likely does not present a barrier to vertical dispersion. Thus, the lowest layer should be placed above the transition zone, especially when ground-level concentrations/dosages are being calculated with the operational version of the REEDM code. Because the primary purpose of the REEDM code is to assist in estimating ground-level environmental effects produced by vehicle launches, the user should generally ignore surface-based inversions or elevated inversions with tops less than a few hundred meters above the surface in the selection of the top of the lowest layer.

The selection of the height of the base and top of the upper layer is also made from an interpretation of the rawinsonde observations. If, for example, the model is being used to estimate concentrations at the flight level of a sampling aircraft and this flight level is in an elevated inversion, the height of the base and top of the upper layer should corre-

spond to the base and top of the elevated inversion. Similarly, if the aircraft flight level is in a shear zone above the surface layer, the height of the base and top of the shear zone can be used as the base and top of the second layer. The program does not require that the base of the upper layer correspond to the top of the lower layer, except for washout deposition calculations, although the base of the upper layer cannot be less than the top of the lower layer.

#### SECTION 3

# REEDM CLOUD AND PLUME RISE MODELS, SOURCE AND METEOROLOGICAL ALGORITHMS

### 3.1 REEDM CLOUD AND PLUME RISE MODEL

The determination of the stabilized height of the ground cloud for normal launches and of the plume generated by launch failures is an important factor in the dosage/concentration calculations because, in general, the maximum dosage/concentration calculated at the earth's surface is inversely proportional to the cube of the stabilized height. In the case of normal launches of solid-fueled vehicles or vehicles with large solid boosters, vehicle hold-down times are minimal and the vehicle residence times in the first several hundred meters are relatively short. The ground cloud is therefore comprised of buoyant gas emitted over a time period on the order of ten seconds. Experience to date shows that the buoyant rise of the ground cloud under these circumstances is best calculated using an instantaneous cloud-rise model. Limited experience in predicting the buoyant rise from the normal launch of Delta vehicles, with their large liquidfueled first stage, indicates that an average of the rise predicted by a continuous plume-rise and instantaneous cloud-rise model is appropriate. No plume rise data are available for aborted launches of the vehicle types specified in the REEDM code. However, static tests of rocket engines indicate a continuous plume rise model is appropriate in these cases.

The buoyant rise models used in the REEDM program are based on the work of Briggs (Refs. 13 and 14).

### 3.1.1 Instantaneous Cloud-Rise Model

The time for the ground-cloud produced by the normal launch of the Space Shuttle and Titan vehicles to reach a height  $\mathbf{z}_k$  in a stable atmosphere is given by

$$t_{I} = s^{-0.5} \arccos \left[ 1 - \left( \frac{s \gamma_{x} \gamma_{y} \gamma_{z} z_{k}^{4}}{4 F_{I}} \right) \right]$$
 (2)

where  $\mathbf{t}_{\mathsf{T}}$  is constrained to be less than the cloud stabilization time  $\mathsf{t}^{\star}$  and

$$t* = \pi s^{-0.5} \tag{3}$$

s = stability parameter

$$= \frac{g}{T} \frac{\Delta \Phi}{\Delta z}$$

g = gravitational accelleration  $(9.8 \text{ m s}^{-2})$ 

T = ambient air temperature (°K)

 $\frac{\Delta \Phi}{\Delta z}$  = vertical gradient of virtual potential temperature

 $\gamma_x, \gamma_y, \gamma_z$  = alongwind, crosswind and vertical entrainment coefficients

 $F_{I}$  = initial buoyancy term

$$= \frac{3 g H W t_R}{4 \pi c_p T}$$
 (4)

 $H = \text{effective fuel heat content (cal g}^{-1})$ 

W = fuel expenditure rate  $(g s^{-1})$ 

 $\mathbf{t}_{R}$  = time for the rocket to exceed the final cloud stabilization height  $\mathbf{z}_{\scriptscriptstyle \mathrm{T}}$ 

$$= a z_{\mathsf{T}}^{\mathsf{b}} + c \tag{5}$$

 $\rho$  = air density (g m<sup>-3</sup>)

 $c_p$  = specific heat of air at constant pressure (0.24 cal  $g^{-1} \circ K^{-1}$ )

$$z_{I} = \left[\frac{8 F_{I}}{\gamma_{x} \gamma_{y} \gamma_{z} s}\right]^{1/4}$$
 (6)

According to the above formulas, the quantities  $\mathbf{z}_{\mathrm{I}}$ ,  $\mathbf{t}_{\mathrm{R}}$  and the height over which  $\Delta\Phi/\Delta \mathbf{z}$  is measured are interrelated. The final cloud stabilization height  $\mathbf{z}_{\mathrm{I}}$  in Equation (6) must therefore be found by iteration. The iteration process begins by assuming that  $\mathbf{z}_{\mathrm{I}}$  lies in the first height interval (K=1) above the surface bounded by the rawinsonde observation heights k=1 and k=2 and solving Equation (6) for  $\mathbf{z}_{\mathrm{I}}$  with

$$\frac{\Delta\Phi}{\Delta z} = \frac{\Phi_2 - \Phi_1}{z_2 - z_1}$$

If  $z_{\rm I}$  exceeds  $z_{\rm 2}$ , the iteration continues using the virtual potential temperature from the next highest kth observation level with the vertical gradient  $\Delta\Phi/\Delta z$  estimated from the least squares approximation

$$\frac{\Delta \Phi}{\Delta z} = \frac{\sum_{i=1}^{k} \left\{ \left[ z_{i} - \left( \sum_{i=1}^{k} z_{i}/k \right) \right] \left[ \Phi_{i} - \left( \sum_{i=1}^{k} \Phi_{i}/k \right) \right] \right\}}{\sum_{i=1}^{k} \left[ z_{i} - \left( \sum_{i=1}^{k} z_{i}/k \right) \right]^{2}}$$
(7)

Providing that  $z_I < 3000$  m, the program finds a value of  $z_I$  within an interval  $(z_{i-1} \le z_I \le z_i)$ . At this point the program assumes that the gradient of virtual potential temperature in this height interval is linear and linearly interpolates to determine, within  $\pm 10$  m, the value of  $z_I$ .

The above cloud-rise model was theoretically derived for a thermally stable atmosphere ( $\Delta\Phi/\Delta z>0$ ). A model based on similar considerations is easily derived for an adiabatic atmosphere. The cloud continues to rise over all time when the adiabatic model is used, although the rate tends to approach zero asymptotically at long times. Experience shows that the height at which the rate of rise determined from the adiabatic model becomes negligible for practical purposes can be predicted using a small value of  $\Delta\Phi/\Delta z$  in the stable model. For this reason, the program sets  $\Delta\Phi/\Delta z$  equal to  $3.322 \times 10^{-4}$  when the measured value of  $\Delta\Phi/\Delta z$  is less than  $3.322 \times 10^{-4}$ . The program currently uses a default value of 0.64 for  $\gamma_x$ ,  $\gamma_y$ , and  $\gamma_z$ .

### 3.1.2 Continuous Plume-Rise Model

The time for a continuous plume to reach the height  $\boldsymbol{z}_{R}$  in a stable atmosphere is given by

$$t_{c} = s^{-0.5} \arccos \left[ 1 - \left( \frac{s \ u_{c} \ \gamma_{x} \ \gamma_{y} \ z_{k}}{3 \ F_{c}} \right) \right]$$
 (8)

where  $t_c$  is constrained to be less than  $t^*$  given by Equation (3) and

 $F_c$  = buoyancy flux

$$= \frac{g H W}{\pi \rho c_p T}$$
 (9)

 $\bar{u}_c$  = height-weighted mean wind speed between the surface and the stabilization height  $z_c$ 

$$z_{c} = \left(\frac{6 F_{c}}{u_{c} \gamma_{x} \gamma_{y} s}\right)^{1/3}$$
(10)

As in the case of the instantaneous cloud-rise model, Equation (10) must be solved by iteration because  $\Delta\Phi/\Delta z$ ,  $z_c$  and  $u_c$  are interrelated. Also, the value of  $\Delta\Phi/\Delta z$  is set equal to  $3.322 \times 10^{-4}$  degrees per meter when the value calculated from Equation (7) is less than  $3.322 \times 10^{-4}$  (adiabatic atmosphere). For the continuous plume-rise model, the program default value for  $\gamma_x$  and  $\gamma_y$  is 0.5.

# 3.2 SOURCE-DIMENSIONS, MATERIAL DISTRIBUTION, AND SPATIAL POSITION OF THE STABILIZED GROUND-CLOUD

The dispersion models are derived under the assumption that a vertical finite line source can be used to represent the source of material in each of the K layers defined by the rawinsonde measurement levels and that the alongwind  $(r_x)$ , crosswind,  $(r_y)$  and vertical  $(r_z)$  radii of the cloud at the stabilization time t\* are consistent with the cloud-rise model, e.g.:

$$r_{x} = \gamma_{x} z_{M}$$

$$r_{y} = \gamma_{y} z_{M}$$

$$r_{z} = \gamma_{z} z_{M}$$
(11)

where

$$z_{M} = \begin{cases} z_{I} ; \text{ instantaneous source} \\ z_{c} ; \text{ continuous source} \end{cases}$$

Under these assumptions, the alongwind radius of the cloud in the Kth layer is

$$R_{xK} = \left[r_x \left(1 - \frac{z_o^2}{r_z^2}\right)\right]^{1/2}$$
 (13)

and the crosswind radius is

$$R_{yK} = \left[ r_y \left( 1 - \frac{z_o^2}{r_z^2} \right) \right]^{1/2}$$
 (14)

where

$$z_{O} = \left| \bar{z} - z_{M} \right| \tag{15}$$

$$\overline{z} = (z_{TK} + z_{RK})/2 \tag{16}$$

 $z_{TK}$  = height of the top of the Kth layer

 $z_{BK}$  = height of the base of the Kth layer

### 3.2.1 Source Dimensions

The REEDM model allows the user to select either an elliptical or spherical shape to represent the form of the ground cloud. We strongly recommend that an elliptical shape be selected for normal launches and a spherical shape be selected for abnormal launches. For an elliptical shape, the source dimensions in the plane of the horizon are defined in terms of the standard deviations of the material distribution. For the source in the Kth layer, these dimensions are as follows:

Alongwind;

$$\sigma_{xo}^{\{K\}} = \begin{cases} 0 & ; & 0 < \bar{z} \le (z_{M} - r_{z}) \\ R_{xK}/2.15 & ; & (z_{M} - r_{z}) < \bar{z} \le (z_{M} + r_{z}) \end{cases}$$

$$\sigma_{xm} & ; & (z_{M} + r_{z}) < \bar{z}$$
(17)

Crosswind;

$$\sigma_{yo}\{K\} = \begin{cases} 0 & ; & 0 < \bar{z} \le (z_{M} - r_{z}) \\ R_{yK}/2.15 & ; & (z_{M} - r_{z}) < \bar{z} \le (z_{M} + r_{z}) \end{cases}$$

$$\sigma_{xm} & ; & (z_{M} + r_{z}) < \bar{z}$$
(18)

where  $\sigma_{\rm xm}$  is defaulted to 93 m for normal launches and to 0 m for abnormal launches. The assumptions are made in Equation (17) and (18) that the distribution of material in the plane of the horizon is bivariate Gaussian and that the concentration of exhaust products at one radius from the centroid is 10 percent of the concentration at the centroid.

For a spherical shape the corresponding dimensions in the horizontal plane are:

$$\sigma_{xo}^{\{K\}} = \begin{cases} 50/2.15 & ; & 0 < \bar{z} \le (z_M - r_z) \\ R_{yK}/2.15 & ; & (z_M - r_z) < \bar{z} \le (z_M + r_z) \\ \sigma_{xm} & ; & (z_M + r_z) < \bar{z} \end{cases}$$
(19)

$$\sigma_{yo}^{\{K\}} = \begin{cases} 50/2.15 & ; & 0 < \bar{z} \le (z_{M} - r_{z}) \\ R_{yK}/2.15 & ; & (z_{M} - r_{z}) < \bar{z} \le (z_{M} + r_{z}) \end{cases}$$

$$\sigma_{xm} \qquad ; \quad (z_{M} + r_{z}) < \bar{z}$$
(20)

# 3.2.2 Material Distribution

For normal launches, the distribution of material within the ellipsoid with axes given by Equation (11) is assumed to be uniform in the vertical. Under this assumption, the amount of material  $F\{K\}$  in the Kth layer is given by

$$F\{K=k-1\} = \begin{cases} W(FM) \ t_k/V_k \ ; \ z_{TK} < z_M \\ W(FM) \left(\frac{t_R}{V_K} + \Delta t_k\right) \ ; \ z_M < z_{TK} \le z_M \ (1 + \gamma_z) \end{cases}$$

$$W(FM) \ \Delta t_k \ ; \ z_M(1 + \gamma_z) < z_{TK}$$
(21)

where

FM = fraction by weight of the exhaust cloud constituent from Table 2

$$\Delta t_{k} = a \left( z_{TK}^{b} - z_{BK}^{b} \right) \tag{22}$$

 $V_k$  = cloud volume in the Kth layer

$$= \pi r_{x} r_{y} \left\{ (z_{TK} - z_{BK}) - \left[ \frac{(z_{TK} - z_{M})^{3} - (z_{BK} - z_{M})^{3}}{3 r_{z}^{2}} \right] \right\}$$
(23)

For launch failures, the program assumes that the material has a Gaussian distribution in the vertical about the stabilization height  $\mathbf{z}_{\mathsf{M}}$ . Thus,

$$F\{K=k-1\} = W(FM) t_B \left[P\{z_{TK}\} - P\{z_{BK}\}\right]$$
 (24)

where

 $t_R$  = burn time from Table 1

$$P\{z\} = \frac{2.15}{\sqrt{2\pi}r_z} \int_{-\infty}^{z} \exp\left[-\frac{1}{2}\left(\frac{2.15(z-z_M)}{r_z}\right)^2\right] dz$$
 (25)

## 3.2.3 Spatial Position of the Stabilized Cloud

The spatial position in the plane of the horizon of the cloud in the Kth layer at the stabilization time t\*, with respect to the origin at the launch pad, is assumed to be given by the following polar coordinates:

$$R_{CK} = \left\{ \left[ x_{K} + \overline{u}_{K}(t^{*}-t_{p}) \sin \overline{\theta}_{K} \right]^{2} + \left[ y_{K} + \overline{u}_{K}(t^{*}-t_{p}) \cos \overline{\theta}_{K} \right]^{2} \right\}^{1/2}$$
(26)

$$\theta_{CK} = \pi/2 - \tan^{-1} \left[ \frac{y_K + \overline{u}_K(t^* - t_p) \sin \overline{\theta}_K)}{x_K + \overline{u}_K(t^* - t_p) \cos \overline{\theta}_K)} \right]$$
(27)

where

$$x_{K} = x_{K-1} - \xi_{K} \sin (\phi_{sK})$$
 (28)

$$y_{K} = y_{K-1} - \xi_{K} \cos (\phi_{sK})$$
 (29)

$$\bar{u}_{K} = \text{mean wind speed in the Kth layer} \left( (u_{k+1} + u_{k})/2 \right)$$

$$t_{p} = \begin{cases} t_{I} \{z = z_{TK}\} ; & \text{instantaneous cloud-rise model} \\ t_{c} \{z = z_{TK}\} ; & \text{continuous cloud rise model} \end{cases}$$

$$\bar{\theta}_{K} = \text{mean wind direction in the Kth layer}$$
(30)

For layers below the Kth layer containing  $\boldsymbol{z}_{_{\boldsymbol{M}}}$ ,

$$\xi_{K} = t_{p} \overline{u}_{K} \tag{31}$$

$$\phi_{sK} = \overline{\theta}_{K} \tag{32}$$

For an instantaneous source, the value of  $\boldsymbol{\xi}_K$  in the Kth layer containing  $\boldsymbol{z}_M$  is

$$\xi_{K} = \left[ \overline{u}_{K} \left( \frac{z_{M} - z_{BK}}{z_{TK} - z_{BK}} \right) + u_{k} \right] \left[ t_{R} - t_{I,k} \right]$$
(33)

Similarly, for a continuous source,

$$\xi_{K} = \begin{cases}
\frac{t_{R} - t_{c,k}}{z_{M}} \begin{cases}
\left[ \bar{u}_{K} \left( \frac{z_{M} - z_{TK}}{z_{TK} - z_{BK}} \right) + u_{k} \right] \left[ z_{M} - z_{BK} \right] \\
+ \sum_{i=1}^{k} \left[ z_{i+1} - z_{i} \right] \left[ \frac{u_{i+1} + u_{i}}{2} \right] \end{cases}$$
(34)

The value of  $\boldsymbol{\phi}_{sK}$  is

$$\phi_{sK} = \frac{1}{2} \left[ \left( \frac{\theta_{k+1} - \theta_k}{z_{TK} + z_{BK}} \right) \left( z_M - z_{BK} \right) + 2 \theta_k \right]$$
 (35)

for both the instantaneous and continuous sources.

For all K layers above  $z_M (z_{BK} > z_M)$ ,

$$R_{CK} = t_R \bar{u}_K$$
 (36)

$$\theta_{\rm CK} = \pi + \overline{\theta}_{\rm K} \tag{37}$$

#### 3.3 TURBULENCE PROFILE ALGORITHM

The REEDM dispersion model code uses profiles of the standard deviations of the azimuth wind angle  $\sigma_A'$  and elevation angle  $\sigma_E'$  as prime predictors of cloud growth. The program calculates default turbulence profiles, which can be adjusted by the program operator. The algorithm used to calculate the turbulence profiles begins by calculating a reference standard deviation of the wind azimuth angle  $\sigma_{AR}^*\{\tau_0=600s\}$ , assumed representative of a measurement made over a ten-minute period at the lowest height available from the rawinsonde data input (4.9 m at KSC).

# 3.2.1 Calculation of the Default Value for $\sigma_{AR}^{1}$ { $\tau_{o}$ =600s}

The calculation method (Ref. 12), based on the application of similarity relationships outlined in Ref. 15, assumes that

$$\sigma_{AR}^{\prime} \{ \tau_{o} = 600s \} = \frac{\sigma_{V}^{(600s)}}{\bar{u}} \simeq \frac{k_{A} f\{B\}}{\ln(\bar{z}_{o}) - \psi\{Ri\}}; Ri \neq 0$$
 (38)

where

 $\boldsymbol{\sigma}_{\boldsymbol{V}}$  = standard deviation of the crosswind component of the wind

 $\bar{u}$  = mean wind speed at the measurement height of  $\sigma_V$ 

 $\tau_o$  = reference time for the measurement of  $\sigma_{AR}^{\dagger}$  and  $\sigma_{V}$ 

 $f{B}$  = function of the bulk Richardson number B

 $\bar{z}$  = geometric mean height of the layer of interest

 $z_0$  = roughness length (0.20 m used for KSC)

 $\psi$ {Ri} = function of the Richardson number Ri

In the program, values of f(B) and  $\psi$ (Ri) are obtained from the expressions

$$f\{B\} = \begin{cases} 2.7 & B < -0.008 \\ 2.7 + 112(.008 + B) & ; -0.008 \le B < -.00175 \\ 3.4 - 725.5(.00175 + B) & ; -.00175 \le B < .008 \\ 1.55 + 38.04(B + .0008) & ; .0008 \le B < .029 \\ 2.35 + 5.43(B - .029) & ; .029 \le B \end{cases}$$
(39)

and

$$\psi\{\text{Ri}\} = \begin{cases} 2 \ln \left[ (1+\xi)/2 \right] + \ln \left[ (1+\xi)^2/2 \right] + 2 \tan^{-1}\xi + \pi/2 ; & \text{Ri} < 0 \\ 7 \text{Ri}/(1-7 \text{Ri})^{1/4} \end{cases}$$
 ; Ri > 0

where

$$\xi = (1-16Ri)^{1/4} \tag{41}$$

$$B = \frac{g \overline{z}^2}{T n^2} \frac{\Delta \Phi}{\Delta \overline{z}}$$
 (42)

 $\frac{\Delta \Phi}{z}$  = vertical gradient of potential temperature over the height z

$$Ri = \left[ -\frac{1}{14 k_{A} \sqrt{B}} + \frac{1}{2} \sqrt{\frac{1}{49 k_{A}^{2} B} + \frac{4(k_{A}^{+1})}{7 k_{A}}} \right]^{2}; \quad Ri > 0$$
 (43)

For Ri < 0, the following equation is solved by Newton's method to obtain Ri

$$0 = \frac{1 - \xi^4}{16\xi^2 \left[ \ln(z/z_0) + 0.50864 - 2[\ln(1+\xi)] - \ln(1+\xi^2) + 2\tan^{-1}\xi \right]^{-B}}$$
 (44)

Finally, for Ri=0,  $\sigma_{AR}^{\tau_0=600s}$  is calculated from the relationship

$$\sigma_{AR} \{ \tau_o = 600s \} = \frac{48.816}{\ln(\frac{z}{z_o})}$$
; Ri = 0 (45)

The program does not permit  $\sigma_{AR}^{1}\{\tau_{o}\text{=}600s\}$  to be greater than 0.524 radians (30 degrees).

# 3.3.2 Vertical Profiles of $\sigma_A^{\dagger}$ and $\sigma_E^{\dagger}$

The dispersion models in the REEDM code use mean values of  $\sigma_A^{\dagger}$  and  $\sigma_E^{\dagger}$  in the two major layers (L=1,2). In the case where the operator enters values of  $\sigma_A^{\dagger}$  and  $\sigma_E^{\dagger}$  at each rawinsonde level, the program computes the height-weighted mean values from the expression

$$\bar{\sigma}_{L}' = \frac{\sum_{k=z_{BL}}^{z_{BK}} (z_{k+1} - z_{k}) \left[ (\sigma'\{k+1\} + \sigma'\{k\})/2 \right]}{z_{TL} - z_{BL}}$$
(46)

where

 $\sigma_L^{\prime}$  = mean value of the standard deviation ( $\sigma_A^{\prime}$  or  $\sigma_E^{\prime}$ ) in the Lth layer

 $z_{TI}$  = top of the Lth layer

 $z_{RL}$  = base of the Lth layer

When values of  $\sigma_A^{\prime}$  and  $\sigma_E^{\prime}$  are not entered at each k level, the program calculates the mean value of  $\sigma_A^{\prime}$  under the assumption that  $\sigma_A^{\prime}$  decreases with height in the surface mixing layer according to a power-law relationship (Refs. 16-18) given by

$$\sigma_{\mathbf{A}}^{\dagger}\{z\} \approx \sigma_{\mathbf{A}}^{\dagger}\{z=5m\}\left(\frac{z}{5}\right)^{m}$$
 (47)

where m takes on negative values.

The mean value of  $\bar{\sigma}_A^{\,\prime}$  is defined as

$$\frac{\sigma_{A}^{!}\{z=5\}}{(z_{TL}-5) 5^{m}} \int_{5}^{z_{TL}} z^{m} dz = \frac{\sigma_{A}^{!}\{z=5\}}{(z_{TL}-5) 5^{m} (1+m)}$$
(48)

It can be shown that, for reasonable values of m, Equation (48) is closely approximated by the simple expression

$$\overline{\sigma_{A}^{\dagger}}\{L=1; \tau_{o}=600s\} = \frac{\sigma_{AR}^{\dagger}\{\tau_{o}=600s\}}{2}$$
 (49)

and the value at  $z=z_{TI}$  by

$$\sigma_{A}^{\dagger} \{z_{TL}=1; \tau_{o}=600s\} = \frac{\sigma_{AR}^{\dagger} \{\tau_{o}=600s\}}{2}$$
 (50)

The assumption (Refs. 19 and 20) is also made that the value of  $\sigma_A^{\prime}$  can be adjusted for the time required to form the source, in this case considered to be the cloud stabilization time t\*, by means of the expressions

$$\sigma_{A}^{\prime}\{L=1; \tau=t^{*}\} = \sigma_{A}^{\prime}\{L=1; \tau_{o}=600s\} \left(\frac{t^{*}}{600}\right)^{0.2}$$
 (51)

and

$$\sigma_{A}^{\prime} \{z_{TL}=1; \tau=t^{*}\} = \sigma_{A}^{\prime} \{z_{TL}=1; \tau_{o}=600s\} \left(\frac{t^{*}}{600}\right)^{0.2}$$
 (52)

Also, because the surface layer is capped by an elevated inversion where turbulence levels are expected to be minimal, the program reduces the value of  $\sigma_A^\prime$  at the top of the second layer to about  $10^{-2}$  as indicated by

$$\sigma_{A}^{\prime} \{z_{TL}=2, \tau=t^{*}\} = .01745 \left(\frac{t^{*}}{600}\right)^{0.2}$$
 (53)

If the program user has assigned the base of second layer coincident with the top of the lower layer, the mean effective value of  $\sigma_A^{\prime}$  in the upper layer is defined by the program as

$$\sigma_{A}^{\prime}\{L=2;\tau=t^{*}\} = \frac{\sigma_{A}^{\prime}\{z_{TL}=2;\tau=t^{*}\} + \sigma_{A}^{\prime}\{z_{TL}=1;\tau=t^{*}\}}{2}$$
(54)

When the user chooses to assign the base of the upper layer at some kth height above the top of the lower layer, the program assumes that  $\sigma_A^{\dagger}$  has decreased to 1 deg in the Kth level just above the top of the lower layer. Thus, the effective value of  $\sigma_A^{\dagger}$  in the upper layer (L=2) is

$$\sigma_{A}^{!}\{L=2; \tau=t^{*}\} = .01745 \left(\frac{t^{*}}{600}\right)$$
 (55)

For the gravitational settling model described in Section 4.2 below where material is assumed to fall through all layers, the program uses height-weighted values of  $\sigma_A^{\prime}$  between the surface and the source in the Kth layer as given by

$$\sigma'_{AK} = \frac{\sum_{i=1}^{K} \sigma'_{Ai} (z_{i+1} - z_{i})}{\sum_{i=1}^{K} (z_{i+1} - z_{i})}$$
(56)

where  $\sigma_{Ai}^{\prime}$  in the surface mixing layer ( $z_i^{\prime} < z_{TL}^{\prime}$ ) is given by Equation (51). In the next upper layer,  $\sigma_{A}^{\prime}$  is obtained by linear interpolation, using the values from Equation (52) and Equation (53), over the layer depth and by using Equation (53) at all greater heights.

Finally, the program assumes that turbulence over the layer depths of interest is approximately isotropic and thus that the mean effective value of  $\sigma_E^{\text{!`}}$  is equal to the mean effective value of  $\sigma_A^{\text{!`}}.$ 

# SECTION 4 REEDM DISPERSION MODELS

The dispersion models used in the REEDM code are based on Gaussian model concepts which experience has shown to be best suited for most practical applications. A detailed discussion of Gaussian modeling concepts and alternative approaches is found in Refs. 21 and 22. As pointed out in this discussion, (Ref. 22), the Gaussian approach, when properly used, "is peerless as a practical diffusion modeling tool. It is mathematically simple and flexible, it is in accord with much though not all of working diffusion theory, and it provides a reliable framework for the correlation of field diffusion trials as well as the results of both mathematical and physical diffusion modeling studies." In the REEDM dispersion model code, the exhaust material is assumed to be uniformly distributed in the vertical and to have a bivariate Gaussian distribution in the plane of the horizon at the point of cloud stabilization. It follows from these assumptions that the models are of the general form identified with Gaussian models for vertical line sources of finite extent.

## 4.1 DOSAGE AND CONCENTRATION MODELS

For convenience, the dosage and concentration formulas are written in a rectangular coordinate system with the origin at the ground beneath the cloud stabilization point in the Kth layer. The x axis is directed along the axis of the mean wind direction in the Lth layer and the y axis is directed crosswind or perpendicular to the mean wind direction. In the programs, the origin of the coordinate system is placed at the launch pad.

The dosage or time-integrated concentration at any point (x,y,z) in the Lth layer due to the source in the Kth layer is given by the expression

$$D_{L,K} = \frac{F\{K\}}{2\sqrt{2\pi} \sigma_{yL}(z_{TK} - z_{BK})} \left\{ exp \left[ -\frac{1}{2} \left( \frac{y}{\sigma_{yL}} \right)^2 \right] \right\}$$

$$\left\{ \sum_{j=1}^{N} f_{j} \left\{ \sum_{i=0}^{\infty} \left[ \gamma_{j}^{i} \left[ erf \left( \frac{2i(z_{TL} - z_{BL}) - z_{BK} + z + V_{j} \times / u_{L}^{-}}{\sqrt{2} \sigma_{zL}} \right) \right] \right\} \right\} \right\} \right\}$$

+ erf 
$$\left(\frac{-2i(z_{TL} - z_{BL}) + z_{TK} - z - v_{j} \times \bar{u}_{L}}{\sqrt{2} \sigma_{zL}}\right)$$

$$+ \gamma_{j}^{i+1} \left[ erf \left( \frac{2i(z_{TL} - z_{BL}) - 2z_{BL} + z_{TK} + z - V_{j} x/\bar{u}_{L}}{\sqrt{2} \sigma_{zL}} \right) \right]$$
 (57)

+ erf 
$$\left(\frac{-2i(z_{TL}-z_{BL})+2z_{BL}-z_{BK}-z+v_{j}x/\overline{u}_{L}}{\sqrt{2}\sigma_{zL}}\right)$$

$$+ \sum_{i=1}^{\infty} \left[ \gamma_{j}^{i} \left[ erf \left( \frac{2i(z_{TL} - z_{BL}) + z_{TK} - z - V_{j} x/\overline{u}_{L}}{\sqrt{2} \sigma_{zL}} \right) \right] \right]$$

+ erf 
$$\left(\frac{-2i(z_{TL} - z_{BL}) - z_{BK} + z + v_{j} x/\overline{u}_{L}}{\sqrt{2} \sigma_{zL}}\right)$$

$$+ \gamma_{j}^{i+1} \left[ erf \left( \frac{2i(z_{TL} - z_{BL}) + 2z_{BL} - z_{BK} - z + V_{j} \times / \overline{u}_{L}}{\sqrt{2} \sigma_{zL}} \right) + erf \left( \frac{-2i(z_{TL} - z_{BL}) - 2z_{BL} + z_{TK} + z - V_{j} \times / u_{L}}{\sqrt{2} \sigma_{zL}} \right) \right] \right\}$$

$$+ erf \left( \frac{-2i(z_{TL} - z_{BL}) - 2z_{BL} + z_{TK} + z - V_{j} \times / u_{L}}{\sqrt{2} \sigma_{zL}} \right) \right] \right\}$$

where, for convenience, 0° is set equal to unity and

 $f_{j}$  = fraction of material with velocity  $V_{j}$ 

γ<sub>j</sub> = partial reflection coefficient (1 for complete reflection and 0 for no reflection) for the jth size category

 $V_{i}$  = gravitational settling velocity for the jth size category

N = total number of size categories describing the size distribution of interest ( $N \le 10$  in the REEDM code)

 $\sigma_{\rm zL}$  = standard deviation of the vertical distribution of material in the Lth layer due to the source in the Kth layer

$$= \sigma_{EL}^{\dagger} x_{rz} \left( \frac{x}{x_{rz}} \right)^{\beta}$$
 (58)

x = distance downwind from a vertical point source over which
 the vertical cloud expansion is linear (default value equals
 100 m in the REEDM code).

β = coefficient of vertical cloud expansion (default value equals 1.0 in the REEDM code).

 $\sigma_{EL}^{\prime}$  = effective value of  $\sigma_{E}^{\prime}$  in the Lth layer (see Section 3.3)

 $\sigma_{\rm yL}$  = standard deviation of the crosswind distribution of material in the Lth layer due to the source in the Kth layer

$$= \left\{ \left[ \sigma_{AL}^{\prime} \times_{ry} \left( \frac{x + x_{v} - x_{ry}(1 - \alpha)}{\alpha \times_{ry}} \right)^{\alpha} \right]^{2} + \left[ \frac{\Delta \theta_{L}^{\prime} x}{4.3} \right]^{2} \right\}^{1/2}$$
(59)

ry = distance downwind from a virtual point source over which the crosswind cloud expansion is linear (default equals 100 m in the REEDM code)

 $x_{v}$  = virtual distance

$$= x_{ry} \left( \frac{\sigma_{yo}^{\{K\}}}{\sigma_{AL}^{\{i, x_{ry}\}}} \right)^{1/\alpha} + x_{ry} (1-\alpha)$$
 (60)

 $\alpha$  = coefficient of crosswind cloud expansion (default equals 1 in the REEDM code)

 $\sigma_{AL}^{\prime}$  = effective value of  $\sigma_{A}^{\prime}$  in the Lth layer (see Section 3.3)

$$\Delta\theta_{L}^{'} = \begin{cases} (\theta_{TL} - \theta_{BL}) & (\pi/180) & ; & V_{j}=0 \\ \phi_{j,k}^{'} & & ; & V_{j}\neq 0 \end{cases}$$

 $\Phi'_{j,k}$  = effective wind-sheer angle in radians for particles (drops) in the jth size category (see Equation 75) below

$$\bar{\mathbf{u}}_{L} = \left\{ \frac{1}{z_{TL} - z_{BL}} \sum_{k=z_{BL}}^{z_{TL}} (z_{k+1} - z_{k}) \quad \bar{\mathbf{u}}_{k} \quad ; \quad \mathbf{v}_{j} = 0 \\ \bar{\mathbf{u}}_{j,k} \quad ; \quad \mathbf{v}_{j} \neq 0 \right\}$$
(62)

 $\bar{u}_{j,k}$  = effective mean wind-speed for particles (drops) in the jth size category (see Equation (69) below)

The total contribution to a receptor position is calculated by summing the contributions from all sources, i.e.  $D_L = \sum_k D_{L,K}$ .

The peak concentration, or highest concentration which occurs as the exhaust cloud passes the point (x,y,z), is given by the expression

$$\chi_{P,K} = D_{L} \left( \frac{\bar{u}_{L}}{\sqrt{2\pi} \sigma_{xL}} \right)$$
 (63)

where

 $\sigma_{\rm xL}$  = standard deviation of the alongwind distribution of material in the Lth layer due to the source in the Kth layer

$$= \left[ \left( \frac{L\{x\}}{4.3} \right)^2 + \sigma_{xo}^2 \{K\} \right]^{1/2}$$
(64)

 $L\{x\}$  = alongwind cloud length at the distance x

$$L\{x\} = \begin{cases} \frac{0.28 \ \Delta \overline{u}_L \ x}{\overline{u}_L} ; \Delta \overline{u}_L \ge 0 \\ \frac{0.28 \ |\Delta \overline{u}_L| x}{\overline{u}_L} ; \Delta \overline{\Delta} < 0, \Delta \overline{u}_L < 0 \\ 0 ; \Delta \overline{\Delta} \ge 0, \Delta \overline{u}_L < 0 \end{cases}$$

$$(65)$$

$$\Delta \bar{u}_{L} = \frac{\sum_{k=1}^{z_{TL}} (z_{k+1} - z_{k}) (\bar{u}_{k+1} - \bar{u}_{k})}{z_{TL} - z_{BL}}$$
(66)

The peak time-mean concentration, or highest time-mean concentration to occur as the exhaust cloud passes the point (x,y,z), is

$$\chi_{P,K}\{T_{A}\} = \frac{D_{L}}{T_{A}} \left\{ erf\left(\frac{\overline{u}_{L} T_{A}}{2\sqrt{2} \sigma_{xL}}\right) \right\}$$
(67)

where

 $T_{\Lambda}$  = time in seconds over which the concentration is averaged

## 4.2 GRAVITATIONAL DEPOSITION MODEL

The weight of material per unit area deposited on the ground as a result of the gravitational settling of particles (drops) with velocity  $\mathbf{v}_{\mathbf{j}}$  from the source in the Kth layer is given by the expression

$$DEP_{K} = \frac{F\{K\}}{\sqrt{2\pi} \sigma_{yL} (z_{TK} - z_{BK})} \left\{ exp \left[ -\frac{1}{2} \left( \frac{y}{\sigma_{yL}} \right)^{2} \right] \right\}$$

$$\left\{ \sum_{j=1}^{N} f_{j} \left(1-\gamma_{j}\right) \left\{ \frac{V_{j}}{2\bar{u}_{j,k}} \left[ \operatorname{erf}\left(\frac{z_{TK}-V_{j}x/\bar{u}_{j,k}}{\sqrt{2} \sigma_{EK}' x}\right) - \operatorname{erf}\left(\frac{z_{BK}-V_{j}x/\bar{u}_{j,k}}{\sqrt{2} \sigma_{EK}' x}\right) \right] \right\}$$
(68)

$$-\frac{\sigma_{EK}^{!}}{\sqrt{2\pi}}\left[\exp\left(-\frac{1}{2}\left(\frac{z_{TK}^{-V}j^{x/\overline{u}}j_{,k}}{\sigma_{EK}^{!}x}\right)^{2}\right)-\exp\left(-\frac{1}{2}\left(\frac{z_{BK}^{-V}j^{x/\overline{u}}j_{,k}}{\sigma_{EK}^{!}x}\right)^{2}\right)\right]$$

(Continued)

$$+\sum_{\mathbf{i=1}}^{\infty} \gamma_{\mathbf{j}}^{\mathbf{i-1}} \left\{ \frac{v_{\mathbf{j}}}{2\bar{\mathbf{u}}_{\mathbf{j},\mathbf{k}}} \left[ \operatorname{erf} \left( \frac{2iz_{\mathrm{TL}} - z_{\mathrm{TK}} + V_{\mathbf{j}} \times / \bar{\mathbf{u}}_{\mathbf{j},\mathbf{k}}}{\sqrt{2} \sigma_{\mathrm{EK}}^{\mathbf{i}} \times} \right) - \operatorname{erf} \left( \frac{2iz_{\mathrm{TL}} - z_{\mathrm{BK}} + V_{\mathbf{j}} \times / \bar{\mathbf{u}}_{\mathbf{j},\mathbf{k}}}{\sqrt{2} \sigma_{\mathrm{EK}}^{\mathbf{i}} \times} \right) \right]$$

$$+\frac{\sigma_{EK}^{\prime}}{\sqrt{2\pi}}\left[\exp\left(-\frac{1}{2}\left(\frac{2iz_{TL}-z_{TK}+V_{j}x/\bar{u}_{j,k}}{\sigma_{EK}^{\prime}x}\right)\right)-\exp\left(-\frac{1}{2}\left(\frac{2iz_{TL}-z_{BK}+V_{j}x/\bar{u}_{j,k}}{\sigma_{EK}^{\prime}x}\right)\right)\right]$$

(68) (Continued)

$$+ \gamma_{j} \left[ \frac{v_{j}}{2\bar{u}_{j,k}} \left[ \operatorname{erf} \left( \frac{2iz_{TL} + z_{TK} - v_{j}x/\bar{u}_{j,k}}{\sqrt{2} \sigma_{EK}^{i} x} \right) - \operatorname{erf} \left( \frac{2iz_{TL} + z_{BK} - v_{j}x/\bar{u}_{j,k}}{\sqrt{2} \sigma_{EK}^{i} x} \right) \right]$$

$$\frac{\sigma_{EK}^{\prime}}{\sqrt{2\pi}} \left[ \exp\left(-\frac{1}{2} \left(\frac{2iz_{TL} + z_{TK} - V_{j} \times / \bar{u}_{j,k}}{\sigma_{EK}^{\prime} \times}\right)^{2}\right) - \exp\left(-\frac{1}{2} \left(\frac{2iz_{TL} + z_{BK} - V_{j} \times / \bar{u}_{j,k}}{\sigma_{EK}^{\prime} \times}\right)^{2}\right) \right] \right] \right\}$$

where

$$\bar{\mathbf{u}}_{j,k} = \frac{\left(\mathbf{x}_{j,k}^2 + \mathbf{y}_{j,k}^2\right)^{1/2}}{z_{TK}} \mathbf{v}_{j}$$
(69)

$$X_{j,k} = \frac{-u_k}{V_j b_k} \left\{ \sin \left[ b_k \left( \frac{\Delta z_k}{2} + z_k \right) - \sin \left( b_k z_k \right) \right] \right\}$$

(70)

$$+\sum_{\mathbf{i}=1}^{\mathbf{k}-1} \left\{ \frac{\mathbf{u_i}}{\mathbf{v_j^b_i}} \left[ \sin \left( \mathbf{b_i z_{i+1}} \right) - \sin \left( \mathbf{b_i z_i} \right) \right] \right\}$$

$$Y_{j,k} = \frac{u_k}{V_j b_k} \left\{ \cos \left[ \left( b_k - \frac{\Delta z_k}{2} + z_k \right) \right] - \cos \left( b_k z_k \right) \right\}$$

$$+ \sum_{i=1}^{k-1} \left\{ \frac{u_i}{V_j b_i} - \left[ \cos \left( b_i z_{i+1} \right) - \cos \left( b_i z_i \right) \right] \right\}$$
(71)

$$b_{k} = \Delta \theta_{k}^{\dagger} / \Delta z_{k} \tag{72}$$

$$\Delta\theta_{k}^{'} = \begin{cases} (\pi/180) & (\theta_{TK} - \theta_{BK}) & ; & \Delta\theta_{k}^{'} \neq 0 \\ \\ 2 \times 10^{-3} & ; & \Delta\theta_{k}^{'} = 0 \end{cases}$$
 (73)

$$\Delta z_{k} = z_{TK} - z_{BK} \tag{74}$$

The effective wind-shear angle (change in direction of particle trajectory) for a particle in the jth size category falling to the surface from the Kth layer is

$$\Phi_{j,k}' = \tan^{-1}\left(\frac{Y_{j,k}}{X_{j,k}}\right)$$
 (75)

In Equation (68), x is directed along an axis parallel with the direction  $((\pi+\theta_k')+\Phi_j',k)$  and y is crosswind to this direction. It should be noted that the deposition model given by Equation (68) assumes complete reflection of all material at the top of the L layers and partial reflection  $\gamma_j$  at the ground.

## 4.3 PRECIPITATION SCAVENGING MODEL

The weight of material from the Kth layer deposited on the ground as a result of washout by rain is given by

$$WK_{K} = \left\{ \frac{\Lambda F\{K\}}{\sqrt{2\pi} \sigma_{yL} \bar{u}_{L}} \exp \left[ -\frac{1}{2} \left( \frac{y}{\sigma_{yL}} \right)^{2} \right] \right\} \left\{ \exp \left[ -\Lambda \left( \frac{x}{u_{L}} - t_{i} \right) \right] \right\}$$
(76)

where

 $\Lambda$  = fraction of material removed per unit time

t, = time precipitation begins

The principal assumptions made in deriving Equation (76) are:

- (1) The rate of precipitation is steady over an area that is large compared to the horizontal dimension of the cloud of material
- (2) The precipitation originates at a level above the top of the cloud so that hydrometeors pass vertically through the entire cloud
- (3) The time duration of the precipitation is sufficiently long so that the entire alongwind length of the cloud passes over the point (x,y)

The program uses the following expression (Ref. 23) to obtain a value of  $\Lambda$  for HC $\ell$  scavenging

$$\Lambda = 5.2 \times 10^{-4} \, \text{R}^{0.567} \, \text{sec}^{-1} \tag{77}$$

where

R = rainfall rate (in/hr)

The REEDM code also provides estimates of the maximum pH of ground-water collections of  $HC\$ at (x,y) under the assumptions that the rain begins just as the cloud reaches the receptor location, the rain ends just as the cloud passes the receptor, and that the collection surface is impervious. Thus,

$$pH\{HCl\} = -log_{10} \left[ WD_{K} / (25.4 R M D) \right]$$
 (78)

where

D = rain duration (h)

M = molecular weight of  $HC\ell$  (36.465 g mole<sup>-1</sup>)

# SECTION 5 REEDM COMPUTER PROGRAM OPERATION

This section provides the complete execution and data-preparation instructions for the REEDM computer program. The REEDM computer program is designed for use on a HEWLETT PACKARD HP1000 computer under the RTE IVB operating system. The REEDM program consists of a main program element REEDM and the following 12 segmented programs, all scheduled by the main program: REDAM, RDATM, RCLDM, RDHMM, RCONM, RCNOM, RPDPM, RGDPM, RGPDM, READM, RCIMM and RMMRM. The REEDM operating instructions in Section 5.1 assume the user has assembled and loaded the REEDM programs and has prepared a meteorological upper-air (rawinsonde) data file. If these tasks have not been completed, the user should refer to Sections 5.3 and 5.4 before proceeding.

## 5.1 GENERAL REEDM OPERATING INSTRUCTIONS

The REEDM computer program can be executed in a completely interactive environment, in a completely batch environment or in a combination of the two. The REEDM computer program is executed by typing

RU, REEDM, LU1, LU2, LU3, LU4, LU5

where

LUI - Logical input number from which the REEDM program is to read the input data and control information. The number specified determines whether the program will execute in an interactive or batch environment. If the number entered (or default) is the logical unit number of an interactive device (CRT,TTY, etc.), the program assumes an interactive environment and solicits all input data and commands via displays to the

- LUI device specified by LUI. The default is obtained by typing (Continued) a comma indicating an empty field. The default logical unit will then be the unit from which the RU, REEDM was entered. If the number entered for LUI is the logical unit number of a non-interactive device (magnetic tape, card reader, paper tape, etc.) or a number equated with a disc file, the program assumes a batch environment. The program will be completely batch or will require some interactive user input, depending on the input data. All program interactive messages and displays are written to the unit from which the batch run was initiated, except when running under JOB. When running under JOB all program interactive messages and displays are written to the system log device. See Section 5.1.3 for special input values for LUI used for generating meteorological and maximum centerline plot forms.
  - LU2 Logical unit number for print output. The default printer unit (6) is obtained by typing a comma indicating an empty field.
  - LU3 Logical unit number for meteorological profile plot output.

    The default unit (12) is obtained by typing a comma indicating an empty field.
  - LU4 Logical unit number for maximum centerline (concentration, dosage, deposition) profile plot output. The default unit (20 at KSC, 12 at MSFC) is obtained by typing a comma indicating an empty field.
  - LU5 Logical unit number for isopleth (concentration, dosage, deposition) plot output. The default unit (21 at KSC, 12 at MSFC) is obtained by typing a comma indicating an empty field.

If all LU numbers are to be defaulted, type only RU, REEDM omitting any trailing commas. Section 5.1.1 below specifies the operating instructions for an interactive environment, Section 5.1.2 for a batch environment and Section 5.1.3 for plot forms generation.

## 5.1.1 <u>Interactive Processing</u>

The REEDM computer program is executed in an interactive environment only when the logical unit number specified by LUI is an interactive device (CRT,TTY,etc.). After the user types the RU,REEDM command, the REEDM program begins execution by displaying the following message:

```
****
        NASA/MSFC MULTIPLE LAYER TECHNIQUE - REEDM
                                            *****
****
             UPDATE ####
                        LOCATION KSC
                                            *****
***** ENTER '-1' TO CHANGE PREVIOUS INPUT VALUE.
        ENTER '-9' TO START AT BEGINNING OF PROGRAM.
*****
        ENTER '-9' AT BEGINNING TO ABORT PROGRAM.
                                           *****
****
        THE FIRST INPUT OPTION SHOWN IS THE DEFAULT.
**************************************
```

where the value of #### is the update level of the copy of REEDM the user is executing. All segments of the REEDM program must have the same update reference number. The above display also reminds the user of certain conventions that will apply to most input requests throughout the operation of the program. Specifically, the following conventions apply to interactive processing:

The first option shown is the default option unless stated otherwise in the explanation of the option. The default option is obtained by typing the SPACE key followed by the RETURN key. In the following text, the SPACE key will be denoted by  $\nabla$  and the RETURN key by  $C_R$ . Also, on those input devices with enhanced character features, the default will be highlighted by inverse video.

- Most options can be entered by typing the first character of the option name followed by  $C_R$ . However, for those options that have the same first characters, you must enter sufficient characters to make the entry unique or type the entire name of the option. On those input devices with enhanced character features, the characters that are entered to select an option are underlined.
- For most input options, the entry of a -9 followed by  ${\rm C}_{\rm R}$  will cause the REEDM program to restart. If the user is in a section of the program that will not respond to a -9, the user must continue to enter valid data until a display is reached that will respond to -9.
- For most input options, the entry of a -1 followed by C<sub>R</sub> will cause the program to go back to the previous input option display. If the user is in a section of the program that will not respond to a -1, the user must either continue to enter valid data or enter a -9 or abort the REEDM program.
- For input options where multiple values are required, the values are positional and each must be separated by a comma. Two consecutive commas indicate an empty field with the respective variable remaining its previous (default) value. Do not type C<sub>R</sub> until the entire string of values has been entered.
- The program will echo back all values and options entered, except YES or NO options.

The remainder of this section will show the REEDM prompt as a display asking for either data or for a response that will direct the program along optional paths. Each display is typed in boldface type with

a leading display number (record number). The display number is used for order and cross-referencing against batch data record numbers and is accompanied by a code in parenthesis (ORP;CWG). The letters O, R and/or P that appear prior to the semi-colon indicate if the display will occur under the Operational, Research or Production modes of operation. The letters C, W and/or G indicate if the display will occur for Concentration (dosage), Washout deposition or Gravitational deposition calculations. If the particular letter does not occur in parenthesis, the display does not occur for that mode of operation and/or that calculation. The program will prompt with only those displays that are required for the mode of operation and calculation quantity you select. The REEDM interactive display prompts are explained below in the order they appear to the user.

## 1. - (ORP; CWG)

## ENTER RUN TYPE (OPERATIONAL, RESEARCH, PRODUCTION):

As explained in Section 2.1, the Operational  $(\underline{0})$  mode is designed for use during launch support operations and automatically calculates many of the user inputs. The Research  $(\underline{R})$  mode allows the user to specify a more complete array of inputs and provides more detailed output which is useful for case studies. The Production  $(\underline{P})$  mode is used to process multiple cases and is primarily executed in a batch environment as described in Section 5.1.2.

## 2. - (ORP; CWG)

## ENTER METEOROLOGICAL DATA FILE NAME (RRSOND):

The REEDM program assumes the user has previously stored the meteorological upper-air (rawinsonde) data into a disc file. The default file name "RRSOND" is shown in parenthesis in Display 2 and is obtained by typing  $\nabla C_R$ . The format and contents of the meteorological disc data file are specified in Section 5.3. For Production mode runs multiple cases

(data sets) may be stacked in this file. If the data file is on disc and the file name is "DATA##", the program will begin processing with the data-set number given by ##. The program counts the data sets from 00 to 99. For example, if the disc file name given to the program is "DATA07", the program will start processing with the eighth data set in the file. Also, if the data file is on tape and the file name given is "TAPE##", the program will begin processing with the tape data-set number given by ##. The program counts the data sets from 00 to 99. If tape is used, the program assumes the data are in the KSC65 format shown in Section 5.3 and are read from logical unit 8. Also, the user is required to position the tape to the correct file number prior to processing.

3. - (P; CWG)

## ENTER NUMBER OF RUNS TO BE MADE (1):

This display only occurs for production mode runs and asks for the number of cases you wish to process. The default value is given in parenthesis. There must be this number of data cases stacked in the file specified in Display 2.

#### 4. - (ORP; CWG)

ENTER MODEL TYPE (CONCENTRATION/DOS., WASHOUT DEP., GRAVITATIONAL DEP.):

The REEDM program contains three different dispersion model options. The user has the option of either calculating concentration, dosage and time average concentration ( $\underline{C}$ ), deposition due to washout by precipitation ( $\underline{W}$ ), or deposition due to gravitational settling ( $\underline{G}$ ).

#### 5. - (ORP; CWG)

#### ENTER LAUNCH TIME AND DATE (1000 EST 22 MAR 1982):

The REEDM program assumes the user has stored the default launch time and date in a file called ?LTIME on disc as a single line. The format must be the same as that shown inside the parenthesis in Display 5 (not including the parenthesis) and left-justified in the record. The program retrieves this time and date and displays it as the default time and date in Display 5. If the program cannot find file ?LTIME, a warning message is displayed and the program uses the current time and date for the default displayed in parenthesis. If you desire to enter another time and date or change any part of the default, the values are entered immediately below the corresponding time, day, month, etc. of the default display. Abbreviations for the month are - JAN, FEB, MAR, APR, MAY, JUN, JUL, AUG, SEP, OCT, NOV, DEC.

## 6. - (ORP; CWG)

ENTER LAUNCH VEHICLE (SHUTTLE, TITAN, DELTA2914, DELTA3914):

Vehicle data parameters are automatically provided for the SPACE SHUTTLE( $\underline{S}$ ), TITAN III( $\underline{T}$ ), DELTA 2914( $\underline{D2}$ ) and the DELTA 3914( $\underline{D3}$ ) vehicles. Only calculations for these vehicles can be processed by the REEDM program.

## 7. - (ORP; CWG)

ENTER LAUNCH TYPE (NORMAL, SINGLE ENGINE, CONFLAGRATION):

The three launch situations are given as -

## NORMAL LAUNCH (N)

 Two solid engines and zero stage liquid engine ignite normally

## NORMAL LAUNCH (N) (Cont.)

- Heat released prior to lift-off ignored in cloud rise calculation
- Heat vaporizes water from pad deluge system

## SINGLE ENGINE BURN ON PAD (S)

- One solid engine ignites and burns
- Vehicle remains in hold-down configuration
- Pad deluge pad operates normally

## CONFLAGRATION (C)

- On-pad explosion ruptures solid engine casings and propellant scatters in vicinity of pad
- Solid propellant burns at a constant rate over selected periods
- Liquid propellant does not contribute to heat released for cloud rise

## 8. - (ORP; CWG)

ENTER PROPELLANT TEMPERATURE (30 DAY AVG.) (20.87 DEG. C):

The vehicle propellant temperature in degrees Celsius is entered here. The default value shown is a 30 day average historical value for the month entered in Display 5. The default propellant temperatures are valid only for Kennedy Space Center, Florida.

9. - (ORP; CW)

ENTER ONE OR MORE SPECIES (HCL, AL203, CO2, CO):

This option is displayed for concentration (dosage) and washout deposition calculations only, except only HCl and  ${\rm Al}_2{\rm O}_3$  are displayed for washout deposition. Gravitational deposition calculations automatically assume the calculations are to be made for the deposition of  ${\rm Al}_2{\rm O}_3$ .

9.1 - (R; CWG)

ENTRAINMENT PARAMETERS GAMMAX=.64 GAMMAY=.64 GAMMAZ=.64 CHANGE (NO,YES): THE PRODUCT OF GAMMAX\*GAMMAY\*GAMMAZ SHOULD EQUAL .64 CUBED

The default entrainment coefficients (see Equation 11) are shown as .64 for a normal launch. However, if either a single engine burn or conflagration is selected in Option 7 above, the default entrainment parameters will be shown as .5. If the user wishes to change these parameters, a " $\underline{Y}$ " is entered and the program will ask for the new values in the following displays.

9.2 - (R; CWG)

## ENTER GAMMAX (.64):

Enter the alongwind entrainment coefficient. A value of .5 is displayed for abnormal launches.

9.3 - (R; CWG)

## ENTER GAMMAY (.64):

Enter the crosswind entrainment coefficient. A value of .5 is displayed for abnormal launches.

9.4 - (R; CWG)

## ENTER GAMMAZ (.64):

Enter the vertical entrainment coefficient. A value of .5 is displayed for abnormal launches.

10. - (ORP; CWG)

ENTER LAUNCH COMPLEX NUMBER (39A, 39B, 39C, 40, 41, 17):

Enter the entire launch complex number. The default launch complex number depends on the type of vehicle entered in Display 6. If the vehicle is the SPACE SHUTTLE, the default is "39A". If the vehicle is the TITAN III, the default is "40". If the vehicle is the DELTA, the default is "17". The default for this display does not necessarily appear as the first option in parenthesis. The program will automatically determine the launch coordinates for each of the above 6 sites when plotting isopleths of concentration, dosage, or deposition.

11. - (ORP;C)

CALCULATIONS TO BE DONE AT (SURFACE, STABILIZATION, ANOTHER):

This display only appears for concentration/dosage calculations. Washout deposition and gravitational deposition are calculated only at the surface. Also, calculations of  $Al_2O_3$  concentration, dosage are allowed only within 5 meters of the surface. An entry of "S" results in surface calculations, "ST" the cloud stabilization height and "A" requires the entry of the height in the following display.

## 11.1 - (ORP; C)

ENTER CALCULATION HEIGHT (METERS) ( 0.00 METERS):

This display appears only if "A" is entered in response to Display 11. The height entered must be less than the top boundary of the upper layer (L=2) or must be less than 5 meters if  $Al_2O_3$  concentration/dosage are being calculated. The default height is given in parenthesis.

## 12. - (ORP; CWG)

## ENTER CLOUD SHAPE (ELLIPTICAL, SPHERICAL):

This parameter determines the shape of the cloud and the distribution of source material. The default is Elliptical  $(\underline{E})$ , specifying an elliptical shape and a uniform vertical distribution of source material in each Kth meteorological layer (see Section 3.2.2). The option allows a spherical  $(\underline{S})$  shape with a Gaussian vertical distribution of material within the cloud. As noted in Section 3.2.2, we suggest the  $(\underline{E})$  option be used for normal launches and the  $(\underline{S})$  option be used for abnormal launches.

#### 12.1 - (R;C)

ENTER ABSORPTION COEFFICIENT FOR GASES ONLY (RNG:0 to 1, DEF.=NO ABS.=0):

Enter the fraction of material absorbed at the surface. The value entered here refers to the fraction of vapor material HCl, CO,  ${\rm CO_2}$ ) absorbed at the ground surface and/or the base of the upper mixing layer. The default value is no absorption or zero.

12.2 - (R;C)

## ENTER DECAY COEFFICIENT (NO DECAY=0):

Enter the coefficient of time-dependent decay in units of  $\sec^{-1}$ . The coefficient of time-dependent decay can be determined by the absolute value of  $\ln (0.5)/t$ , where t is that time at which 1/2 of the material has been removed due to physical or chemical processes.

12.3 - (R; CWG)

This option permits the user to change the coefficients of crosswind  $\alpha$  and vertical  $\beta$  cloud expansion from the default values to values other than unity. We suggest that  $\alpha$  always be set equal to 1. The value of  $\beta$  can be set equal to 0.9 for abnormal launches, but should be set equal to 1 for normal launches. If the user desires to change the value, a "Y" is entered here and the new values of  $\alpha$  and  $\beta$  are entered in the following displays.

12.4 - (R; CWG)

#### ENTER ALPHA:

Enter the user-selected coefficient of crosswind cloud expansion.

12.5 - (R; CWG)

#### ENTER BETA:

Enter the user-selected coefficient of vertical cloud expansion.

12.6 - (R; CWG)

DOWNWIND EXPANSION DISTANCES XRY=100.0 XRZ=100.0 CHANGE (NO,YES):

This option permits the user to change the alongwind distance in meters over which rectilinear cloud expansion in the crosswind and/or vertical directions occurs (see Equations 58, 59 and 60). If a change is desired, enter "Y" and enter the distance in the following displays.

12.7 - (R; CWG)

#### ENTER XRY:

Enter the alongwind distance in meters over which rectilinear cloud expansion in the crosswind direction occurs.

12.8 - (R; CWG)

## ENTER XRZ:

Enter the alongwind distance in meters over which rectilinear cloud expansion in the vertical direction occurs.

12.9 - (R;C)

CONCENTRATION AVERAGING TIME (TIMAV=600.0 SEC.) CHANGE (NO,YES):

This option allows the user to change the time over which peak time-mean concentration is calculated (see Equation 67). The default value is shown in parenthesis. If a change is desired, enter "Y" and the new time is entered in the following display.

#### ENTER TIMAV:

Enter the averaging time in seconds over which the peak time-mean concentration is to be calculated.

12.11 - (R;CG)

GRAVITATIONAL SETTLING CATEGORIES DATA NUMBER OF SETTLING CATEGORIES = 10 .1078 TERMINAL FALL VELOCITY VALUES (METERS PER SECOND) = .1078,.1078,.1078,.1078,.1078,.1078,.1078,.1078, 0.000 REFLECTION COEFFICIENT VALUES = 0.000,0.000,0.000,0.000,0.000,0.000,0.000,0.000,0.000, .0002 FREQUENCY OF OCCURRENCE VALUES = .0151,.1182,.1175,.1724,.2358,.3130,.4240,.5818,.7266, AVERAGE PARTICLE SIZE DIAMETERS (MICROMETERS) = 115.00 230.,350.,440.,500.,555.,610.,675.,750.,870., DO YOU WISH TO CHANGE THE GRAVITATIONAL SETTLING DATA (NO, YES):

The default values for parameters related to gravitational deposition and concentration of  $\mathrm{Al}_2\mathrm{O}_3$  with gravitational deposition occurring are shown in the display. If the user desires to change any or all of these data, a "Y" is entered and the respective changes are entered in the following displays. Also, when calculating concentration, the program does not display or require the particle diameter.

12.12 - (R;CG)

ENTER THE NUMBER OF SETTLING CATEGORIES (MAXIMUM IS 10):

Enter the number of particle-size categories required to represent the material distribution. The default for this parameter is shown in Display 12.11.

<sup>\*</sup> This display occurs for concentration only when the calculation is being made for  ${\rm Al}_2{\rm O}_3$ .

12.13 - (R;CG)

ENTER ## TERMINAL FALL VELOCITY VALUES (METERS PER SECOND):

Enter ## particle settling velocities in meters per second, where ## is the value entered in Display 12.12. Each value entered is separated from the following value by a comma. Type  $C_R$  at the end of the string of values. The defaults for these parameters are shown in Display 12.11. Also, if the user does not wish to change all values, a comma must be typed for each value skipped to indicate an empty field.

12.14 - (R;CG)

ENTER ## REFLECTION COEFFICIENT (NO REF. = 0) VALUES:

Enter # particle reflection coefficients as fractions, where # is the value entered in Display 12.12. Each value represents the fraction of the material in the respective particle-size category that is reflected (not absorbed) at the surface. Each value entered is separated from the following value by a comma. Type  $C_R$  at the end of the string of values. The defaults for these parameters are shown in Display 12.11. Also, if the user does not wish to change all values, a comma must be typed for each value skipped to indicate an empty field.

12.15 - (R;CG)

ENTER ## FREQUENCY OF OCCURRENCE VALUES (SUM MUST TOTAL 1.0):

Enter ## particle mass fractions where ## is the value entered in Display 12.12. Each value represents the fraction of the total material mass in the respective particle category. Each value entered is separated from the following value by a comma. Type  $C_R$  at the end of the string of values. The defaults for these parameters are shown in Display 12.11. Also, if the user does not wish to change all values, the user must type a comma for each value skipped to indicate an empty field.

12.16 - (R;G)

ENTER ## AVERAGE PARTICLE SIZE DIAMETERS (MICROMETERS):

Enter ## average particle-size diameters in micrometers, where ## is the value entered in Display 12.12. Each value represents the geometric mean diameter for the respective particle-size category. Each value entered is separated from the following value by a comma. Type  $C_R$  at the end of the string of values. The defaults for these parameters are shown in Display 12.11. Also, if the user does not wish to change all values, the user must type a comma for each value skipped to indicate an empty field.

13. - (ORP; W)

CALCULATE (MAXIMUM POSSIBLE, TIME-DEPENDENT) WASHOUT DEPOSITION?:

This display appears only for calculations of washout deposition. Maximum possible ( $\underline{\mathbf{M}}$ ) produces the maximum possible deposition on the ground due to precipitation scavenging independent of the time when precipitation begins ( $\mathbf{t_i} = \mathbf{x/u_L}$  in Equation 76.). Time dependent ( $\underline{\mathbf{T}}$ ) washout deposition produces the deposition on the ground due to precipitation scavenging that begins at the time  $\mathbf{t_i}$  specified in Display 15.

14. - (ORP; W)

ENTER RAINFALL RATE (HEAVY=0.3, MODERATE=0.2, LIGHT=0.1, ANOTHER):

This display appears only for washout deposition and asks for the rainfall rate in inches per hour. If the user wishes to specify the rainfall rate, enter an (A) and the rate is entered in the following display.

14.1 - (ORP; W)

ENTER RAINFALL RATE (INCHES PER HOUR):

Enter the rainfall rate in inches per hour.

14.2 - (R; W)

RAINFALL SCAVENGING COEFFICIENT (LAMBDA= 2.62743E-04) CHANGE (NO, YES):

The rainfall scavenging coefficient  $\lambda$  appearing in Equation 76 has units of s<sup>-1</sup> and is determined from Equation 77 depending on the value of R in Display 14 or 14.1. The value of  $\lambda$  in parenthesis above (LAMBDA=2.62743E-4) is for heavy rain (R=0.3 in/hr in Display 14). If the user desires to use a value of  $\lambda$  other than the value calculated using Equation 77, a "Y" is typed and the desired value is entered in the following display.

14.3 - (R; W)

#### ENTER LAMBDA:

Enter the rainfall scavenging coefficient in units of  $s^{-1}$ .

15. (ORP; W)

TIME RAIN STARTS AFTER LAUNCH (TIME1=0.00 SECONDS) CHANGE (NO, YES):

This display appears only for time-dependent washout deposition. The default time of start of precipitation is displayed in parenthesis. If the user wishes to specify the start time, enter a "Y" and the time is then entered in the following display.

15.1 - (ORP; W)

## ENTER TIM1 (SECONDS):

Enter the time in seconds after launch time at which precipitation begins.

16. - (ORP; W)

RAIN DURATION (DURAT= 1.00 HOURS) CHANGE (NO, YES):

This option allows the user to change the default value for the duration of precipitation shown in the parenthesis. If a change in the duration of precipitation is desired, enter a "Y" and enter the duration in the following display.

16.1 - (ORP; W)

## ENTER DURAT (HOURS):

Enter the duration of precipitation in hours.

16.2 - (R; CWG)

## PRINT DETAIL MODEL PARAMETERS? (NO, YES):

This option allows the user to select between a summary or detailed print-output and is available only in the research mode.

17. - (ORP; CWG)

DO YOU WISH TO PLOT THE METEOROLOGICAL PROFILE (YES, NO):

The meteorological data profile is used to assess the quality of the rawinsonde data and to determine the height of the layer boundaries to

be used in the dispersion calculations. The program plots vertical profiles of wind direction, wind speed, temperature and virtual potential temperature as well as the dimensions of the stabilized cloud as viewed from the launch pad along the mean wind direction in the lowest layer. Figure 2 shows an example meteorological profile plot produced by the program for 0712 Eastern Standard Time 12 April 1981. This example shows an elevated inversion based at approximately 990 meters and a surface based inversion with its top at about 150 m.

## 17.1 - (ORP; CWG)

MOUNT A METEOROLOGICAL PROFILE FORM ON PLOTTER LU##


SPACE - RETURN WHEN READY
ENTER F TO PLOT THE FORM:

This display appears only when "Y" is given in response to Display 17 above. The logical unit to which the program sends the plot is given by ## in Display 17.1. A meteorological profile form or blank paper must be mounted on the plotter and the plotter left in a ready state before a response is entered to this display. Forms generation for meteorological profiles is discussed further in Section 5.1.3.

## 18. - (ORP; CWG)

HEIGHT AT THE	TOP OF THE UPPER LAYER (METERS):	3048.00
	BASE OF THE UPPER LAYER (METERS):	2438.40
	TOP OF THE LOWER LAYER (METERS):	2438.40
	STABILIZATION HEIGHT + + + + + +	1246.39
	+ CALCULATION HEIGHT + + + + + +	0.00
	BASE OF THE LOWER LAYER (METERS):	0.00
DO YOU WISH TO	O CHANGE (NEITHER, UPPER, LOWER) TRANSITION	LAYER:

The REEDM program uses two major meteorologically defined layers as discussed in Section 2.3. The boundaries of these layers must coincide with heights reported in the rawinsonde data file. If the user selects any height other than those shown in Display 18 above, the program will automatically select the height from the rawinsonde data file closest to the value entered by the user in the following displays. The program sets the

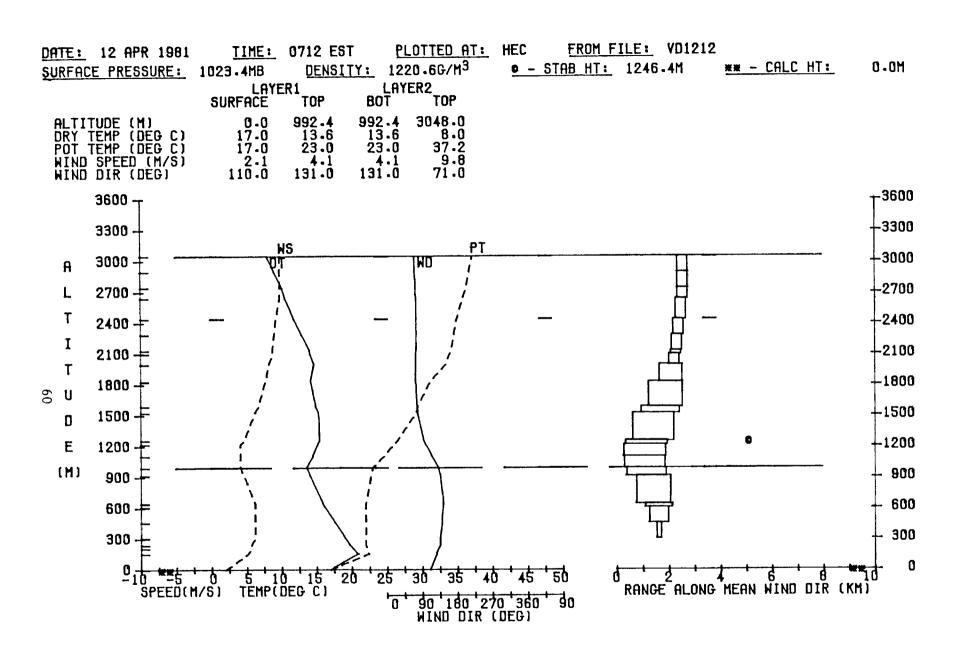

PLOTTED AT: \*\*\* 1044. 24 JUN 1982 \*\*\*

9 1 1 1 41 1 1 1 1 1 1 1 mm

Figure 2. Meteorological profile plot produced by REEDM from KSC rawinsonde data for 0712 Eastern Standard Time, 12 April 1981.

base of the lower layer to 0 (surface) and defaults to twice the cloud stabilization height for the top of the lower layer. The program also uses the top of the lower layer as a default value for the base of the upper layer and sets the top of the upper layer to the highest rawinsonde measurement level read by the program (normally 3048 meters). These layer heights are used as defaults because a value for the height of the top of the lower layer between the stabilization height and twice the stabilization height maximizes ground-level vapor concentrations. However, the user is expected to alter the default values of the base and top of the major layers based on the print output of the rawinsonde data, the plot of the meteorological profile, or forecasts of meteorological conditions at launch time. user should generally select the height of the base of an elevated inversion to represent the top of the lower layer and base of the upper layer. It should be noted that the primary function of selecting the top of the lower layer is to represent a boundary to turbulent mixing (see Section 3.3.2). For this reason, the temperature should begin to increase or remain constant above the selected height for at least 50 to 100 meters (see Figure 2). The primary purpose of the REEDM program is to assist users in estimating the environmental effects of vehicle launches. user must, therefore, reflect on the expected effects of the selected layer heights on the calculated concentration/dosage levels. For this reason, the user should likely ignore surface-based inversions or elevated inversions with tops less than a few hundred meters above the surface in the selection of the top of the lower layer unless there is very strong evidence that the cloud above this layer will not penetrate to the surface. Also, if the model is being used to estimate concentrations at the flight level of sampling aircraft and this flight level is in an elevated inversion, the base and top of the upper layer should correspond to the base and top of the elevated inversion. If there is no elevated inversion, the user can specify a single layer by entering 0 for the top and bottom of the upper layer and changing the top of the lower layer to the height of the highest sounding level read by the program (usually 3048 m). Also, the user is cautioned to use all of the meteorological sounding data up to 3048 meters when calculating gravitational deposition and to limit the top of the upper layer to the height precipitation originates when calculating washout deposition.

18.1 - (ORP; CWG)

ENTER THE HEIGHT AT THE TOP OF THE LOWER LAYER (METERS):

The program will use the height from the rawinsonde data file closest to the value entered here. Upon entry of this value, the program will return to Display 18.

18.2 - (ORP; CWG)

DO YOU WISH TO CHANGE (TOP, BASE) HEIGHT OF THE UPPER LAYER:

Options to modify either the height of the top  $(\underline{T})$  or base  $(\underline{B})$  of the upper layer.

18.3 - (ORP; CWG)

ENTER THE HEIGHT AT THE BASE OF THE UPPER LAYER (METERS):

The program will use the height from the rawinsonde data file closest to the value entered here. Upon entry of this value, the program returns to Display 18. The program will not allow the entered height to be below the height at the top of the lower layer unless the value entered is 0 and the height at the top of the upper layer is also set to 0. Also, the program will not allow the height entered to be different from the height at the top of the lower layer when washout deposition is being calculated. If either of these restrictions are violated, the program will display "REEDM WARNING 020" (see Section 5.2) after an "N" is entered in Display 18 and will not allow you to continue.

18.4 - (ORG; CWG)

ENTER THE HEIGHT AT THE TOP OF THE UPPER LAYER (METERS):

The program will use the height from the rawinsonde data file closest to the value entered here. Upon entry of this value, the program

returns to Display 18. This height should be the height of the highest level from the rawinsonde data file (usually 3048 meters) read by the program when gravitational deposition or concentration (Al $_2$ 0 $_3$ ) with gravitational deposition occurring is being calculated.

19. - (ORP; CWG)

## ENTER SIGMA AZ, (ESTIMATED=13.82, ANOTHER):

The default turbulent intensity SIGMA AZ value shown in parenthesis is the program approximation to the standard deviation of the azimuth wind direction at a height of approximately 5 meters. This value (SIGMA AZ) corresponds to  $\sigma_{AR}^{\prime}\{\tau_{o}=600\}$  in Equation 38. The program follows the rules outlined in Section 3.3 for calculating and assigning SIGMA AZ values to the meteorological sounding levels. If the user is in the Operational or Research mode and does not intend to input SIGMA AZ at each sounding level (see Display 20.2 below), the program calculates the SIGMA AZ at each sounding level using the same rules specified in Section 3.3.2. (Equations (49)-(56) as if the program had selected  $\sigma_{AR}^{\prime}\{\tau_{o}=600\text{ s}\}$ . However, if the user is in the Research mode and intends to input SIGMA AZ at each sounding level in Display 20.2, the value entered here is used unmodified as the value at the base of the first meteorological sounding layer and the remaining values are entered in Display 20.2 below.

19.1 - (ORP; CWG)

#### ENTER SIGMA AZ (DEG):

Enter the standard deviation of the azimuth wind direction in degrees.

20. - (ORG; CWG)

## ENTER SIGMA EL, (ESTIMATED=13.82, ANOTHER):

The default values of SIGMA EL shown in parenthesis is the default standard deviation of the wind elevation angle. The default value shown in parenthesis is identical to the value defaulted or input as SIGMA AZ in Display 19. This value of SIGMA EL is automatically treated similar to SIGMA AZ in the program. That is, the layer values used in the program are derived from this input using the same rules given by Equations (49) through (56) under the assumption that, after the rules have been followed, the turbulence over the layer depths of interest is isentropic. However, If the user is running in the Research mode and chooses to input SIGMA EL at each sounding level in Display 20.2 below, the value entered here is used unmodified as the value at the base of the first meteorological layer and the remaining values are entered in Display 20.2.

20.1 - (ORP; CWG)

#### ENTER SIGMA EL (DEG):

Enter the standard deviation of the wind elevation angle in degrees.

20.2 - (R; CWG)

DO YOU WISH TO INPUT SIGMA A & SIGMA E FOR EACH LEVEL? (NO, YES):

When SIGMA A AND SIGMA E values are entered for each meteorological sounding level, the program uses a height-weighted mean (similar to Equation (56)) to calculate the value used within each meteorological layer. If the user desires to enter the SIGMA A AND SIGMA E values, enter a "Y" here and enter the values for sounding level 2 through the top sounding level in Display 20.3. The program assumes the values for level 1 (surface) were entered in Displays 19 and 20 above.

20.3 - (R; CWG)

ENTER SIGMA A, SIGMA E (IN DEG) FOR LEVEL ## (20.000,20.000):

Enter the values for SIGMA A and SIGMA E respectively, in degrees and separated by a comma. The display gives the level number as ## and the default values shown in parenthesis. The program will repeat this display for each meteorological sounding level.

20.4 - (ORP; CWG)

DO YOU WISH TO CONTINUE WITH THE MODEL CALCULATIONS? (YES, NO):

This display is essentially a pause to enable the user to restart the program or continue with the maximum centerline calculations. If you continue with the model calculations, there is a delay while the model calculations are being performed. The program will display the distance at which calculations are being done, where the last distance displayed will be 29,000 meters.

21. - (OR; CWG)

DO YOU WISH TO PLOT MAXIMUM CENTERLINES? (YES, NO):

This option enables the user to plot maximum centerline profiles of concentration, dosage, time-mean concentrations, washout deposition or gravitational deposition.

21.1 - (OR; CWG)

MOUNT A CENTERLINE PROFILE FORM ON PLOTTER LU ##

SPACE - RETURN WHEN READY
ENTER F TO PLOT THE FORM:

Mount a maximum centerline profile form or blank paper (see Section 5.1.3) on the plotter with the logical unit number specified by ##

in the display. Make sure the plotter is ready to receive commands prior to entering  $\nabla C_R$  if a form is mounted or prior to entering  $FC_R$  if a blank sheet of paper is mounted.

21.2 - (OR; CW)

PLOT MAXIMUM CENTERLINE VALUES FOR: (HCL,AL203,CO,C02)

This display will appear only if there is more than one species specified by the user under Display 9.

21.3 - (OR; G)

PLOT DEPOSITION IN (MILLIGRAMS OR PARTICLES/M\*\*2)

This display appears only when gravitational deposition is selected for calculation under Display 4.

21.4 - (OR; CWG)

DO YOU WISH TO PLOT CENTERLINE PROFILES FOR ANOTHER VARIABLE OR SPECIES? (YES, NO)

This option enables the user to replot the just completed profile, plot a maximum centerline concentration, dosage, time-mean concentration, washout deposition or gravitational deposition profile for another species or plot gravitational deposition in alternate units.

22. - (OR; CWG)

DO YOU WISH TO PLOT ISOPLETHS? (YES, NO):

This option allows the user to plot isopleth patterns of concentration, dosage, time-mean concentration, washout deposition or gravitational deposition.

22.1 - (OR;C)

PLOT ISOPLETHS OF: (CONCENTRATION, DOSAGE, TIME MEAN CONCENTRATION)

This option is displayed only if concentration has been calculated.

22.2 - (OR; CW)

PLOT ISOPLETHS FOR: (HCL,AL203,CO,CO2)

This option is displayed only if there is more than one species specified by the user under Display 9.

22.3 - (OR; W)

PLOT ISOPLETHS FOR SUM OF LAYERS OR LAYER 1 OR LAYER 2?:

Washout deposition on the ground is calculated as the contribution from layer 1 (lower layer), layer 2 (upper layer) and the total given as the sum of layers. This option allows the user to plot the contribution of each layer separately or the total deposition with the default as the total deposition (Sum of layers).

22.4 - (OR;G)

PLOT DEPOSITION IN (MILLIGRAMS OR\_PARTICLES/M\*\*3)

This display appears only for gravitational deposition.

22.5 - (OR;G)

PLOT ISOPLETHS FOR SUM OF LAYERS OR FOR LOWER LAYER ONLY?

This display appears only for gravitational deposition and allows the plotting of the total ground level deposition or the contribution from  $\,$ 

the lower layer only. The default is the total ground level deposition (Sum of layers).

22.6 - (OR; CWG)

MAXIMUM CONCENTRATION OF HCL = .9723 PPM
DEFAULT ISOPLETHS ARE: .9723E-01 PPM
.2917 PPM
.4862 PPM
.6806 PPM
.8751 PPM

ENTER FIRST ISOPLETH VALUE (SPACE - RETURN FOR DEFAULTS)

This display shows the maximum value of the quantity (concentration) calculated by the program for the species (HC&) to be plotted. Also, default isopleth levels chosen by the program are shown. If the user chooses to use the defaults,  $\nabla C_R$  is entered. However, if the user wishes to specify the isopleth levels, the first specified value (in the same units as shown in the display) is entered at this point. The second through tenth values are then entered in Display 22.7 below.

22.7 (OR; CWG)

ENTER SECOND ISOPLETH VALUE (SPACE - RETURN TO TERMINATE ISOPLETH INPUTS)

Upon entering the second isopleth value, the program will return to this display replacing the word SECOND by THIRD, THIRD by FOURTH, etc. until  $\nabla C_p$  is entered or until ten values have been entered.

22.8 - (OR; CWG)

MOUNT LAND MAP ON PLOTTER LU ## FOR SITE XX, ENTER SPACE-RETURN WHEN READY OR ENTER AN 'A', IF THE ALTERNATE MAP IS DESIRED?
OR AN 'S', IF YOU WISH TO SPECIFY THE LAUNCH SITE MAP LOCATION?:

Isopleth plotting is accomplished on preprepared maps of Kennedy Space Center. The maps are designated as either a LAND map or a SEA map

(the word LAND is replaced by the word SEA in Display 22.8). This display informs the user of which map to use for obtaining the best isopleth coverage. The display also informs the user to mount the map on the plotter with logical unit number given by ##. The launch-site number is given by XX. The user has the option of accepting the designated map by entering "V", or forcing the program to use the alternate LAND/SEA map by entering "A", or of specifying the launch-site coordinates by entering "S".

22.9 - (OR; CWG)

ON A SCALE OF 0 to 9999 UNITS IN BOTH X AND Y DIRECTIONS, ENTER THE LAUNCH LOCATION (0,0 IS THE LOWER LEFT CORNER). X,Y?:

This display occurs only when the user selects the "S" option in Display 22.8 above. The program divides the plotter X (horizontal) and Y (vertical) directions into 9999 units each. The origin of the plot (0,0) is located at the lower left hand corner of the plot bed. Also, the X axis corresponds to the north to south axis of the preprepared Kennedy Space Center maps and the Y axis corresponds to the west to east axis of the maps. For example, to enter the launch coordinates of site 39A, the user enters X=4095 and Y=7300 for the land map or X=4200 and Y=1700 for the sea map. In addition for site 39B, the user should enter X=3518 and Y=6702 for the land map or X=3650 and Y=1123 for the sea map.

22.10 - (OR; CWG)

DO YOU WISH TO PLOT ISOPLETHS FOR ANOTHER VARIABLE OR SPECIES? (VARIABLE, SPECIES, NO):

This option allows the user to plot isopleths of any combination of variables or species. The word variable applies only to concentration, dosage and time-mean concentration. When calculating washout deposition or gravitational deposition, entering either a "V" or an "S" will allow plotting of an alternate species or alternate units.

#### 23. - (ORP; CWG)

DO YOU WISH DISCRETE RECEPTOR CALCULATIONS? (YES, NO, LU# OF DATA FILE):

This option allows the user to calculate values of concentration, dosage, time-mean concentration or washout deposition or gravitational deposition at a specified location relative to the launch site. If the user wishes to enter the discrete receptors interactively, a "Y" is entered and the location is entered in Display 23.1. If the user desires to enter the receptors from a data file, the logical unit number previously equated with the receptor data file is entered at this point. The discrete receptor data file contains a maximum of 60 discrete receptors. Each discrete receptor is entered on a new line (record) in the following format -

RANGE (METERS), AZIMUTH (DEGREES), HEIGHT (METERS), COMMENTS

Type the range to the receptor in meters relative to the launch site followed by a comma. Type the azimuth bearing in degrees measured in the clockwise direction from 0 degrees north relative to the launch site. Also, if concentration/dosage is being calculated by the program, the user can specify the calculation height by entering a comma after the azimuth entry followed by the calculation height. Comment information may be entered in columns 31 through 50 and is printed along with the results of each receptor point. If you do not enter 60 points in the discrete receptor data file, the last image in the file must be a -1 beginning in column 1.

#### 23.1 (ORP; CWG)

ENTER DISCRETE RECEPTOR LOCATION RELATIVE TO LAUNCH PAD. A 20 CHAR. COMMENT MAY BE ENTERED STARTING UNDER THE ASTERISK.
RANGE(M), BEARING(DEG), HEIGHT(M):

The word HEIGHT does not appear for washout deposition or gravitational deposition calculations because these quantities can only be calculated at the surface. The range is entered in meters relative to the launch site and is followed by a comma. The bearing is entered in degrees and is measured relative to the launch site in a clockwise direction from 0 degrees north and is followed by a comma if the height is to be entered. Enter the calculation height in meters only for concentration calculations. If comment information (building number, etc.) is desired, begin the comment immediately under the asterisk that appears on your CRT screen or TTY page by entering spaces following the height or bearing. A maximum of 20 comment characters per discrete point are saved for print output. As each discrete receptor location is entered, there will be a short pause to calculate the quantity. The program will then display the calculation results on the CRT or TTY and print the results or save for later printing depending on previous options.

23.2 - (ORP; CWG)

DO YOU WISH TO ENTER ANOTHER DISCRETE RECEPTOR LOCATION? (YES, NO):

This display appears only if the answer to display 23 was yes  $(\underline{Y})$  and allows you to return to enter up to 60 discrete receptors interactively.

24. - (OR;C)

DO YOU WISH RESULTS FOR ANOTHER CALCULATION HEIGHT ( $\underline{Y}ES,\underline{N}O$ ):

This display asks whether or not the user wishes to calculate concentration at another height. If "Y" is entered, the program returns to display 11.1, then skips to Display 17. to continue processing.

25. - (OR; W)

# DO YOU WISH TO CHANGE WASHOUT DEPOSITION CALCULATION TYPE? (YES, NO):

This display asks whether the user wishes to change the washout deposition calculation from maximum to time-dependent or from time-dependent to maximum. If you enter a "Y", the program will return to Display 13.

26. - (ORP; CWG)

DO YOU WISH TO PROCESS ANOTHER METEOROLOGICAL CASE (YES, NO):

This is the last REEDM display and asks whether the user wishes to continue with another meteorological data case. If "N" is entered, the program terminates. If "Y" is entered, the program restarts at Display 1.

# 5.1.2 Batch Processing

The REEDM computer executes in batch environment when the input logical unit number specified by LUl is a non-interactive device (card reader, magnetic tape, paper tape, disc file, etc.). The program can be executed completely as a batch run or may require some interactive input depending on the user selected options. All messages and interactive displays are written to the logical unit from which the batch run was initiated, except when initiated from a JOB file. If the batch run is initiated from a JOB file, all messages and interactive displays are written to the system log device.

Upon execution of the REEDM program, the following display will be printed on the system log device or originating logical unit:

```
***********************************
        NASA/MSFC MULTIPLE LAYER TECHNIQUE - REEDM
                                               ****
                                               ****
****
               UPDATE####
                            LOCATION HEC
*****
        ENTER '-1' TO CHANGE PREVIOUS INPUT VALUE.
                                               ****
                                               *****
****
        ENTER '-9' TO START AT BEGINNING OF PROGRAM.
                                               *****
****
        ENTER '-9' AT BEGINNING TO ABORT PROGRAM.
*****
         THE FIRST INPUT OPTION SHOWN IS THE DEFAULT
*********************
```

where the value of #### is the update level of the copy of REEDM you are executing. The reminders in the above display (a -l returns to a previous display option and -9 restarts the program) are applicable in the batch environment only when the program solicits an interactive response and only -1 should be used. In the following text, each input option is shown with the respective record or reference number. These record numbers are the same as those given in Section 5.1.1 under Interactive Processing. In addition, each record number is accompanied by a code in parenthesis (OP; CWG). The letters O and P that appear prior to the semicolon indicate if the input option is required for the Operational and/or Production modes of operation. The letters C, W and/or G indicate if the option is required for concentration, washout deposition or gravitational deposition. optional parameter must be present in the input data file if the record code for that parameter contains the letter (0, P, C, W or G) of an option chosen by the user. In setting up the input batch data file, the following conventions must be observed:

- The first option shown in the record description below is the default option, unless stated otherwise in the explanation of the option. The default option is obtained by entering  $\nabla C_D$  (space return).
- For input options where multiple values are required, the values are positional and each must be separated by a comma.
   Two consecutive commas indicate an empty field with the respective variable being defaulted.

- Input options that require an interactive response are treated in the same manner as outlined in Section 5.1.1 under Interactive Processing.
- All input options and values typed into the input data file must begin in column 1 of each new record.

Enter the REEDM input control data in the following order:

#### 1. - (OP; CWG)

Run Type - Enter "0" (default) for operational or "P" for production mode. Note that batch processing does not allow a research mode.

## 2. - (OP; CWG)

Enter the meteorological data sounding (rawinsonde) file name. A blank record defaults to the name "RRSOND". If the Production mode is selected, the user may stack up to 100 meteorological sounding cases in this file. The Operational mode only processes one case per program run. If the data are on disc, the format and contents must correspond to that given in Section 5.3. Also, if the disc file name is "DATA##", the program will begin processing with the data set number given by ##, where ## is counted from 00 to 99. If the data file name is "TAPE##", the program assumes magnetic tape data in the KSC65 format described in Section 5.3. The tape data are read from logical unit 8 beginning with the data set specified by ##, where ## is counted from 00 to 99. The user must position the tape to the correct file number prior to processing.

## 3. - (P; CWG)

Number of - Under the Production mode only, enter the number of data cases to be processed from the file specified in Record 2. The default value is "1".

## 4. - (OP; CWG)

Model - Enter a "C" for concentration (default) dosage and time-mean concentration. Enter a "W" for washout deposition or a "G" for gravitational deposition.

## 5. - (OP; CWG)

Launch Date - Enter the launch time and date or leave a blank record for the default. The REEDM program assumes the user has stored the default launch time and date in a file called ?LTIME on disc as a single line. The format of the default time and date is the same as that used to enter the date here and is

#### HHHHVESTVDDVMMVYYYY

where:

HHHH - the hour (1000)

EST - Eastern Standard Time, but may be entered as LST, PST, etc.

DD - the day (22)

MMM - the month, selected from - JAN, FEB, MAR, APR, MAY, JUN, JUL, AUG, SEP, OCT, NOV, DEC

YYYY - the year (1982)

∇ - space

## 5. - (OP; CWG) (Cont.)

If a blank is entered for this record and file ?LTIME does not exist, the program will default to the current time and date. Also, the month entered here determines the default propellant temperature value for Record 8.

## 6. - (OP; CWG)

Vehicle - Enter an "S" (default) for the SPACE SHUTTLE or "T" for the TITAN. Type "D2" for the DELTA2914 or "D3" for the DELTA3914.

## 7. - (OP; CWG)

Launch Type - Enter an "N" (default) for a Normal launch, an "S" for a Single engine burn or a "C" for a conflagration.

## 8. - (OP; CWG)

Propellant - Enter the propellant temperature in degrees Celsius. A blank record will result in the default value being selected from the following table, depending on the month entered in Record 5.

# Default Propellant Temperature °C

Month			Month		
JAN	_	16.06	JUL -	28.38	
FEB	_	19.59	AUG -	28.63	
MAR	_	20.87	SEP -	28.02	
APR	_	23.43	OCT -	26.29	
MAY	_	25.74	NOV -	22.86	
JUN	-	27.67	DEC -	18.68	

These values are valid only for Kennedy Space Center, Florida.

## 9. - (OP; CW)

Species - Enter "H" (default) for HCl, "A" for Al<sub>2</sub>O<sub>3</sub>, "C" for CO and "C2" for CO<sub>2</sub>. Note that this record is not entered for gravitational deposition and only "H" and/or "A" may be entered for washout deposition. Also, separate each entry by a comma.

## 10. - (OP; CWG)

Launch - Enter "39A" for launch pad 39A, "39B" for launch pad 39B, "39C" for launch pad 39C, "40" for launch pad 40, "41" for launch pad 41 or "17" for launch pad 17. A blank record will use the default, depending on the launch vehicle. The defaults are:

SPACE SHUTTLE - 39A
TITAN - 40
DELTA - 17

## 11. - (OP;C)

Calculation - Enter "S" (default) for surface, "ST" for the cloud stabilization height or the actual calculation height in meters. Note that this record is entered only for concentration runs.

## 12. - (OP; CWG)

Cloud Shape - Enter "E" (default) for elliptical or "S" for spherical shapes (see Section 3.2 for a description of the consequences of this option).

(Records 13 through 16 are only entered for washout deposition calculations).

#### 13. - (OP; W)

Washout Depo- - Enter "M" (default) for calculations of Maximum possible washout deposition or "T" for Time-dependent washout deposition.

## 14. - (OP; W)

Rainfall - Enter "H" (default) for Heavy (0.3 inches/hr.), "M" for

Rate Moderate (0.2 inches/hr.), "L" for Light (0.1 inches/hr.) or enter the rainfall rate in inches per hour.

## 15. - (OP; W)

Time - Enter the time in seconds after launch time that precipitation begins. This record is entered only if Record 13 contains a "T".

## 16. - (OP; W)

Duration - Enter the duration in hours of the precipitation. A blank record defaults to "1" hour.

(For Production mode runs, sets of records 17 through 20 and 23 must be entered. The number of sets depends on the number of runs specified in Record 3)

## 17. - (OP; CWG)

Plot Meteorological Profile

- Enter "Y" (default) for yes, "N" for no or "F" for yes
which specifies the profile form also be plotted.

Meteorological profiles are plotted on the logical unit
specified by LU3 in the run command.

# 18. - (OP; CWG)

Boundary - Because the default boundary layer values are not known apriori, enter "Y" to display the default boundary layer values. Any other entry causes the program to use the default boundary layer values and go to Record 19. When a "Y" is entered, the program temporarily enters interactive processing. The program will then interactively prompt the user for the layer values in the same manner indicated under Display 18 through 18.4 under Interactive Processing, Section 5.1.1. At the end of interactive processing, the program continues with Record 19.

#### 19. - (OP; CWG)

SIGMA(A) - Because the default SIGMA(A) value is not known apriori, enter "A" to display the default value and interactively modify it if desired. Any other value will cause the program to use the default value and go to Record 20.

## 20. - (OP; CWG)

SIGMA(E) - The default SIGMA(E) value is the same as that entered or defaulted for SIGMA(A). Enter "A" to display the default value and interactively modify it if desired.

Any other value will cause the program to use the default value and go to Record 21.

(For a Production run, Records 21 and 22 are not entered)

## 21. - (0; CWG)

Plot Maximum - Enter "Y" (default) for yes, "N" for no or "F" for yes

Centerline which specifies the maximum centerline form also be

21. - (0; CWG) (Cont.) plotted. If "Y" or "F" is entered, the program enters interactive processing and will remain there during the plotting of all maximum centerline displays. The interactive prompt displays for maximum centerline plotting are shown in Display 21 through 21.4 under Interactive Processing, Section 5.1.1. All maximum centerline plots are plotted on the logical unit specified by LU4 in the run command.

22. - (0; CWG)

Plot Isopleths - Enter "Y" (default) for yes or "N" for no. If "Y" is entered, the program enters interactive processing and will remain there during all isopleth plotting. The interactive prompt displays for isopleths are shown in Display 22 through 22.10 under Interactive Processing, Section 5.1.1. All isopleth plots are plotted on the logical unit specified by LU5 in the run command.

#### 23. - (OP; CWG)

Discrete - Enter "Y" (default) for yes, "N" for no or the logical unit number of the data file containing the discrete receptors. If "Y" is entered, the program enters interactive processing and prompts the user for the discrete receptors as shown in Displays 23.1 and 23.2 under Interactive Processing, Section 5.1.1. If a logical unit number is entered, the program will read all discrete receptor points from successive records from that unit in the following format

RANGE(M), AZIMUTH(DEG), HEIGHT(M), COMMENTS

Enter the range in meters to the receptor relative to the launch site. Enter the azimuth bearing in degrees

23. - (OP; CWG) (Cont.)

to the receptor, measured clockwise from 0 degrees north relative to the launch site. Enter the height in meters only if this is a concentration calculation. These three values are separated by commas and begin in column 1 of the record. A maximum of 20 characters of comment information may be entered beginning in column 31. There are a maximum of 60 discrete points possible and if you have less than 60 points, the last discrete point must be followed by a record containing "-1".

24. - (0;C)

Another Calcu- - Enter "Y" if calculations for another height are lation Height desired or "N" if not. If "Y" is entered, the new height is entered in a record immediately following this record and a continued data file must be built

starting with Record 17 above.

25. - (0; W)

Deposition Type

Another Washout - Enter "Y" if an alternate washout deposition calculation type is desired (maximum possible or time-dependent) or "N" if not. If "Y" is entered, this record must be followed with a continued data file starting with Record 13, but omitting Records 14 and 16.

26. - (OP; CWG)

Another Case - Enter "Y" (default) if the program is to continue with another data case or file containing multiple cases. An "N" terminates the program. If "Y" is entered, the input data file must be continued from Record 1.

## 5.1.3 Plot Forms Generation

The REEDM computer program has the option of generating plot forms for the meteorological profiles and for the maximum centerline (concentration, dosage and deposition) profiles independent from the normal program operations. Prior to executing the program, prepare the plotter to receive the plot, as the REEDM program starts to plot immediately upon execution.

To generate meteorological profile forms type -

RU, REEDM, 98, LU3

where

LU3 - Logical unit number of the plotter you have prepared

At the completion of each plot form, the program will display back to your interactive unit

DO YOU WANT TO PLOT ANOTHER METEOROLOGICAL PROFILE FORM? CHANGE PLOT PAPER BEFORE A YES (YES OR NO)

The default reply is YES and will continue to plot forms as long as you desire. A NO response terminates the REEDM program.

To generate maximum centerline profile forms type

RU, REEDM, 99,,,LU4

where

LU4 - Logical unit number of the plotter you have prepared

At the completion of each plot form, the program will display back to your interactive unit

DO YOU WANT TO PLOT ANOTHER CENTERLINE PROFILE FORM? CHANGE PLOT PAPER BEFORE A YES (YES OR NO)

The default reply is YES and will continue to plot forms as long as you desire. A NO response terminates the REEDM program.

# 5.2 WARNING AND ERROR MESSAGES

This section contains a list of warning and error messages produced by REEDM.

Error Number	Message and Brief Description
001	*** REEDM ERROR 001, DATA INPUT ERROR, REC. XX.X
	The program cannot interpret the value or character you have entered for the input record specified by XX.X.
002	*** REEDM ERROR 002, CANNOT LOAD SEGMENT XXXXX
	The program is attempting to execute the program segment given by XXXXX and cannot locate it on the system disc. Find the named segment and restore (RP) it to the LG tracks or place it on the system disc before continuing.
003	*** REEDM ERROR 003, SEGMENT XXXXX HAS WRONG UPDATE NUMBER, MUST BE UPDATE NUMBER YYYY
	The program segment named by XXXXX must have the same update number as the main program, given by YYYY. The

# Error Number

# Message and Brief Description

003 (Cont.) program has aborted the segment given by XXXXX and you must locate the correct segment update and restore it to the LG tracks or place it on the system disc before continuing.

004

\*\*\* REEDM ERROR 004, CANNOT FIND FILE XXXXX

The meteorological data sounding (rawinsonde) file given by XXXXX cannot be located on any disc.

005

\*\*\* REEDM WARNING 005, CANNOT FIND FILE ?LTIME FOR LAUNCH TIME AND DATE, USING CURRENT TIME AND DATE

The program assumes the launch time and date have been specified as a single record in file ?LTIME. If this file is not found, the program reverts to the time and date obtained from the computer. The format of the time and date record is

## TTTTVSSSVDDVMMMVYYYY

where

TTTT = the time (0730)

SSS = EST, PST, etc.

DD = the day (12)

MMM = the month JAN, FEB, MAR, etc.

YYYY =the year (1982)

∇ = a space or blank

Error Number	Message and Brief Description
006	*** REEDM WARNING 006, UNABLE TO OPEN FILE ?LTIME FOR LAUNCH TIME AND DATE, USING CURRENT TIME AND DATA
	The program has found file ?LTIME containing the launch time and date, but cannot open the file.
007	*** REEDM WARNING 007, FREQUENCY OF OCCURRENCE VALUES DO NOT SUM TO 1.0, TYPE N - RETURN TO NORMALIZE BY XXXXX OR SPACE-RETURN TO CONTINUE
	If the sum of the fractions of material of each drop
	size category does not sum to 1.0, check your data for
	an entry error. If you type SPACE-RETURN calculations
	will proceed using the specified fractions.
008	*** REEDM WARNING 008, A CALCULATION HEIGHT > 5 METERS WILL PRODUCE ERRONEOUS RESULTS FOR AL203
	All $Al_2O_3$ calculations should be performed at or near
	the surface. Otherwise large wind direction shear in
	the sounding data could result in large errors in the
	calculations.
009	*** REEDM WARNING 009, INVALID MONTH ENTERED - PLEASE REENTER
	You have entered an incorrect abbreviation for the
	month. Enter the correct abbreviation from the
	following list:
	JAN, FEB, MAR, APR, MAY, JUN, JUL, AUG, SEP, OCT, NOV, DEC

Error Number	Message and Brief Description
010	*** REEDM WARNING 010, THE PRODUCT OF THE GAMMA'S IS INCORRECT, CONTINUE? (YES, NO):
	The product of the entrainment parameters, GAMMAX, GAMMAY AND GAMMAZ should equal approximately .26214 for a normal launch and the product of the parameters GAMMAX and GAMMAY should equal approximately .25 for an abnormal launch.
011	*** REEDM ERROR 011, OPEN ERROR YYY ON SOUNDING FILE XXXXX
	The parameter has found the meteorological data file (rawinsonde) specified by XXXXX, but cannot open the file due to error YYY. See your HP FMGR error message index for the meaning of YYY.
012	*** REEDM ERROR 012, READF ERROR YYY ON SOUNDING FILE XXXXX
	A read error has occurred in input data from file XXXXX. See your HP FMGR error message index for the meaning of YYY.
013	*** REEDM ERROR 013, CALCULATION HEIGHT IS ABOVE INPUT MET LEVELS
	The input calculation height is greater than the
	highest height of the rawinsonde data read by the
	program and no calculations can be performed.

Error Number	Message and Brief Description
014	*** REEDM ERROR 014, NO VALID SOUNDING LEVELS WERE FOUND ON FILE XXXXX
	The amount find any wellid revincende date in
	The program cannot find any valid rawinsonde data in
	the file specified by XXXXX and no calculations can be
	performed.
015	*** REEDM ERROR 015, UNEXPECTED END OF FILE OCCURRED ON SOUNDING FILE XXXXX
	The program assumes the data file specified by XXXXX
	has been erroneously truncated. See Section 5.3 for
	the format and contents required for the meteorological
	data.
016	*** REEDM ERROR 016, SOUNDING DATA FILE XXXXX HAS LESS THAN FIVE VALID LEVELS
	The program requires at least 5 or greater sounding
	levels in the meteorological data. See Section 5.3 for
	the format and contents required for the meteorological
	data.
017	*** REEDM ERROR 017, NOT ENOUGH LAYERS, THE TOP OF THE LAST LAYER MUST BE GREATER THAN XXXXX
	The height of the stabilized cloud is above the highest
	height read by the program and calculations cannot be
	performed.
	performed.
018	*** REEDM ERROR 018, (RCLDM) PLUME RISE ERROR FLAG EQUALS XX
	If the value of XX equals 1, the centroid height of the
	stabilized cloud is greater than the greatest height of

## Error Number

## Message and Brief Description

018 Cont. the sounding read by the program and no calculations can be performed. If the value of XX equals 2, the program is trying to calculate a plume rise height at or below the lowest height read by the program and no calculations can be performed.

019

\*\*\* REEDM WARNING 019, -1 NOT APPLICABLE, PROG. ABORTS IF -1 TYPED AGAIN

At this point the program cannot go back to the previous input option. A -9 will, in most cases, restart the program and another -1 will terminate the program.

020

\*\*\* REEDM WARNING 020, INVALID LAYERING - SPACE RETURN TO CONTINUE

The layering you have chosen is invalid due to

- Top of lower layer above bottom of upper layer for concentration or washout deposition
- The bottom of the upper layer does not coincide with the top of the lower layer for washout deposition
- The calculation height is outside the specified layer structure

021

\*\*\* REEDM WARNING 021, TOP OF UPPER LAYER LESS THAN TOP OF SOUNDING, CONTINUE? (NO,YES):

The height you have chosen for the top of the upper layer is less than the top of the sounding and may underestimate the impact of gravitational deposition.

Error Number	Message and Brief Description
022	*** REEDM WARNING 022, GAP BETWEEN LAYERS MAY NOT PRODUCE REALISTIC GRAVITATIONAL SETTLING RESULTS, CONTINUE? (NO,YES)
	The bottom of the upper layer should coincide with the
	top of the upper layer for calculations of ${ m Al}_2{ m O}_3$
	concentrations.
023	*** REEDM WARNING 023, PRECIPITATION DEPOSITION CALCULATED AT RANGE=XXXXX, AZIMUTH=YYYYY, MET. LAYER ZZ MAY BE OVERESTIMATED.
	This message is displayed for washout deposition when
	the time of the start of precipitation is greater than
	the time for the cloud to fully pass the calculation
	point.
024	*** REEDM WARNING 024, ZERO WIND SPEED AT LEVEL XX, PROG. SUBSTITUTES 1.0 M/S
	DIRECTION NOT MODIFIED MAY BE INCORRECT.
	The program has detected a wind speed value of 0 in
	data level XX. The program substitutes a value of l
	m/s for the calm wind speed, but does not modify the
	wind direction. Examine the data file for errors in
	wind speed and wind direction.
025	*** REEDM WARNING 025, EOF READ IN FILE XXXXXX, NNNN SHOULD BE LAST IMAGE, DATA MAY BE TRUNCATED.
	The last image of a disc rawinsonde data file should

contain the characters NNNN in columns 1 through 4.

#### 5.3 METEOROLOGICAL UPPER AIR SOUNDING DATA FILE FORMATS

This section specifies the format and contents of the meteorological upper-air sounding (rawinsonde) data. Section 5.3.1 gives the format and contents of data files to be read from disc. Section 5.3.2 gives the format and contents of data files to be read from magnetic tape. All magnetic tape data are read from logical unit 8.

## 5.3.1 Disc File Format

This section describes the format and contents of the upper-air meteorological disc data file. Each meteorological data file contains one or more sets of upper-air sounding data. Each set of data begins with the characters TEST in columns I through 4 of the first record an ends with the characters NNNN in columns I through 4 of the last record. All blank records are ignored by the program. The order, contents and format of each data set are given on the following pages.

## 5.3.2 Tape File KSC65 Format

This section describes the format and contents of the upper-air meteorological tape data file. Each meterological data file contains one or more sets of upper-air sounding data in the KSC65 format. Each data set begins with the characters TEST in columns 1 through 4 of the first record. All blank records are ignored by the program. The order, contents and format of each data set are given on the following pages.

## 5.4 ASSEMBLING AND LOADING THE REEDM PROGRAMS

This section describes the procedures required to assemble and load the REEDM programs. Section 5.4.1 provides complete assembly instructions and Section 5.4.2 provides the complete load instructions.

DATA CARD COLUMN
12345678901234567890123456789012345678901234567890123456789012345678901234567890123456789012345678901234567890
The first record of each data set must begin with the characters TEST in columns 1 through 4. The characters XXXXX are replaced with the actual test number (09100) and the characters YYYYYY are replaced with the sounding designator (VD1212). The program uses this record (TE) to determine when it has read the first record of a sounding and otherwise uses it only for display purposes.
FORECAST  RAWINSONDE RUN AN/GMD-1.  The second record of each data set must begin with either RA or FØ in columns 1 and 2.  The program uses these characters to determine if the data are measured rawinsonde or forecast data and uses the remainder of the record only for display purposes.
CAPE, CANAVERAL AFS., FLORIDA.  This record gives the location of the sounding and is used for display purposes only.

550000	DATA CARD COLUMN
RECORD	1 2 3 4 5 6 7 8 9 0 1 2 3 4
4	
	This record gives the rawinsonde or forecast time and date. The characters HHHH are replaced with the Z-time (1212), DD are replaced with the day (12), MMM are replaced with the month (APR) and YYYY are replaced with the year (1981).
5	ASCENT, NBR XXXX
	This record gives the ascent number and is used for display purposes only. The characters XXXX are replaced with the ascent number (0154).
6	ALT, DIR SPD, TEMP DIPT, PRESS, RH, DENSITY
7	F,T, DEG KTS, DEG C DEG C, MBS, PCT, G/M3
	Records 6 and 7 are optional and are used as data headings in the data set. The actual data values are entered beginning in record 8 underneath their respective data heading and in the appropriate units.

RECORD		DATA CARD COLUMN
MEGOND	123456789	1   1   1   1   1   1   1   1   2   2
8 through	Records 8	D SSS TTT.T XXX.X PPPP.PP HHH EEEE.EE through n give the sounding data at each successive 1000 foot interval, beginning
	with the s	Height in feet entered as a whole number, right justified and filled with leading zeros (000016, 001000, etc.). The yalue must be filled with leading zeros, as the program keys on numeric characters to determine whether it has read a data
	DDD -	record. The program rejects all soundings with a height less than 10 or greater than 10000 feet.  Wind direction in whole degrees, right justified (110). The program rejects all sounding levels with a wind direction to the sounding levels with a wind direction.
	SSS -	sounding levels with a wind direction greater than 360 degrees Wind speed in whole knots, right justified (004). The program rejects all sound-
	TTT.T -	Temperature in degrees Celsius, right justified (17.0). If this value is entered as a whole number (without decimal point), the program assumes the low order digit (column 20) is tenths. The program rejects all sounding levels with a temperature
	XXX.X -	Dewpoint temperature in degrees Celsius, right justified (15.9). If this value is entered as a whole number (without decimal point), the program assumes the low order digit (column 26) is tenths. The program rejects all sounding levels with a
	PPPP.PP	dewpoint temperature greater than or equal to 99 (missing data)  Pressure in millibars, right justified (1023.40). If this value is entered as a whole number (without decimal point), the program assumed the two low order digits (columns 33, 34) are tenths and hundreths. The program rejects all soundings with a pressure greater than or equal to 9999 (missing data).

250000	DATA CARD COLUMN		
RECORD	1234567890123456789012345678901234567890123456789012345678901234567890		
	AAAAAA DDD SSS TTT.T XXX.X PPPP.PP HHH EEEE.EE		

# FORMAT AND CONTENTS OF DISC FILE DATA (CONT.)

RECORD	DATA CARD COLUMN
INCOME	12345678901234567890123456789012345678901234567890123456789012345678901234567890123456789012345678901234567890
n + 1	TERMINATION XXXXX GEOPET YYYYY MTRS GEOP ZZZZ MBS
	This record gives the height and pressure of the final rawinsonde observation and is optional.
	XXXXX - geopotential height in feet (98612)
	YYYYY - geopotential height in meters (30057)
	ZZZZ - pressure in millibars (11.9)

	RECORD	DATA CARD COLUMN			
	RECORD	123456789012345678901234567890123456789012345678901234567890123456789012345678901234567890			
	n + 2	TROPOPAUSE XXXXX FEET XXYXX MB ZZZZZ . G			
		This record gives the height of the tropopause and is optional  XXXXX - height in feet (42602)  YYYYYY - pressure in millibars (179.00)  ZZZZZ - temperature in degrees Celsius (-62.6)			
	n + 3	MANDATORY LEVELS			
06		This record must have MA entered in columns 1 and 2 and informs the program that mandatory data levels follow.			
	n + 4	ALT FT DIR KTS TEMP D/PT PRESS RH			
	n + 5	$G_{E,\emptyset}P_{\emptyset}T_{I,I,I}$			
		Records n+4 and n+5 are optional header records for the mandatory level data.			
	n + 6 through m	AAAAAA, DDD SSS, TTT.T XXX.X PPPP.P, HHH			
		Records n+6 through m give the sounding data at each successive mandatory pressure level.			
		AAAAAA - Height in feet entered as a whole number, right justified and filled with leading zeros (000670).			
		DDD - Wind direction in whole degrees, right justified (131).			

# FORMAT AND CONTENTS OF DISC FILE DATA (CONT.)

RECORD	DATA CARD COLUMN
RECORD	12345678901234567890123456789012345678901234567890123456789012345678901234567890123456789012345678901234567890
n + 6	AAAAAA, DDD SSS, TTT.T.T XXX.X PPPPP.P HUH
through m	
(cont.)	SSS - Wind speed in whole knots, right justified (911)
	TTT.T - Temperature in degrees Celsius, right justified (20.2). If this value is entered
	as a whole number, the program assumes the low order digit (column 20) is tenths. XXX.X - Dewpoint temperature in degrees Celcius, right justified (15.5). If this value is
	entered as a whole number, the program assumes the low order digit (column 26) is
	tenths.
	PPPP.P - Pressure in millibars, right justified (1000.0). If this value is entered as a whole
	number, the program assumes the low order digit (column 33) is tenths.
	HHH - Relative humidity in whole percent, right justified (75). If the value entered for
	relative humidity is 999, the program will calculate the relative humidity from the pressure and temperature data.
ļ	the pressure and temperature data.
ļ	
1	
1	

# FORMAT AND CONTENTS OF DISC FILE DATA (CONT.)

RECORD	DATA CARD COLUMN
	1234567890123456789012345678901234567890123456789012345678901234567890123456789012345678901234567890
m + 1	SIGNIFICANT LEVELS  This record must have SI entered in columns 1 and 2 and informs the program that data for significant levels follow.
m + 2	ALT, FT, DIR KTS, TEMP, D/PT, PRESS,
	Record m + 2 is an optional header record for the significant levels data.
m + 3 through  &	Records m + 3 through \( \ell \) give the sounding data at each remaining significant level.  AAAAAA - Height in feet entered as a whole number, right justified and filled with leading zeros (000501).  DDD - Wind direction in whole degrees, right justified (125).  SSS - Wind speed in whole knots, right justified (010).  TTT.T - Temperature in degrees Celsius, right justified (20.8). If this value is entered as a whole number, the program assumes the low order digit (column 20) is tenths.  XXX.X - Dewpoint temperature in degrees Celsius, right justified (16.1). If this value is entered as a whole number, the program assumes the low order digit (column 26) is tenths.  PPPP.PP - Pressure in millibars, right justified (1006.00). If this value is entered as a whole number, the program assumes the low order two digits (columns 33, 34) are tenths and hundreths.

KARAMORIANO DA NAMAMANA TABUTAN I

RECORD	DATA CARD COLUMN  1 2 3 4 5 6 7 8 9 0 1 2 3 4
l + 1	
	Record $\ell+1$ must contain NNNN in columns 1 through 4 and is used to indicate the end of the data set.

RECORD

1

TIEISITI IN BIR. I X.X.X.X.

DATA CARD COLUMN

RECORD	DATA CARD COLUMN
NECOND	1234567890123456789012345678901234567890123456789012345678901234567890123456789012345678901234567890
5	ASCIENIT NBIR XXXXXX This record gives the ascent number XXXX (9141) and is used only for display.
6	ALT FIL WDIR WKTS TEMP DEW PIL PRESS RH
	This record must have the characters AL entered in columns 1 and 2, the remaining information is used for heading labels only. The program uses the characters AL to indicate the following record begins the standard levels sounding data.
7 through n	AA,AA,AA,A DD.D. ISSS TTTT.T. XXXX.XI PRP.P.P. H.H.H.  Records 7 through n give the sounding data at standard levels at each successive 1000 feet, beginning with the surface observation.
	AAAAAAA - Height in feet entered as a whole number, right justified.  DDD - Wind direction in whole degrees, right justified. The program rejects all sounding levels with a wind direction greater than 360 degrees.  SSS - Wind speed in whole knots, right justified. The program rejects all sounding levels with a wind speed greater than or equal to 99 (missing data)  TTT.T - Temperature in degrees Celsius, right justified. If this value is entered as a whole number (without decimal point), the program assumes the low order digit is tenths. The program rejects any sounding level with a temperature greater than or equal to 99 (missing data).

#### FORMAT AND CONTENTS OF TAPE FILE DATA (CONT.)

RECORD	DATA CARD COLUMN
RECORD	1234567890123456789012345678901234567890123456789012345678901234567890123456789012345678901234567890
n + 1	This record is used to terminate the standard levels data by the characters TE entered in Columns 1 and 2. XXXXXXX gives the rawinsonde termination height and is optional.
n + 2	This record must have the characters ØR entered in columns 19 and 20. The program uses the characters ØR to indicate the mandatory sounding levels follow.
n + 3	ALT FT. WDIR WKTS TEMP DEW PT PRESS RH  This record is used as a data header only and is ignored by the program.
n + 4 through m	AAAAAAA DDD SSS TTT.T. XXX.X PPPP.P HHH  Records n + 4 through m give the sounding data at mandatory pressure levels.  AAAAAAA - Height in feet entered as a whole number, right justified.  DDD - Wind direction in whole degrees, right justified. The program rejects all sounding levels with a wind direction greater than 360 degrees.

### FORMAT AND CONTENTS OF TAPE FILE DATA (CONT.)

ſ	חבכסחח	DATA CARD COLUMN
	RECORD	23456789012345678
	n + 4 through m (cont.)	AMAMAMAM DDD III SSS ITTT. I XXXX X PPPPP P P P P P P P P P P P P
		TT.T - Temperature in degrees Celsius, right justified. If this value is entered as a whole number (without decimal point), the program assumes the low order digit is tenths. The program rejects any sounding level with a temperature greater than or equal to 99 (missing data).
		Dewpoint temperature in degrees Celsius, right justified. If this value is entered as a whole number (wihout decimal point), the program assumes the low order digit is tenths. The program rejects all sounding levels with a dewpoint temperature greater than or equal to 99 (missing data).
		PPPP.P - Pressure in millibars, right justified. If this value is entered as a whole number (without decimal point), the program assumes the low order digit is tenths The program rejects all sounding levels with a pressure greater than or equal to 999 (missing data).
		- Relative humidity in whole percent, right justified. If the value entered for relative humidity is 999 (missing data), the program will calculate the relative humidity from the pressure and temperature data.

#### 5.4.1 Assembling REEDM

The REEDM computer program source code consists of a main module &REEDM plus 20 segment and subroutine models &READM, &REDAM, &RDATM, &RDATM, &RCLDM, &RCLDM, &RCLDN, &RMMRM, &RMMRN, &RDHMM, &RCONM, &RCNOM, &RCONN, &RPDPM, &RPDPN, &RGDPM, &RGDPM, &RGDPN, &RSUBM, &RCIMM, &RCIMN. All modules ending in M, except &RSUBM consist of a segment entry program and associated subroutines. All modules ending in N plus &RSUBM contain only subroutines. Figure 3 shows an HP1000 transfer file used to assemble all of the REEDM modules. The transfer file is executed by entering, under file manager (FMGR) -

#### :TR,\RMAS,1G,2G,3G,4G

where

- 1G = print output logical unit number
- 2G = a minus symbol ("-") if relocatable modules are to be created or omitted if not.
- 3G = number of lines per page for the list device. Default is 56
  if omitted
- 4G = enter an L or Q for a complete source listing or omit for a summary listing

The above globals 1G through 4G correspond to the second through fifth parameters passed to the FTN4 program. See your HP1000 Fortran manual under executing FTN4 for a more complete description of these parameters. Figure 3 shows that the transfer fill purges all of the REEDM relocatable modules (% files). Also, Figure 3 assumes the file security code is "NA" and all files reside on disc logical unit "-9".

```
:*
                           UPDATE: 8213 SOURCE: 02 APR 82
:*
:*
                      :TR,\RMAS,1G,2G,3G,4G
:*
      THIS TRANSFER FILE COMPILES ALL OF THE REEDM PROGRAM SOURCE
      FILES. FIRST ALL OF THE RELOCATABLE FILES ARE PURGED.
*
:*
      SOURCE FILES ARE COMPILED WHERE THE USER MAY PASS THE FTN4
:*
      PARAMETER OPTIONS IN GLOBAL PARAMETERS ONE THROUGH FOUR.
:*
      GLOBALS CORRESPOND TO THE SECOND THROUGH FIFTH OPTIONS OF THE
:*
      FTN4 PROGRAM. FOR EXAMPLE, :TR,\RMAS,6,-,,L COMPILES ALL OF THE
: *
      REEDM SOURCE FILES, SENDING THE PRINT OUTPUT TO LOGICAL UNIT 6,
:*
      CREATING RELOCATABLE FILES, NAMES BEGINING WITH THE % CHARACTER
:*
      (THE "-" OPTION), AND CREATING A SOURCE LISTING (THE "L" OPTION).
:*
:PU, %REEDM:NA:-9
: PU, %READM: NA: -9
:PU, %REDAM: NA:-9
: PU, %RDATM: NA: -9
:PU, %RDATN:NA:-9
: PU, %RCLDM: NA: -9
:PU, %RCLDN:NA:-9
: PU, %RMMRM: NA: -9
:PU, %RMMRN:NA:-9
: PU, %RDHMM: NA: -9
:PU, %RCONM:NA:-9
: PU, %RCNOM: NA: -9
:PU, %RCONN:NA:-9
:PU, %RPDPM:NA:-9
:PU, %RPDPN:NA:-9
:PU, %RGDPM: NA:-9
:PU, %RGPDM:NA:-9
:PU, %RGDPN:NA:-9
:PU, %RSUBM: NA:-9
:PU, %RCIMM:NA:-9
:PU, %RCIMN:NA:-9
:RU,FTN4,&REEDM:NA:-9,1G,2G,3G,4G
:RU,FTN4,&READM:NA:-9,1G,2G,3G,4G
:RU,FTN4,&REDAM:NA:-9,1G,2G,3G,4G
:RU,FTN4,&RDATM:NA:-9,1G,2G,3G,4G
:RU,FTN4,&RDATN:NA:-9,1G,2G,3G,4G
:RU,FTN4,&RCLDM:NA:-9,1G,2G,3G,4G
:RU,FTN4,&RCLDN:NA:-9,1G,2G,3G,4G
```

FIGURE 3. Example HP1000 transfer file used to assemble the REEDM source modules (%) into relocatable modules (%).

Figure 3. (Continued)

#### 5.4.2 Loading REEDM

The REEDM absolute program consists of the main program REEDM plus 12 segments; READM, REDAM, RDATM, RCLDM, RDHMM, RCONM, RCNOM, RPDPM, RGDPM, RGPDM, RMMRM AND RCIMM. The REEDM program and segments require a minimum of 24 consecutive LG tracks to load. Figure 4 shows an example HP1000 transfer file used to load the REEDM program. The transfer file is executed by entering, under file manager (FMGR)

:TR,\RMLD,1G

where

#### 1G = Print output logical unit number

Figure 4 shows the loader (LOADR) is to obtain all of the load commands from disc file LREEDM, shown in Figure 5. Also, Figure 4 shows an additional transfer to file \RMOF, shown in Figure 6, used to remove any old copies of REEDM from the LG tracks prior to executing LOADR. Upon completion of the loading of REEDM, the user may execute REEDM and/or may save the absolute programs on disc. Figure 7 shows a transfer file \RMRP used to restore the REEDM program from disc to the LG tracks or save the REEDM programs from the LG tracks to disc or to purge the saved REEDM absolute programs from disc. This transfer file is executed by entering under file manager (FMGR)

:TR,\RMRP,1G,2G,3G

where

1G = PU to purge the absolute REEDM programs. RP to restore the absolute REEDM programs from disc to the LG tracks. This is not necessary if the absolute programs have been saved on a system disc. SP to save the REEDM programs from the LG tracks to disc.

```
************************
:*
                         UPDATE: 8213 SOURCE: 02 APR 82
:*
:*
                    :TR,\RMLD,IG
:*
      THIS TRANSFER FILE LOADS THE REEDM PROGRAMS FOR EXECUTION.
:*
      FIRST, ALL REEDM PROGRAMS ARE PERMANENTLY REMOVED FROM THE
:*
      SYSTEM. THEN THE LOADR PROGRAM IS RUN FOR EACH OF THE
:*
      REEDM PROGRAMS. THE USER MAY PASS THE LOGICAL UNIT NUMBER
:*
      FOR LISTING THE LOADR MAPS. FOR EXAMPLE,
      :TR,\RMLD,6 LOADS THE REEDM PROGRAMS, AND LISTS THE
:*
: *
      LOAD MAP ON LOGICAL UNIT 6.
:*
***********************
:CA,2,1G
:,\RMOF,8
:IF,2G,NE,8,1
:CA,2,1
:RU,LOADR,LREEDM,,2G
:TR,-1,0,0,0
```

FIGURE 4. Example HP1000 transfer file for loading the relocatable modules (%) into an absolute program using commands from file LREEDM.

```
"LREEDM - REEDM UPDATE 8213, 02 APR 82 - LOADR COMMANDS"
OP,LB
RE, % REEDM
RE, %READM
RE, %REDAM
SE
RE, %RDATM
RE, %RDATN
SE
RE, %RCLDM
RE, %RCLDN
SE
RE, %RMMRM
RE, %RMMRN
SE
RE, %RDHMM
SE
LI,%RSUBM
RE, %RCONM
RE, %RCONN
SL
SE
LI,%RSUBM
RE, %RCNOM
RE, %RCONN
SL
SE
LI,%RSUBM
RE, %RPDPM
RE, %RPDPN
SL
SE
LI,%RSUBM
RE, %RGDPM
RE, %RGDPN
SL
SE
LI,%RSUBM
RE, %RGPDM
RE, %RGDPN
SL
SE
RE, %RCIMM
RE, %RCIMN
SE
EN
```

FIGURE 5. LOADR command sequence used in loading the REEDM programs.

```
************************
: *
                         UPDATE: 8213 SOURCE: 02 APR 82
:*
:*
                        :TR,\RMOF, IG
:*
      THIS TRANSFER FILE "OFs" ALL REEDM PROGRAMS. THE USER HAS THE
:*
      OPTION TO EITHER ABORT ALL ACTIVE REED PROGRAMS, OR TO
:*
      PERMANENTLY REMOVE ALL REEDM PROGRAMS FROM THE SYSTEM BY
      RESPECTIVELY PASSING A "1" OR AN "8" IN THE FIRST GLOBAL
:*
:*
      PARAMETER. FOR EXAMPLE, :TR, \RMOF, 1 ABORTS ALL ACTIVE
:*
      REEDM PROGRAMS.
:*
:IF,1G,NE,,1
:SE,1
:SYOF, REEDM, 1G
:SYOF, READM, 1G
:SYOF, REDAM, 1G
:SYOF, RDATM, 1G
:SYOF, RCLDM, 1G
:SYOF, RMMRM, 1G
:SYOF, RDHMM, 1G
:SYOF, RCONM, 1G
:SYOF, RCNOM, 1G
:SYOF, RPDPM, 1G
:SYOF, RGDPM, 1G
:SYOF, RGPDM, 1G
:SYOF, RCIMM, 1G
```

FIGURE 6. Example HP1000 transfer file used to abort the REEDM programs, if 1G equals 1 or abort and remove the REEDM programs from the LG tracks, if 1G equals 8.

- 2G = The logical unit number of the disc on which the programs reside or will reside.
- 3G = This global is used only when 1G equals RP and if set to NP, the REEDM plot programs are not restored to the LG tracks. This option is used to minimize LG track usage when no plotting is desired.

#### REFERENCES

- Dumbauld, R. K.; Bjorklund, J. R.; Cramer, H. E.; and Record, F. A.:
  "Handbook for Estimating Toxic Fuel Hazards." NASA-CR-61326,
  1970, H. E. Cramer Co., NASA Contract NAS8-21453, 1969.
- Dumbauld, R. K.; Bjorklund, J. R.; and Bowers, J. F.: "NASA/MSFC Multilayer Diffusion Models and Computer Program For Operational Prediction of Toxic Fuel Hazards." NASA CR-129006, 1973, H. E. Cramer Co., NASA Contract NAS8-29033.
- 4. Stephens, J. Briscoe; and Stewart, Roger B.: "Rocket Exhaust Effluent Modeling for Tropospheric Air Quality and Environmental Assessments." NASA TR R-473, 1977.
- 5. Bjorklund, J. R.; and Dumbauld, R. K.: "User's Instructions for the NASA/MSFC Cloud-Rise Preprocessor Program-Version 6, and the NASA/MSFC Multilayer Diffusion Program-Version 6 (Research Version for UNIVAC 1108 System)." NASA CR-2945, 1978, H. E. Cramer Co., Contract No. NAS8-31841.
- 6. Stephens, J. B.: "Diffusion Algorithms and Data Reduction Routine for Onsite Real-Time Launch Predictions for the Transport of Delta-Thor Exhaust Effluents." NASA TN-D-8194, 1976.

=

- 7. Gregory, Gerald L.; Hulten, William C.; and Wornom, Dewey E.: "Apollo Saturn 511 Effluent Measurements from the Apollo 16 Launch Operations An Experiment." NASA TM X-2910, March 1974.
- 8. Hulten, William C., et al.: "Effluent Sampling of Scout "D" and Delta Launch Vehicle Exhausts." NASA TM X-2987, July 1974.
- 9. Gregory, Gerald L.; Hudgins, Charles H.; and Emerson, Burt R., Jr.:
  "Evaluation of Chemiluminescent Hydrogen Chloride and a NDIR
  Carbon Monoxide Detector for Environmental Monitoring." 1974
  JANNAF Propulsion Meeting, San Diego, Calif., October 22-24,
  1974.
- 10. Stephens, J. B., ed: "Atmospheric Diffusion Predictions for the Exhaust Effluents from the Launch of a Titan IIIC, December 13, 1973." NASA TM X-64925, September 27, 1974.
- 11. Stephens, J.B.; Susko, M.; Kaufman, J. W; and Hill, K. C.: "An Analytical Analysis of the Dispersion Predictions for Effluents from the Saturn V and Scout-Algol III Rocket Exhausts." NASA TM-X-2935, 1973.

#### REFERENCES (Continued)

- 12. Goldford, A. I.; Adelfang, S. I.; Hickey, J. S.; Smith, S. R.; Welty, R. P.; and White, G. L.: "Environmental Effects from SRB Exhaust Effluents Technique Development and Preliminary Assessment."

  NASA CR 2923, 1977, Science Applications, Inc., NASA Contract NAS8-31806.
- 13. Briggs, G. A.: "Plume Rise." TID-25075, 1969, Clearinghouse for Federal Scientific and Technical Information, Springfield, VA.
- 14. Briggs, G. A." Some recent analysis of plume rise observations."

  Paper ME-8E presented at the Second International Clean Air Congress,
  Washington, D.C., Dec. 6-11, 1970.
- 15. Golder, D.: "Relations Among Stability Parameters in the Surface Layer." Boundary-Layer Meteorology, 3, 47-58, Sep 1972.
- 16. Swanson, R. N.; and Cramer, H. E.: "A Study of Lateral and Longitudinal Turbulence." J. Appl. Meteor., 4, 409-417, 1965.
- 17. Cramer, H. E.; Record, F. A.; and Tillman, J. E.: "Round Hill Turbulence Measurements. Vols. II, III, IV and V. Techn. Rpt. ECOM-65-G10, Atmospheric Sciences Laboratory, Ft. Huachuca, AZ, 1966.
- 18. Lumley, J. L., and Panofsky, H. A.: "The Structure of Atmospheric Turbulence." Interscience Publishers, 1964.
- 19. Cramer, H. E., et al.: "Meteorological Prediction Techniques and Data System." Tech. Rpt. 64-3-G, GCA Corporation, U. S. Army Dugway Proving Ground Contract DA-42-007-CML-552, 1964.
- 20. Osipov, Y. S.: "Diffusion From a Point Source of Finite Time of Action." AICE Survey of USSR Air Pollution Literature, National Technical Information Service, Springfield, VA, 1972.
- 21. Pasquill, F.: "The Dispersion of Materials in the Atmospheric Boundary Layer-The Basis for Generalization." Lectures on Air Pollution and Environmental Impact Analysis, Amer. Meteor. Soc., Boston, MA, 29 Sep-3 Oct, 1975.
- 22. Gifford, F. A.: "Atmospheric Dispersion Models for Environmental Pollution Applications." Lectures on Air Pollution and Environmental Impact Analyses, Amer. Meteor. Soc., Boston, MA, 29 Sept 3 Oct. 1975.
- 23. Knutson, E. O.; and Fenton, D. L.: "Atmospheric Scavenging of Hydro-chloric Acid", NASA-CR-2598, 1975, IIT Research Institute, NASA Contract NAS8-31947.

#### APPENDIX A

#### EXAMPLE REEDM PROGRAM CALCULATIONS

Example REEDM calculations have been made for concentration/dosage, washout-deposition and gravitational deposition for a normal launch of the Space Shuttle vehicle to illustrate the output format of REEDM calculations. The meteorological data used in the calculations are described in Section A.1. The results of the calculations, including the computer printout, are described in Section A.2.

#### A.1 METEOROLOGICAL DATA

Ground-level concentration/dosage, washout deposition and gravitational deposition calculations were made from meteorological data obtained from rawinsonde observations made at Cape Kennedy, Florida for the launch of the Space Shuttle on 12 November 1981. Figure A-1 shows the meteorological data file as read by the REEDM program. The line numbers on the left of Figure A-1 have been inscribed on the figure to illustrate the record number and are not part of the data file. Only data up to and including 10,000 ft. (3048 m) are used by the REEDM program. Figure A-2 shows a meteorological profile plot of the wind speed, wind direction, temperature and potential temperature made by the REEDM program using this data set.

#### A.2 REEDM CALCULATION RESULTS

Five example executions (4 interactive operational, 1 batch production) of the REEDM program are shown in this section, all made using the meteorological data shown in Section A.1. REEDM output listings in this section have been slightly modified for ease of documentation. Figure A-3 shows the program output for HCl concentration, dosage and 10-minute timemean concentration for the normal launch of the Space Shuttle vehicle.

RECORD NUMBER			(BE		ENTS N COL.	1)						
05.	TEST NBR 09101 T MINUS 0 RRSOND (VK1215) RAWINSONDE RUN AN/GMD-1 CAPE CANAVERAL AFS, FLORIDA 1515Z 12 NOV 1981 ASCENT NBR 0434											
06. 07. 08. 09.	ALT FT		SPD KTS	TEMP DEG C	D/PT DEG C	PRESS MBS	RH PCT	ABHUM G/M3	DENSITY G/M3	I/R N	V/S KTS	SHEAR /SEC DEG
11. 12. 13. 14.	000016 001000 002000	351	020	18.5 15.2	14.0 13.0	0982.28 0947.92	075 087	11.89 11.25	1166.15 1138.51	331 322	668 664	.000 000 .022 041 .008 096
15. 16. 17.	003000 004000 005000	016 004	016 014	12.2 11.7	-2.3 -3.4	0881.91 0850.42	039 035	04.18 03.64	1074.10 1038.03	265 254	659 659	.008 116 .003 224 .006 242
18. 19. 20. 21.	007000 008000	358 006	010 012	7.4 6.0	-6.1 -8.2	0790.28 0761.54	038 035	03.07 02.56	0979.62 0949.01	237 227	653 652	.007 218 .002 108 .005 036 .006 337
22. 23. 24.	010000 011000 012000	354 346 337	017 017 018	5.6 4.6 3.1	-17.8 -18.5 -19.5	0707.01 0681.13 0656.11	017 017 017	01.17 01.10 01.02	0883.01 0853.61 0826.90	204 197 191	651 650 648	.004 309 .004 258 .005 268
25. 26. 27.	013000 014000 015000	333 334 335	020 022 023	.4 -2.1 -3.9	-21.2 -23.2 -25.3	0631.81 0608.21 0585.31	018 018 017	00.89 00.75 00.63	0804.07 0781.14 0756.90	185 179 173	645 642 640	.004 301 .004 337 .001 012
28. 29. 30.	017000 018000	322 313	022 023	-9.4 -12.1	-29.3 -31.1	0541.46 0520.47	018 019	00.44	0715.06 0694.48	162 157	633 630	.002 209 .006 245 .006 241 .006 241
31. 32. 33. 34.	020000 TERMIN	302 ATIO	028 N	-17.0 88	-35.1 745 GE	0480.32 OPFT 27	019 049 1	00.26 MTRS G	0653.22	147 .5 M	624 BS	.007 282

FIGURE A-1. REEDM example run meteorological data file, taken from rawinsonde observation at Cape Kennedy, Florida 12 November 1981.

```
RECORD
                        CONTENTS
NUMBER
                   (BEGINS IN COL. 1)
 35.
       MANDATORY LEVELS
 36.
       ALT FT DIR KTS TEMP D/PT PRESS
 37.
       GEOPOT
 38.
 39.
 40.
       000493 337 017 20.4 14.7 1000.0 070
 41.
       001936 003 019 15.4 13.1 0950.0 086
 42.
       003435 028 017 11.7 11.7 0900.0 100
 43.
       005005 004 013 11.6 -3.3 0850.0 035
 44.
       006658 352 010
                      7.8 -3.3 0800.0 045
 45.
       008396 006 014
                      5.7 -9.4 0750.0 034
 46.
       010248 352 017
                      5.3 -18.0 0700.0 017
 47.
       012224 335 018 2.3 -20.0 0650.0 017
 48.
       014324 334 022 -2.8 -24.0 0600.0 018
       016565 326 022 -8.4 -28.5 0550.0 018
 49.
 50.
       018960 305 024 -15.1 -33.2 0500.0 019
 51.
       SIGNIFICANT LEVELS
 52.
       ALT FT DIR KTS TEMP D/PT PRESS I/R
 53.
 54.
 55.
       000016 310 015 22.4 16.0 1016.90 345
       002235 008 019 14.4 12.5 0939.99 319
 56.
       003441 028 017 11.7 11.7 0899.98 308
 57.
 58.
       003718 018 016 12.2 2.2 0890.98 275
 59.
       004375 013 016 12.2 -8.2 0869.98 252
       006670 352 010
 60.
                      7.8 -3.3 0799.98 244
 61.
       007425 005 011
                      6.8 -9.7 0777.97 230
 62.
       008269 007 013
                      5.6 -7.6 0753.97 226
 63.
       009140 359 016
                      6.5 -18.7 0729.97 209
                      4.4 -18.8 0666.97 193
 64.
       011563 340 017
       019310 303 025 -16.0 -33.9 0493.90 151
 65.
 66.
 67.
       NNNN
```

FIGURE A-1. (Continued)

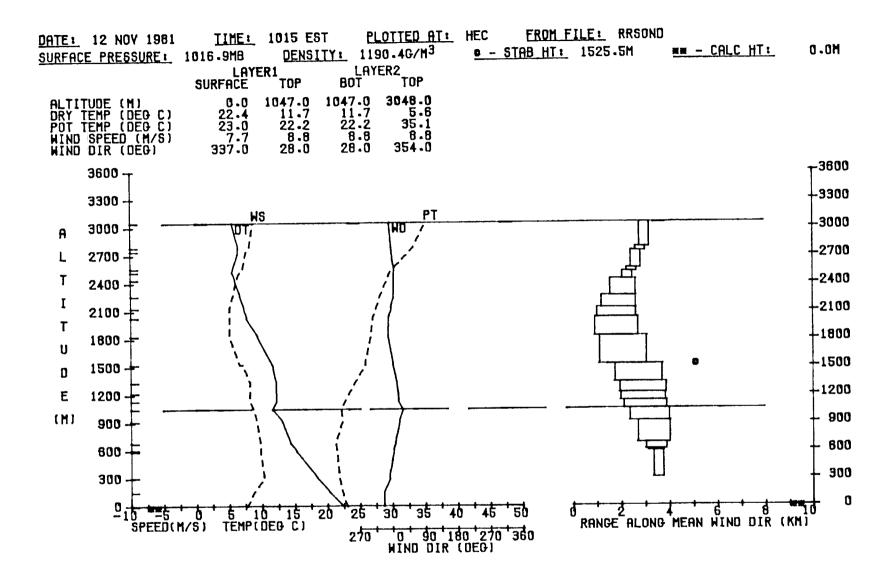


FIGURE A-2. Meteorological profile plot of wind speed, wind direction, temperature and potential temperature, taken from rawinsonde observations at Cape Kennedy, Florida, 12 November 1981.

PLOTTED AT: MMM 254. 1 JUL 1982 MMM

This output was produced from an interactive run where all parameters except the layer-height parameters were defaulted. The layer parameters were changed to reflect the layer structure shown in Figure A-2. Figure A-2 shows the base of an upper-air inversion at 1047 meters. Thus the top of the lower layer and bottom of the upper layer were set to 1047 meters and the top of the upper layer was set to 3048 meters (maximum height used by program). The first page of Figure A-3 (page A-6) shows the launch time and date, the time and date of the program execution, and the REEDM model options selected for the execution of the program. The second page of Figure A-3 (page A-7) shows the meteorological data (from Figure A-1) used by the program. Page 3 of Figure A-3 (page A-8) shows calculated cloud rise, cloud stabilization and turbulence data calculated by the program. Pages 4 through 6 of Figure 3 (pages A-9 through A-11) show the maximum centerline HCl ground-level concentration (maximum of .901 PPM at 10017.4 m, 183.4° relative to launch pad 39A), dosage (maximum of 73.605 PPM seconds at 10025.7 m,  $184.1^{\circ}$  relative to launch pad 39A), and 10 minute time mean concentration (maximum of .123 PPM at 10025.7 m, 184.1° relative to launch pad 39A) at various distances along the cloud trajectory downwind from the launch pad. The cloud arrival and departure times at each range and bearing from the pad are also given. The layer heights in which the calculations apply are listed at the top of pages 4 through 6 of the listing. Figure A-4 is a plot of maximum ground-level HCL concentrations and dosages along the cloud centerline as a function of distance from the pad from calculations shown in Figure A-3. Figure A-5 shows HCL concentration isopleths plotted by the computer program on the (land) map of Kennedy Space Center for the meteorological and source inputs shown in Figure A-3.

Figure A-6 shows the output of an identical run to that shown in Figure A-3, except the calculations have been made for  ${\rm Al}_2{\rm O}_3$  rather than HCl. The program output shows maximum ground-level centerline concentration, dosage and 10-minute time-mean concentration due to the  ${\rm Al}_2{\rm O}_3$  in the Space Shuttle exhaust cloud. Figure A-7 shows a plot of the maximum ground-level centerline  ${\rm Al}_2{\rm O}_3$  concentration and dosage along the centerline of the cloud

\*\*\*\*\* \*\*\*\*\* \*\*\*\*\*\*\* NASA/MSFC MULTIPLE LAYER TECHNIQUE - REEDM \*\*\*\*\*\*\*\*\*\* \*\*\*\*\*\* UPDATE 8213 LOCATION HEC \*\*\*\*\*\*\*\*\* \*\*\*\*\*\* 

SPACE SHUTTLE

NORMAL LAUNCH

LAUNCH TIME:

915 EST DATE: 12 NOV 1981 TIME OF EXECUTION: 247 EST DATE: 1 JUL 1982

\*\*\*\*\*\*

MODEL OPTIONS

\*\*\*\*\*\* CONCENTRATION/DOSAGE

MODEL METEOROLOGICAL DATA SOUNDING RUN TYPE LAUNCH VEHICLE LAUNCH TYPE LAUNCH COMPLEX NUMBER SPECIES CLOUD SHAPE CALCULATION HEIGHT PROPELLANT TEMPERATURE (DEG. C)

RRSOND OPERATIONAL SPACE SHUTTLE NORMAL 39A HCLELLIPTICAL

\*\*\*\*\*\*\* METEOROLOGICAL DATA

SURFACE 22.86 \*\*\*\*\*\* RUN NUMBER: 1 USING METEOROLOGICAL DATA FILE: RRSOND

TEST NBR 09101 T MINUS 0 RAWINSONDE RUN AN/GMD-1

RRSOND (VK1215)

CAPE CANAVERAL AFS, FLORIDA

ASCENT NBR 0434

TIME: 1015 EST DATE: 12 NOV 1981

FIGURE A-3. REEDM program output listing for an operational, interactive run producing ground level-concentration, dosage and 10-minute time mean concentration of HCl.

MET LEVEL NO.	AL' (FT)	TITUDE (M)	DIR. (DEG)	SPI (M/S)	EED (KTS)	TEMP	(DEG.	DPTEMP C)	(MB.)	RH (%)	
1	16	4.9	337.0	7.72	15.00	22.4		16.0		67.0	
2	493	150.3	337.0	8.75	17.00	20.4	22.28	14.7	1000.0	70.0	
3	1000	304.8	351.0	10.30	20.00	18.5	21.83	14.0	982.3	75.0	
4	1936	590.1	3.0	9.78	19.00	15.4	21.46	13.1	950.0	86.0	
5	2000	609.6	4.0	9.78	19.00	15.2	21.45	13.0	947.9	87.0	
6	2235	681.2	8.0	9.78	19.00	14.4	21.29	12.5	940.0	88.4	
7	3000	914.4	19.0	9.27	18.00	13.2	22.35	11.6	914.4	90.0	
8	3435	1047.0	28.0	8.75	17.00	11.7	22.19	11.7	900.0	100.	
9	3441	1048.8	28.0	8.75	17.00	11.7	22.19	11.7	900.0	100.	
10	3718	1133.2	18.0	8.24	16.00	12.2	22.76	2.2	891.0	50.8	
11	4000	1219.2	16.0	8.24	16.00	12.2	23.42	-2.3	881.9	39.0	
12	4375	1333.5	13.0	8.24	16.00	12.2	24.32	-8.2	870.0	23.7	
13	5000	1524.0	4.0	7.21	14.00	11.7	25.95	-3.4	850.4	35.0	
14	5005	1525.5	4.0	6.69	13.00	11.6	25.88	-3.3	850.0	35.0	
15	6000	1828.8	351.0	5.15	10.00	9.5	26.81	-3.1	819.9	41.0	
16	6658	2029.4	352.0	5.15	10.00	7.8	27.13	-3.3	800.0	45.0	
17	6670	2033.0	352.0	5.15	10.00	7.8	27.14	-3.3	800.0	46.1	
18	7000	2133.6	358.0	5.15	10.00	7.4	27.64	-6.1	790.3	38.0	
19	7425	2263.1	5.0	5.66	11.00	6.8	28.24	-9.7	778.0	30.5	
20	8000	2438.4	6.0	6.18	12.00	6.0	29.28	-8.2	761.5	35.0	
21	8269	2520.4	7.0	6.69	13.00	5.6	29.76	-7.6	754.0	39.0	
22	8396	2559.1	6.0	7.21	14.00	5.7	30.27	-9.4	750.0	34.0	
23	9000	2743.2	0.0	7.72	15.00	6.4	32.74	-16.	733.8	18.0	
24	9140	2785.9	359.0	8.24	16.00	6.5	33.27	-18.	730.0	15.3	
25	10000	3048.0	354.0	8.75	17.00	5.6	35.13	-17.	707.0	17.0	

\*\* - INDICATES THAT DATA IS LINEARLY INTERPOLATED FROM INPUT METEOROLOGY

FIGURE A-3. (Continued)

MET. LAYER NO.	TOP OF LAYER (METERS)	CLOUD RISE TIME (SECONDS)	RANGE FROM PAD (METERS)	AZIMUTH BEARING FROM PAD (METERS)
_				
1	150.3	3.9	0.0	0.0
2	304.8	13.5	0.0	0.0
3	590.1		3527.3	176.5
4	609.6	46.3	3442.2	182.2
5	681.2	56.4	3438.8	184.4
6	914.4	95.3	3347.8	190.6
7	1047.0	121.5	3184.5	197.7
8	1048.8	121.9	3106.7	200.5
9	1133.2	140.1	3067.8	197.2
10	1219.2	160.1	3028.1	193.6
11	1333.5	194.1	3031.5	192.3
12	1524.0	285.5	2950.9	189.8
13	1525.5	331.6	2896.9	189.1
14	1828.8	352.8 *	2891.4	189.1
15	2029.4	352.8 *	1817.1	171.5
16	2033.0	352.8 *	1817.1	172.0
17	2133.6	352.8 *	1817.1	175.0
18	2263.1	352.8 *	1908.0	181.5
19	2438.4	352.8 *	2089.7	185.5
20	2520.4	352.8 *	2271.4	186.5
21	2559.1	352.8 *	2453.1	186.5
22	2743.2	352.8 *	2634.8	183.0
23	2785.9	352.8 *	2816.5	179.5
24	3048.0	352.8 *	2998.3	176.5

<sup>\* -</sup> INDICATES CLOUD STABILIZATION TIME WAS USED

<sup>\*\* -</sup> RANGE FROM PAD IS AT CLOUD STABILIZATION TIME

*****	CLOUD STABILIZATION	***********
CALCULATION HEIGHT	(METERS)	0.00
STABILIZATION HEIGHT	(METERS)	1525.52
STABILIZATION TIME	(SECS)	352.84
FIRST MIXING LAYER HEIGHT:	(METERS)	TOP = 1046.99
		BASE= $0.00$
SECOND SELECTED LAYER HEIGHT	: (METERS)	TOP = 3048.00
		BASE= 1046.99
SIGMAR(AZ) AT THE SURFACE	(DEGREES)	13.6138
SIGMER(EL) AT THE SURFACE	(DEGREES)	13.6138
FIGURE A-3. (Continued)		

MAXIMUM CENTERLINE CALCULATIONS

\*\*\*\*\*\*\*\*\*\*

FOR HCL AT A HEIGHT OF 0.00 METERS
DOWNWIND FROM A SPACE SHUTTLE NORMAL LAUNCH
CALCULATIONS APPLY TO THE LAYER BETWEEN 0.00 AND 1046.99 METERS

THE METEOROLOGICAL DATA IS FROM 1015 EST 12 NOV 1981 LAUNCH TIME IS 915 EST 12 NOV 1981 TIME OF EXECUTION IS 247 EST 1 JUL 1982

RANGE FROM PAD (METERS)	BEARING FROM PAD (DEGREES)	PEAK CONCEN- TRATION (PPM)	CLOUD ARRIVAL TIME (MIN)	CLOUD DEPARTURE TIME (MIN)
5003.600	177.805	.027	2.853	9.636
6005.456	182.420	.210	4.510	11.623
7016.485	183.906	.543	6.167	13.610
8017.253	183.738	.783	7.822	15.598
9023.207	184.088	.889	9.477	17.585
10017.361	183.352	.901	11.131	19.573
11020.912	183.508	.861	12.783	21.560
12017.078	183.033	.799	14.435	23.548
13013.943	182.631	.734	16.087	25.535
14011.359	182.285	.673	17.737	27.523
15018.668	182.835	.618	19.387	29.510
16016.621	182.589	.571	21.036	31.497
17014.836	182.371	.530	22.685	33.485
18013.270	182.177	.493	24.333	35.472
19011.887	182.004	.461	25.981	37.460
20010.660	181.848	.433	27.628	39.447
21009.566	181.707	.407	29.275	41.435
22008.594	181.579	.384	30.921	43.422
23007.715	181.462	.363	32.567	45.409
24006.930	181.355	.344	34.213	47.397
25006.219	181.256	.327	35.858	49.384
26005.574	181.165	.311	37.503	51.372
27005.000	181.080	.296	39.148	53.359
28004.469	181.002	.283	40.793	55.347
29003.992	180.929	.270	42.437	57.334

						RANGE	BEARING
.901	IS	THE	MAXIMUM	PEAK	CONCENTRATION	10017.4	183.4

FIGURE A-3. (Continued)

\*\*\*\*\*

\* \*\*\*\*\*\* \*\*\*\*\*\* \*\*\*\*\*\* REEDM UPDATE 8213 LOCATION HEC \*\*\*\*\*\* \*\*\*\*\*\* CONCENTRATION/DOSAGE MODEL \*\*\*\*\*\*\*\* \*\*\*\*\* \*\*\*\*\* \*

\*\*\*\*\*

MAXIMUM CENTERLINE CALCULATIONS

\*\*\*\*\*\*\*\*\*\*

FOR HCL AT A HEIGHT OF 0.00 METERS DOWNWIND FROM A SPACE SHUTTLE NORMAL LA CALCULATIONS APPLY TO THE LAYER BETWEEN 0.00 AND 1046.99 METERS

NORMAL LAUNCH

THE METEOROLOGICAL DATA IS FROM 1015 EST 12 NOV 1981 LAUNCH TIME IS 915 EST 12 NOV 1981 247 EST 1 JUL 1982 TIME OF EXECUTION IS

RANGE FROM PAD (METERS)	BEARING FROM PAD (DEGREES)	TOTAL DOSAGE (PPM SEC)	CLOUD ARRIVAL TIME (MIN)	CLOUD DEPARTURE TIME (MIN)
5002.480 6017.630 7027.479 8030.907 9023.207 10025.654 11020.912 12017.078 13023.785 14021.031 15018.668 16016.621 17014.836 18013.270 19011.887 20010.660 21009.566 22008.594 23007.715 24006.930 25006.219 26005.574 27005.000	178.174 184.365 185.047 185.007 184.088 184.078 183.508 183.033 183.441 183.117 182.835 182.589 182.371 182.177 182.004 181.848 181.707 181.579 181.462 181.355 181.256 181.165 181.080	.720 12.695 39.661 61.136 71.557 73.605 70.921 66.219 61.114 56.281 51.963 48.187 44.895 42.014 39.477 37.227 35.218 33.414 31.784 30.306 28.959 27.726 26.593	2.853 4.510 6.167 7.822 9.477 11.131 12.783 14.435 16.087 17.737 19.387 21.036 22.685 24.333 25.981 27.628 29.275 30.921 32.567 34.213 35.858 37.503 39.148	9.636 11.623 13.610 15.598 17.585 19.573 21.560 23.548 25.535 27.523 29.510 31.497 33.485 35.472 37.460 39.447 41.435 43.422 45.409 47.397 49.384 51.372 53.359
28004.469 29016.262	181.002 181.896	25.549 24.585	40.793 42.437	55.347 57.334

RANGE BEARING 10025.7 184.1

73.605 IS THE MAXIMUM TOTAL DOSAGE

FIGURE A-3. (Continued)

\*\*\*\*\*\*\* MAXIMUM CENTERLINE CALCULATIONS \*\*\*\*\*\*\*\*\*

FOR HCL AT A HEIGHT OF 0.00 METERS
DOWNWIND FROM A SPACE SHUTTLE NORMAL LAUNCH
CALCULATIONS APPLY TO THE LAYER BETWEEN 0.00 AND 1046.99 METERS

THE METEOROLOGICAL DATA IS FROM 1015 EST 12 NOV 1981
LAUNCH TIME IS 915 EST 12 NOV 1981
TIME OF EXECUTION IS 247 EST 1 JUL 1982

RANGE FROM PAD (METERS)	BEARING FROM PAD (DEGREES)	10.0 MIN.  MEAN  CONCEN-  TRATION  (PPM)	CLOUD ARRIVAL TIME (MIN)	CLOUD DEPARTURE TIME (MIN)
5002.480	178.174	.001	2.853	9.636
6017.630	184.365	.021	4.510	11.623
7027.479	185.047	.066	6.167	13.610
8030.907	185.007	.102	7.822	15.598
9023.207	184.088	.119	9.477	17.585
10025.654	184.078	.123	11.131	19.573
11020.912	183.508	.118	12.783	21.560
12017.078	183.033	.110	14.435	23.548
13023.785	183.441	.102	16.087	25.535
14021.031	183.117	.094	17.737	27.523
15018.668	182.835	.087	19.387	29.510
16016.621	182.589	.080	21.036	31.497
17014.836	182.371	.075	22.685	33.485
18013.270	182.177	.070	24.333	35.472
19011.887	182.004	.066	25.981	37.460
20010.660	181.848	.062	27.628	39.447
21009.566	181.707	.059	29.275	41.435
22008.594	181.579	.056	30.921	43.422
23007.715	181.462	.053	32.567	45.409
24006.930	181.355	.051	34.213	47.397
25006.219	181.256	.048	35.858	49.384
26005.574	181.165	.046	37.503	51.372
27005.000	181.080	.044	39.148	53.359
28004.469	181.002	.043	40.793	55.347
29016.262	181.896	.041	42.437	57.334

RANGE BEARING
---------.123 IS THE MAXIMUM 10.0 MIN. MEAN CONCENTRATION 10025.7 184.1

FIGURE A-3. (Continued)

## CONCENTRATION AND DOSAGE FOR HCL

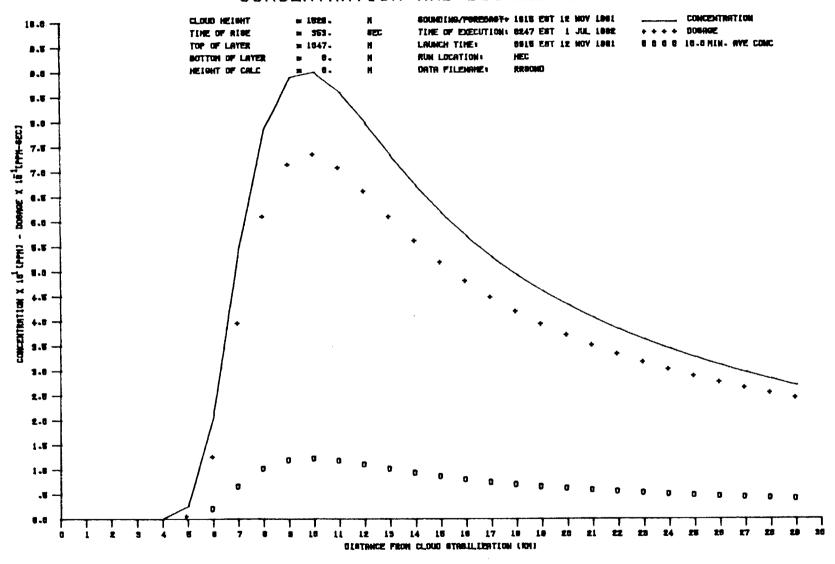


FIGURE A-4. Maximum centerline profile plot of ground-level concentration, dosage and 10-minute time mean concentration of HCl.

10 Marie 1 1 Marie 1 Marie 1 1 Marie

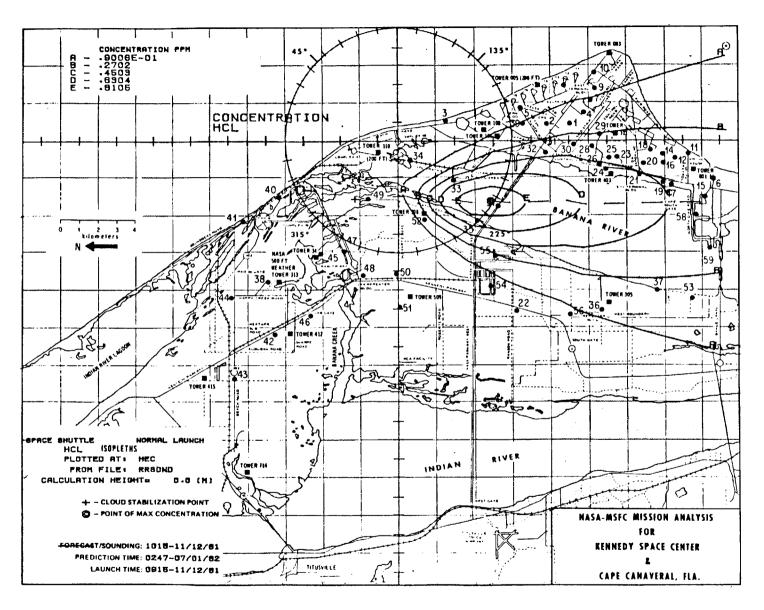


Figure A-5. Ground level HCL concentration isopleth plot using the "LAND" map of Kennedy Space Center.

\* \*\*\*\*\*\*\* NASA/MSFC MULTIPLE LAYER TECHNIQUE - REEDM \*\*\*\*\*\*\*\*\*\* \*\*\*\*\*\*\* UPDATE 8213 LOCATION HEC \*\*\*\*\* \*\*\*\*\* \*\*\*\*\* \*

SPACE SHUTTLE

NORMAL LAUNCH

LAUNCH TIME: 915 EST DATE: 12 NOV 1981 TIME OF EXECUTION: 312 EST DATE: 1 JUL 1982

\*\*\*\*\*

MODEL OPTIONS

\*\*\*\*\*\*

MODEL CONCENTRATION/DOSAGE METEOROLOGICAL DATA SOUNDING RRSOND RUN TYPE OPERATIONAL LAUNCH VEHICLE SPACE SHUTTLE LAUNCH TYPE NORMAL LAUNCH COMPLEX NUMBER SPECIES AL203 CLOUD SHAPE ELLIPTICAL CALCULATION HEIGHT SURFACE PROPELLANT TEMPERATURE (DEG. C) 22.86

\*\*\*\*\*\*

METEOROLOGICAL DATA

\*\*\*\*\*\*\*

39A

RUN NUMBER: I

USING METEOROLOGICAL DATA FILE: RRSOND

RRSOND (VK1215)

TEST NBR 09101 T MINUS 0 RAWINSONDE RUN AN/GMD-1 CAPE CANAVERAL AFS, FLORIDA

ASCENT NBR 0434

TIME: 1015 EST DATE: 12 NOV 1981

FIGURE A-6. REEDM program output listing for an operation, interactive run producing ground-level concentration, dosage and 10-minute time mean concentration of  $Al_2O_3$ .

SURFACE DENSITY (GM/M\*\*3): 1190.43

MET LEVEL NO.	AL (FT)	TITUDE (M)	DIR. (DEG)	SPE (M/S)		ТЕМР	PTEMP (DEG.	DPTEMP C)	PRESS (MB.)	RH (%)	
1	16	4.9	337.0	7.72	15.00	22.4	22.98	16.0	1016.9	67.0	
2	493	150.3	337.0		17.00	20.4	22.28	14.7	1000.0	70.0	
3	1000	304.8		10.30		18.5	21.83	14.0	982.3	75.0	
4	1936	590.1	3.0		19.00	15.4	21.46	13.1	950.0	86.0	
5	2000	609.6	4.0		19.00	15.2	21.45	13.0	947.9	87.0	
6	2235	681.2	8.0		19.00	14.4	21.29	12.5	940.0	88.4	
7	3000	914.4	19.0		18.00	13.2	22.35	11.6	914.4	90.0	
8	3435	1047.0	28.0		17.00	11.7		11.7	900.0	100.	
9	3441	1048.8	28.0		17.00	11.7	22.19	11.7	900.0	100.	
10	3718	1133.2	18.0		16.00	12.2	22.76	2.2	891.0	50.8	
11	4000	1219.2	16.0		16.00	12.2	23.42	-2.3	881.9	39.0	
12	4375	1333.5	13.0		16.00	12.2		-8.2	870.0	23.7	
13	5000	1524.0	4.0		14.00	11.7	25.95	-3.4	850.4	35.0	
14	5005	1525.5	4.0		13.00	11.6		-3.3	850.0	35.0	
15	6000	1828.8	351.0		10.00	9.5		-3.1		41.0	
16	6658	2029.4	352.0		10.00	7.8		-3.3	800.0	45.0	
17	6670	2033.0	352.0		10.00	7.8		-3.3		46.1	
18	7000	2133.6	358.0		10.00	7.4		-6.1	790.3	38.0	
19	7425	2263.1	5.0		11.00	6.8		-9.7	778.0	30.5	
20	8000	2438.4	6.0		12.00	6.0	29.28	-8.2	761.5	35.0	
21	8269	2520.4	7.0		13.00	5.6	29.76	-7.6	754.0	39.0	
22	8396	2559.1	6.0		14.00	5.7	30.27	-9.4	750.0	34.0	
23	9000	2743.2	0.0		15.00	6.4		-16.	733.8	18.0	
24	9140	2785.9	359.0		16.00	6.5	33.27	-18.	730.0	15.3	
25	10000	3048.0	354.0	8.75	17.00	5.6	35.13	-17.	707.0	17.0	

\*\* - INDICATES THAT DATA IS LINEARLY INTERPOLATED FROM INPUT METEOROLOGY

FIGURE A-6. (Continued)

\*\*\*\*\*\*\*

MET. LAYER NO.	OF LAYER		FROM PAD	
1	150.3	3.9	0.0	0.0
2		13.5		0.0
3	590.1	43.7		176.5
4	609.6	46.3		182.2
5	681.2	56.4	3438.8	184.4
6	914.4	95.3	3347.8	190.6
7	1047.0	121.5		197.7
8	1048.8	121.9	3106.7	200.5
9	1133.2	140.1	3067.8	197.2
10	1219.2	160.1	3028.1	193.6
11	1333.5	194.1	3031.5	192.3
12	1524.0	285.5	2950.9	189.8
13	1525.5	331.6	2896.9	189.1
14	1828.8	352.8 *	2891.4	189.1
15	2029.4	352.8 *	1817.1	171.5
16	2033.0	352.8 *	1817.1	172.0
17	2133.6	352.8 *	1817.1	175.0
18	2263.1	352.8 *	1908.0	181.5
19	2438.4	352.8 *	2089.7	185.5
20	2520.4	352.8 *	2271.4	186.5
21	2559.1	352.8 *	2453.1	186.5
22	2743.2	352.8 *	2634.8	183.0
23	2785.9	352.8 *	2816.5	179.5
24	3048.0	352.8 *	2998.3	176.5

<sup>\* -</sup> INDICATES CLOUD STABILIZATION TIME WAS USED

<sup>\*\* -</sup> RANGE FROM PAD IS AT CLOUD STABILIZATION TIME

******	CLOUD	STABILIZATION	************
CALCULATION HEIGHT		(METERS)	0.00
STABILIZATION HEIGHT		(METERS)	1525.52
STABILIZATION TIME		(SECS)	352.84
FIRST MIXING LAYER HEIGHT:		(METERS)	TOP = 1046.99
			BASE= $0.00$
SECOND SELECTED LAYER HEIGHT	:	(METERS)	TOP = 3048.00
			BASE= 0.00
SIGMAR(AZ) AT THE SURFACE		(DEGREES)	13.6138
SIGMER(EL) AT THE SURFACE		(DEGREES)	13.6138
FIGURE A-6. (Continued)			

\*\*\*\*\* \*\*\*\*\*\* \*\*\*\*\*\* REEDM UPDATE 8213 LOCATION HEC \*\*\*\*\*\*\* \*\*\*\*\*\*\*\*\* \*\*\*\*\* \*\*\*\*\*\* \*

\*\*\*\*\*

MAXIMUM CENTERLINE CALCULATIONS

\*\*\*\*\*\*\*\*\*\*\*

FOR AL203 AT A HEIGHT OF 0.00 METERS DOWNWIND FROM A SPACE SHUTTLE NORMAL LA CALCULATIONS APPLY TO THE LAYER BETWEEN 0.00 AND 3048.00 METERS

NORMAL LAUNCH

THE METEOROLOGICAL DATA IS FROM 1015 EST 12 NOV 1981 LAUNCH TIME IS 915 EST 12 NOV 1981 TIME OF EXECUTION IS 312 EST 1 JUL 1982

RANGE FROM PAD (METERS)	BEARING FROM PAD (DEGREES)	PEAK CONCEN- TRATION (MILLI G/ M**3)	CLOUD ARRIVAL TIME (MIN)	CLOUD DEPARTURE TIME (MIN)
5000.000 6000.000 7000.000 8000.000 9000.000 11000.000 12000.000 13000.000 14000.000 15000.000 17000.000 18000.000 19000.000 20000.000 21000.000 23000.000	173.058 178.560 180.182 180.466 179.910 179.411 178.815 178.220 177.717 177.015 176.365 175.756 174.904 174.077 172.706 171.062 169.711 168.655 167.895 167.436	.175 .949 2.624 4.074 5.061 5.619 5.855 5.864 5.727 5.501 5.230 4.946 4.668 4.416 4.206 4.060 3.980 3.946 3.937 3.941	3.025 4.310 6.010 7.769 9.558 11.375 13.246 15.122 16.965 18.783 20.615 22.420 24.236 26.058 27.866 29.654 31.431 33.195 34.955 36.712	17.733 20.008 22.878 25.833 28.861 32.024 35.255 38.489 41.726 45.192 48.827 52.512 56.248 60.023 63.783 67.489 71.181 74.832 78.452 82.069
25000.000 26000.000 27000.000 28000.000 29000.000	166.989 166.842 166.415 166.287 166.170	3.947 3.953 3.954 3.949 3.937	38.470 40.222 41.978 43.725 45.479	85.663 89.275 92.868 96.475 100.066

	RANGE	BEARING	
TRATION	12000.0	178.2	

5.864 IS THE MAXIMUM PEAK CONCENT

FIGURE A-6. (Continued)

\* \*\*\*\* \*\*\*\*\*\*\* REEDM UPDATE 8213 LOCATION HEC \*\*\*\*\*\*\*\*\* \*\*\*\*\*\* \*\*\*\*\*\*\*\*\*\*\* CONCENTRATION/DOSAGE MODEL \*\*\*\*\* \*\*\*\*\* \*

MAXIMUM CENTERLINE CALCULATIONS \*\*\*\*\*\*\*\*\*\*\*

FOR AL203 AT A HEIGHT OF 0.00 METERS DOWNWIND FROM A SPACE SHUTTLE NORMAL LAUNCH CALCULATIONS APPLY TO THE LAYER BETWEEN 0.00 AND 3048.00 METERS

\*\*\*\*\*

THE METEOROLOGICAL DATA IS FROM 1015 EST 12 NOV 1981 LAUNCH TIME IS 915 EST 12 NOV 1981 312 EST 1 JUL 1982 TIME OF EXECUTION IS

RANGE FROM PAD	BEARING FROM PAD	TOTAL DOSAGE (MILLI G	CLOUD ARRIVAL TIME	CLOUD DEPARTURE TIME
(METERS)	(DEGREES)	SEC/M**3)	(MIN)	(MIN)
5000.000	173.058	4.762	3.025	17.733
6000.000	181.191	64.772	4.310	20.008
7000.000	181.496	213.777	6.010	22.878
8000.000	181.178	366.094	7.769	25.833
9000.000	180.663	486.893	9.558	28.861
10000.000	180.017	570.951	11.375	32.024
11000.000	179.073	622.251	13.246	35.255
12000.000	178.220	646.812	15.122	38.489
13000.000	177.449	651.922	16.965	41.726
14000.000	176.745	643.754	18.783	45.192
15000.000	175.817	627.288	20.615	48.827
16000.000	174.928	606.860	22.420	52.512
17000.000	173.790	585.815	24.236	56.248
18000.000	172.394	566.986	26.058	60.023
19000.000	171.013	551.807	27.866	63.783
20000.000	169.927	539.774	29.654	67.489
21000.000	168.855	529.757	31.431	71.181
22000.000	168.082	520.643	33.195	74.832
23000.000	167.607	512.015	34.955	78.452
24000.000	167.147	503.390	36.712	82.069
25000.000	166.989	494.659	38.470	85.663
26000.000	166.551	485.810	40.222	89.275
27000.000	166.415	476.728	41.978	92.868
28000.000	165.994	467.396	43.725	96.475
29000.000	165.876	458.079	45.479	100.066

RANGE BEARING 13000.0 177.4

651.922 IS THE MAXIMUM TOTAL DOSAGE

FIGURE A-6. (Continued.

\*\*\*\*\*\*\*\* MAXIMUM CENTERLINE CALCULATIONS \*\*\*\*\*\*\*\*\*\*\*

FOR AL203 AT A HEIGHT OF DOWNWIND FROM A SPACE SHUTTLE CALCULATIONS APPLY TO THE LAYER BETWEEN

0.00 METERS
NORMAL LAUNCH
0.00 AND 3048.00 METERS

THE METEOROLOGICAL DATA IS FROM 1015 EST 12 NOV 1981

LAUNCH TIME IS 915 EST 12 NOV 1981

TIME OF EXECUTION IS 312 EST 1 JUL 1982

10.0 MIN. MEAN CLOUD CLOUD RANGE BEARING CONCEN-ARRIVAL **DEPARTURE** FROM PAD FROM PAD TRATION TIME TIME (MILLI G/ (METERS) (DEGREES) M\*\*3)(MIN) (MIN) 5000.000 173.058 .008 3.025 17.733 6000.000 181.191 .108 4.310 20.008 7000.000 181.496 .356 6.010 22.878 8000.000 181.178 .610 7.769 25.833 9000.000 180.663 .811 9.558 28.861 10000.000 180.017 .952 11.375 32.024 11000.000 179.073 1.037 13.246 35.255 12000.000 178.220 1.078 15.122 38.489 13000.000 177.449 1.087 16.965 41.726 14000.000 176.745 1.073 18.783 45.192 15000.000 175.817 1.045 20.615 48.827 16000.000 174.928 1.011 22.420 52.512 17000.000 173.790 .976 24.236 56.248 18000.000 172.394 .945 26.058 60.023 19000.000 171.013 .920 27.866 63.783 20000.000 169.927 .900 29.654 67.489 21000.000 168.855 .883 31.431 71.181 22000.000 168.082 .868 33.195 74.832 23000.000 167.607 .853 34.955 78.452 24000.000 167.147 .839 36.712 82.069 25000.000 166.989 .824 38.470 85.663 26000.000 166.551 .810 40.222 89.275 27000.000 166.415 .795 41.978 92.868 28000.000 165.994 .779 96.475 43.725 29000.000 165.876 .763 45.479 100.066

								RANGE	BEARING
		_							
1.087	IS	THE	MAXIMUM	10.0	MIN.	MEAN	CONCENTRATION	13000.0	177.4

FIGURE A-6, (Continued)

=

# CONCENTRATION AND DOSAGE FOR AL203

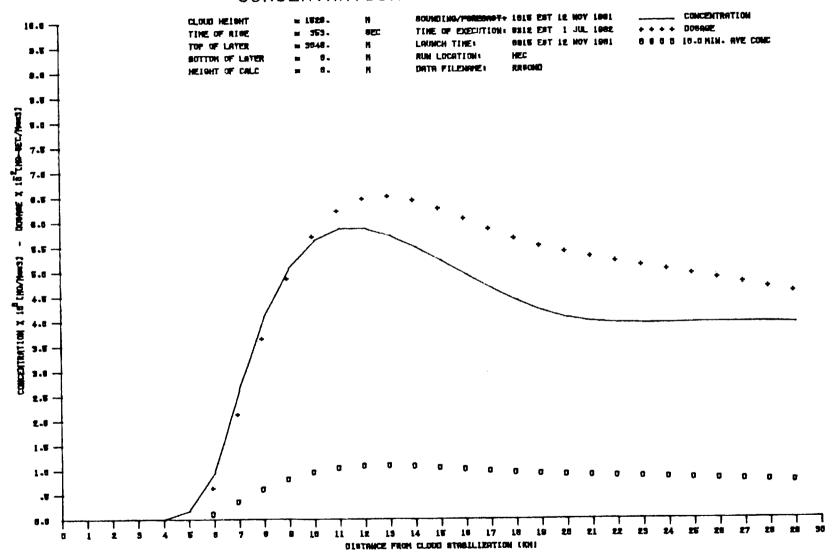


FIGURE A-7. Maximum centerline profile plot of ground-level concentration, dosage and 10-minute time mean concentration of  $^{Al}_{2}^{0}_{3}$ .

111 | **1881 | 1** 

1.95

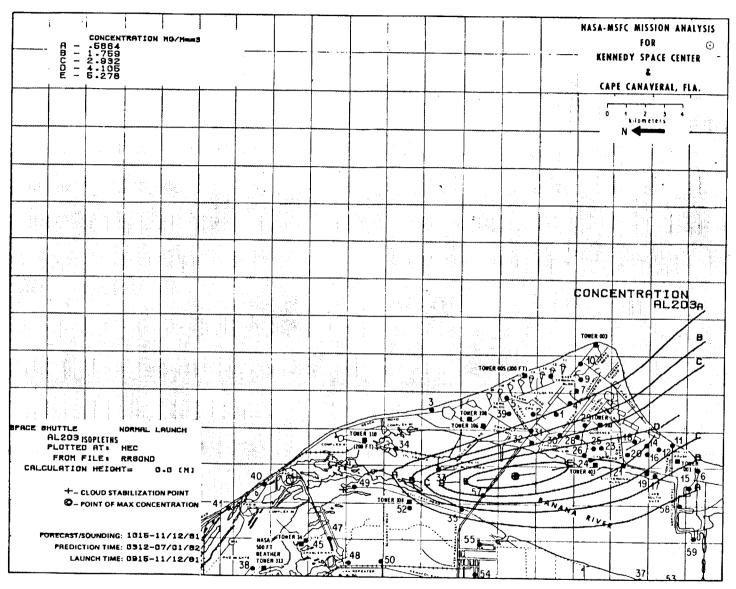


Figure A-8. Ground level  $\mathrm{Al}_2\mathrm{O}_3$  concentration isopleth plot using the "SEA" map of Kennedy Space Center.

trajectory. Figure A-8 shows isopleths of  ${\rm Al}_2{}^0{}_3$  concentration plotted on the land map of Kennedy Space Center.

Figure A-9 shows the program output for maximum possible ground-level pH of ground water due to HCL washout deposition for the Space Shuttle launch. It should be noted that this is an example calculation and no washout deposition actually occurred during this launch. Again all input parameters except the layer-height parameters were defaulted after the washout deposition calculation was selected by the user. This listing differs from the previous listings shown in Figure A-3 and A-6 above in that the maximum ground-water pH due to washout deposition from the bottom layer and due to HCL washout from the top layer are printed in addition to the total maximum ground-water pH caused by precipitation falling through both layers. The assumptions made regarding these calculations are described in Section 4.3 of the main body of this manual. Figure A-10 shows plots of maximum centerline ground-water pH due to washout deposition and isopleths of maximum ground-water pH due to washout deposition are shown in Figure A-11.

Figure A-12 shows the REEDM program output for gravitational deposition of  $\mathrm{Al}_2\mathrm{O}_3$  contained in the exhaust cloud. Again, all input parameters except the layer-height parameters were defaulted after the selection of gravitational deposition by the user. Page 4 of Figure A-12 shows the maximum centerline  $\mathrm{Al}_2\mathrm{O}_3$  deposition due to deposition of  $\mathrm{Al}_2\mathrm{O}_3$  from the lower layer and page 5 shows the total ground-level  $\mathrm{Al}_2\mathrm{O}_3$  deposition due to gravitational settling of  $\mathrm{Al}_2\mathrm{O}_3$  from both the lower and upper layers. Figure A-13 shows plots of maximum centerline ground-level  $\mathrm{Al}_2\mathrm{O}_3$  deposition due to gravitational settling and isopleths of  $\mathrm{Al}_2\mathrm{O}_3$  deposition plotted on the (land) map of Kennedy Space Center are shown in Figure A-14.

Figure A-15 shows the input control data file for a batch, production type run and for the same inputs used in the interactive run shown in Figure A-3. The numbers on the left of Figure A-15 are added to indicate the record number and are not part of the data file. Also,

\*\*\*\*\* \*\*\*\*\*\* \*\*\*\*\*\*\* NASA/MSFC MULTIPLE LAYER TECHNIQUE - REEDM \*\*\*\*\*\*\*\*\*\* \*\*\*\*\*\* UPDATE 8213 LOCATION HEC \*\*\*\*\* \*\*\*\*\* \*\*\*\*\*\* \*

SPACE SHUTTLE

NORMAL LAUNCH

LAUNCH TIME: 915 EST DATE: 12 NOV 1981 TIME OF EXECUTION: 338 EST DATE: 1 JUL 1982

\*\*\*\*\*\*\*

MODEL OPTIONS

\*\*\*\*\*\*

WASHOUT DEPOSITION

RRSOND

OPERATIONAL

MODEL METEOROLOGICAL DATA SOUNDING RUN TYPE LAUNCH VEHICLE LAUNCH TYPE LAUNCH COMPLEX NUMBER SPECIES CLOUD SHAPE PROPELLANT TEMPERATURE (DEG. C) WASHOUT DEPOSITION IS RAINFALL RATE (INCHES PER HOUR)

SPACE SHUTTLE NORMAL 39A HCL ELLIPTICAL 22.86 MAXIMUM POSSIBLE .30 1.00

RAIN DURATION (HOURS) \*\*\*\*\*\*\*\*

METEOROLOGICAL DATA

\*\*\*\*\*\*\*

USING METEOROLOGICAL DATA FILE: RRSOND

RRSOND (VK1215)

RUN NUMBER: 1

TEST NBR 09101 T MINUS 0 RAWINSONDE RUN AN/GMD-1 CAPE CANAVERAL AFS, FLORIDA ASCENT NBR 0434

TIME: 1015 EST DATE: 12 NOV 1981

REEDM program output listing for an operation, interactive run producing maximum centerline ground-water pH due to washout deposition.

SURFACE DENSITY (GM/M\*\*3): 1190.43

MET LEVEL NO.	AL' (FT)	TITUDE (M)	DIR. (DEG)		EED (KTS)	 TEMP		DPTEMP C)	PRESS (MB.)	RH (%)	
1	16	4.9	337.0	7.72	15.00	22.4		16.0		67.0	
2	493	150.3	337.0	8.75	17.00	20.4	22.28	14.7	1000.0	70.0	
3	1000	304.8	351.0	10.30	20.00	18.5	21.83	14.0	982.3	75.0	
4	1936	590.1	3.0	9.78	19.00	15.4	21.46	13.1		86.0	
5	2000	609.6	4.0	9.78	19.00	15.2	21.45	13.0		87.0	
6	2235	681.2	8.0	9.78	19.00	14.4	21.29	12.5		88.4	
7	3000	914.4	19.0	9.27	18.00	13.2	22.35	11.6		90.0	
8	3435	1047.0	28.0	8.75	17.00	11.7	22.19	11.7		100.	
9	3441	1048.8	28.0	8.75	17.00	11.7	22.19	11.7	900.0	100.	
10	3718	1133.2	18.0	8.24	16.00	12.2	22.76	2.2	891.0	50.8	
11	4000	1219.2	16.0	8.24	16.00	12.2	23.42	-2.3		39.0	
12	4375	1333.5	13.0	8.24	16.00	12.2	24.32	-8.2	870.0	23.7	
13	5000	1524.0	4.0	7.21	14.00	11.7	25.95	-3.4	850.4	35.0	
14	5005	1525.5	4.0	6.69	13.00	11.6	25.88	-3.3	850.0	35.0	
15	6000	1828.8	351.0	5.15	10.00	9.5	26.81	-3.1	819.9	41.0	
16	6658	2029.4	352.0	5.15	10.00	7.8	27.13	-3.3	800.0	45.0	
17	6670	2033.0	352.0	5.15	10.00	7.8	27.14	-3.3		46.1	
18	7000	2133.6	358.0	5.15	10.00	7.4	27.64	-6.1	790.3	38.0	
19	7425	2263.1	5.0	5.66	11.00	6.8	28.24	-9.7	778.0	30.5	
20	8000	2438.4	6.0	6.18	12.00	6.0	29.28	-8.2		35.0	
21	8269	2520.4	7.0	6.69	13.00	5.6	29.76	<b>-7.</b> 6	754.0	39.0	
22	8396	2559.1	6.0	7.21	14.00	5.7	30.27	-9.4		34.0	
23	9000	2743.2	0.0	7.72	15.00	6.4	32.74	-16.		18.0	
24	9140	2785.9	359.0	8.24	16.00	6.5	33.27	-18.	730.0	15.3	
25	10000	3048.0	354.0	8.75	17.00	5.6	35.13	-17.	707.0	17.0	

\*\* - INDICATES THAT DATA IS LINEARLY INTERPOLATED FROM INPUT METEOROLOGY

FIGURE A-9. (Continued.

\*\*\*\*\*\*\*\*\*\*\*

L	MET. AYER NO.		CLOUD ISE TIME SECONDS)		AZIMUTH BEARING FROM PAD (METERS)
	I	150.3	3.9	0.0	0.0
	2	304.8	13.5	0.0	0.0
	3	590.1	43.7	3527.3	176.5
	4	609.6	46.3	3442.2	182.2
	5	681.2	56.4	3438.8	184.4
	6	914.4	95.3	3347.8	190.6
	7	1047.0	121.5	3184.5	197.7
	8	1048.8	121.9	3106.7	200.5
	9	1133.2	140.1	3067.8	197.2
	10	1219.2	160.1	3028.1	193.6
	11	1333.5	194.1	3031.5	192.3
	12	1524.0	285.5	2950.9	189.8
	13	1525.5	331.6		189.1
	14	1828.8	352.8 *	2891.4	189.1
	15	2029.4	352.8 *	1817.1	171.5
	16	2033.0	352.8 *	1817.1	172.0
		2133.6	352.8 *	1817.1	175.0
		2263.1	352.8 *	1908.0	181.5
		2438.4	352.8 *	2089.7	185.5
		2520.4	352.8 *	2271.4	186.5
		2559.1	352.8 *	2453.1	186.5
		2743.2	352.8 *	2634.8	183.0
		2785.9	352.8 *	2816.5	179.5
2	24	3048.0	352.8 *	2998.3	176.5

<sup>\* -</sup> INDICATES CLOUD STABILIZATION TIME WAS USED

<sup>\*\* -</sup> RANGE FROM PAD IS AT CLOUD STABILIZATION TIME

********	CLOUD	STABILIZATION	******
CALCULATION HEIGHT		(METERS)	0.00
STABILIZATION HEIGHT		(METERS)	1525.52
STABILIZATION TIME		(SECS)	352.84
FIRST MIXING LAYER HEIGHT:		(METERS)	TOP = 1046.99
		·	BASE = 0.00
SECOND SELECTED LAYER HEIGHT:		(METERS)	TOP = 3048.00
			BASE= 1046.99
SIGMAR(AZ) AT THE SURFACE		(DEGREES)	12 (120
SIGMER(EL) AT THE SURFACE			13.6138
		(DEGREES)	13.6138
FIGURE A-9. (Continued)			

```
*************************
                          *****
*****
                          *****
******* REEDM UPDATE 8213 LOCATION HEC
                          ******
*****
           WASHOUT DEPOSITION MODEL
                          *****
*****
************************
```

FOR HCL AT GROUND-LEVEL

MAXIMUM CENTERLINE CALCULATIONS

\*\*\*\*\*\*

BEARING

DOWNWIND FROM A SPACE SHUTTLE NORMAL LAUNCH CALCULATIONS APPLY TO THE LAYER BETWEEN 0.0 AND 1047.0 METERS

THE METEOROLOGICAL DATA IS FROM 1015 EST 12 NOV 1981 LAUNCH TIME IS 915 EST 12 NOV 1981 338 EST 1 JUL 1982 TIME OF EXECUTION IS

MAXIMUM POSSIBLE WASHOUT RANGE BEARING DEPOSITION (PH) (DEGREES) (METERS) 1.949 4045.401 188.570 2.075 187.007 5037.863 2.187 6031.291 185.817 7027.479 185.047 2.283 184.373 2.363 8023.588 2.433 184.088 9023.207 183.352 2.494 10017.361 11020.912 183.508 2.548 2.597 12017.078 183.033 2.641 13013.943 182.631 2.682 182.285 14011.359 2.720 15018.668 182.835 182.589 2.755 16016.621 2.788 17014.836 182.371 182.177 2.819 18013.270 182.004 2.848 19011.887 2.876 181.849 20010.660 2.902 181.707 21009.566 2.928 22008.594 181.579 181.462 2.952 23007.715 2.975 181.355 24006.930 2.998 181.256 25006.219 3.019 181.165 26005.574 181.080 3.040 27005.000 28004.469 181.002 3.061 180.929 3.080 29003.992

> RANGE 4045.401 188.570 1.949 IS THE PEAK WASHOUT DEPOSITION

FIGURE A-9. (Continued)

\*\*\*\*\*

FOR HCL AT GROUND-LEVEL

DOWNWIND FROM A SPACE SHUTTLE NORMAL LAUNCH
CALCULATIONS APPLY TO THE LAYER BETWEEN 1047.0 AND 3048.0 METERS

THE METEOROLOGICAL DATA IS FROM 1015 EST 12 NOV 1981

LAUNCH TIME IS 915 EST 12 NOV 1981

TIME OF EXECUTION IS 338 EST 1 JUL 1982

RANGE (METERS)	BEARING (DEGREES)	MAXIMUM POSSIBLE WASHOUT DEPOSITION (PH)	
2009.809	176.985	1.615	
3000.336	183.505	.929	
4001.344	181.163	1.011	
5000.693	181.694	1.063	
6000.082	182.350	1.127	
7000.000	182.633	1.187	
8000.026	182.795	1.241	
9000.016	182.753	1.290	
10000.000	182.645	1.335	
11000.012	182.732	1.377	
12000.187	182.967	1.415	
13000.148	182.922	1.450	
14000.201	182.954	1.483	
15000.000	182.640	1.514	
16000.041	182.777	1.542	
17000.242	182.955	1.569	
18000.027	182.747	1.595	
19000.332	182.985	1.619	
20000.094	182.822	1.642	
21000.004	182.674	1.664	
22000.352	182.971	1.685	
23000.145	182.851	1.705	
24000.031	182.740	1.724	
25000.004	182.639	1.742	
26000.453	182.986	1.760	
27000.266	182.901	1.777	
28000.133	182.822	1.793	
29000.047	182.749	1.808	

.929 IS THE PEAK WASHOUT DEPOSITION 3000.336 183.505

FIGURE A-9. (Continued)

RANGE

BEARING

DOWNWIND FROM A SPACE SHUTTLE NORMAL LAUNCH CALCULATIONS APPLY TO THE LAYER BETWEEN 0.0 AND 3048.0 METERS

THE METEOROLOGICAL DATA IS FROM 1015 EST 12 NOV 1981

LAUNCH TIME IS 915 EST 12 NOV 1981

TIME OF EXECUTION IS 338 EST 1 JUL 1982

RANGE (METERS)	BEARING (DEGREES)	MAXIMUM POSSIBLE WASHOUT DEPOSITION (PH)	
2009.809	176.985	1.615	
3000.336	183.505	.929	
4001.344	181.163	1.011	
5000.693	181.694	1.063	
6000.082	182.350	1.127	
7000.000	182.633	1.187	
8000.026	182.795	1.241	
9000.016	182.753	1.290	
10000.000	182.645	1.335	
11000.012	182.732	1.377	
12000.187	182.967	1.415	
13000.148	182.922	1.450	
14000.201	182.954	1.483	
15000.000	182.640	1.514	
16000.041	182.777	1.542	
17000.242	182.955	1.569	
18000.027	182.747	1.595	
19000.332	182.985	1.619	
20000.094	182.822	1.642	
21000.004	182.674	1.664	
22000.352	182.971	1.685	
23000.145	182.851	1.705	
24000.031	182.740	1.724	
25000.004	182.639	1.742	
26000.453	182.986	1.760	
27000.266	182.901	1.777	
28000.133	182.822	1.793	
29000.047	182.749	1.808	

RANGE BEARING
----.929 IS THE PEAK WASHOUT DEPOSITION 3000.336 183.505

WASHOUT DEPOSITION FOR HCL

CLOUD HEIGHT	= 1020.	N	SCHALLING/PORTSHOTS	1018 EM 15 NOA 1981	ACIDITY
TIME OF HISE	w 961.	SEC	TIME OF EXECUTION	9999 EST 1 JUL 1982	8 0 0 0 UPPER LAYES
TOP OF LAYER	= 1947.	H	LAUNCH TIME:	BOTE ERL IS MOA 1981	++++ LOHER LAYER
BOTTON OF LAYER	<b>= 1.</b>	H	RUN LOCATION:	HELL	
HETOHT OF CATE	<b>-</b> 5.	М	DATA FILEMANE	REPORT	

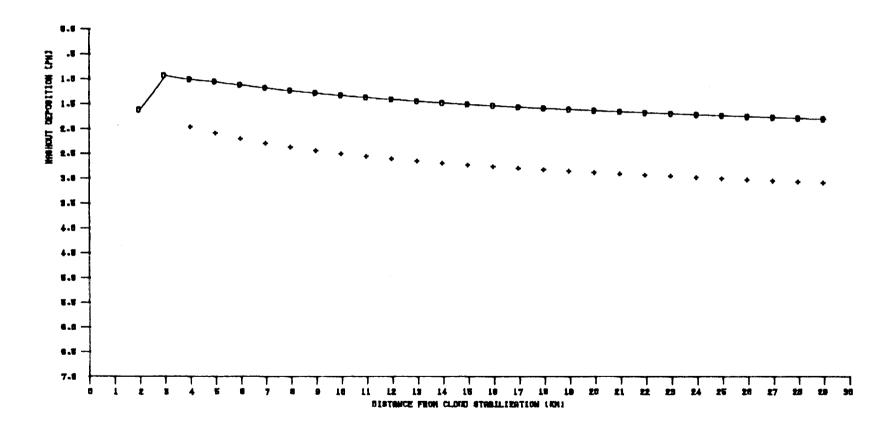


FIGURE A-10. Maximum centerline profile of ground-level maximum possible washout deposition of HCL.

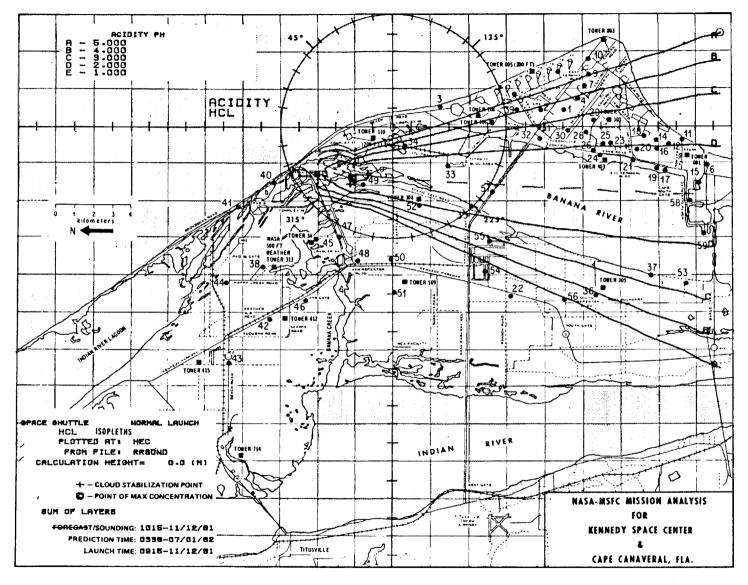


Figure A-11. Isopleth of maximum ground-water pH due to washout deposition using the "LAND" map of Kennedy Space Center.

THE REPORT OF THE REPORT OF THE PARTY OF THE

\*\*\*\*\* \*\*\*\*\*\* \*\*\*\*\*\*\* NASA/MSFC MULTIPLE LAYER TECHNIQUE - REEDM \*\*\*\*\*\*\*\*\*\* \*\*\*\*\*\*\* UPDATE 8213 LOCATION HEC \*\*\*\*\*\*\* \*\*\*\*\* \*\*\*\*\*\* 

SPACE SHUTTLE

NORMAL LAUNCH

LAUNCH TIME:

915 EST DATE: 12 NOV 1981 TIME OF EXECUTION: 359 EST DATE: 1 JUL 1982

\*\*\*\*\*\*

MODEL OPTIONS

\*\*\*\*\*

MODEL

METEOROLOGICAL DATA SOUNDING

RUN TYPE

LAUNCH VEHICLE

LAUNCH TYPE

LAUNCH COMPLEX NUMBER

CLOUD SHAPE

PROPELLANT TEMPERATURE (DEG. C) \*\*\*\*\*

GRAVITATIONAL DEPOSITION

RRSOND

OPERATIONAL

SPACE SHUTTLE

NORMAL

39A

ELLIPTICAL 22.86

RUN NUMBER: 1

USING METEOROLOGICAL DATA FILE: RRSOND

RRSOND (VK1215)

TEST NBR 09101 T MINUS 0

RAWINSONDE RUN AN/GMD-1 CAPE CANAVERAL AFS, FLORIDA

ASCENT NBR 0434

TIME: 1015 EST

DATE: 12 NOV 1981

FIGURE A-12. REEDM program output listing for an operational, interactive run producing ground-level gravitational deposition of  $Al_2O_3$ .

SURFACE DENSITY (GM/M\*\*3): 1190.43

MET							· ·			•	
LEVEL	AL	TITUDE	DIR.	SPI	EED	TEMP	PTEMP	DPTEMP	PRESS	RH	
NO.	(FT)	(M)	(DEG)	(M/S)	(KTS)		(DEG.	C)	(MB.)	(%)	
1	16	4.9			15.00			16.0			
2	493	150.3			17.00		22.28	14.7		70.0	
3	1000	304.8			20.00			14.0	982.3	75.0	
4	1936	590.1			19.00				950.0	86.0	
5	2000	609.6	4.0		19.00	15.2		13.0		87.0	
6	2235	681.2	8.0		19.00	14.4		12.5		88.4	
7	3000	914.4	19.0		18.00			11.6		90.0	
8	3435	1047.0	28.0		17.00			11.7	900.0	100.	
9	3441	1048.8	28.0		17.00	11.7	22.19	11.7		100.	
10	3718	1133.2	18.0		16.00			2.2		50.8	
11	4000	1219.2			16.00			-2.3		39.0	
12	4375	1333.5			16.00	12.2	24.32	-8.2	870.0	23.7	
13	5000	1524.0	4.0		14.00			-3.4		35.0	
14	5005	1525.5	4.0		13.00			-3.3		35.0	
15	6000	1828.8	351.0	5.15	10.00	9.5	26.81	-3.1	819.9	41.0	
16	6658	2029.4	352.0	5.15	10.00		27.13	-3.3	800.0	45.0	
17	6670	2033.0	352.0	5.15	10.00	7.8	27.14	-3.3	800.0	46.1	
18	7000	2133.6	358.0	5.15	10.00	7.4	27.64	-6.1	790.3	38.0	
19	7425	2263.1	5.0	5.66	11.00	6.8	28.24	-9.7	778.0	30.5	
20	8000	2438.4	6.0		12.00			-8.2		35.0	
21	8269	2520.4	7.0	6.69	13.00	5.6	29.76	-7.6	754.0	39.0	
22	8396	2559.1	6.0	7.21	14.00	5.7	30.27	-9.4	750.0	34.0	
23	9000	2743.2	0.0		15.00			-16.		18.0	
24	9140	2785.9	359.0	8.24	16.00	6.5	33.27	-18.	730.0	15.3	
25	10000	3048.0	354.0	8.75	17.00	5.6	35.13	-17.	707.0	17.0	

<sup>\*\* -</sup> INDICATES THAT DATA IS LINEARLY INTERPOLATED FROM INPUT METEOROLOGY

FIGURE A-12. (Continued)

MET. LAYER NO.	TOP OF LAYER (METERS)		FROM PAD	
1	150.3	3.9	0.0	0.0
2	304.8	13.5	0.0	0.0
3	590.1	43.7	3527.3	176.5
4	609.6	46.3	3442.2	182.2
5	681.2	56.4	3438.8	184.4
6	914.4	95.3	3347.8	190.6
7	1047.0	121.5	3184.5	197.7
8	1048.8	121.9	3106.7	200.5
9	1133.2	140.1	3067.8	197.2
10	1219.2	160.1	3028.1	193.6
11	1333.5	194.1	3031.5	192.3
12	1524.0	285.5	2950.9	189.8
13	1525.5	331.6	2896.9	189.1
14	1828.8	352.8 *	2891.4	189.1
15	2029.4	352.8 *	1817.1	171.5
16	2033.0	352.8 *	1817.1	172.0
17	2133.6	352.8 *	1817.1	175.0
18	2263.1	352.8 *	1908.0	181.5
19	2438.4	352.8 *	2089.7	185.5
20	2520.4	352.8 *	2271.4	186.5
21	2559.1	352.8 *	2453.1	186.5
22	2743.2	352.8 *	2634.8	183.0
23	2785.9	352.8 *	2816.5	179.5
24	3048.0	352.8 *	2998.3	176.5

<sup>\* -</sup> INDICATES CLOUD STABILIZATION TIME WAS USED

\*\* - RANGE FROM PAD IS AT CLOUD STABILIZATION TIME

******	CLOUD STABILIZATION	******
CALCULATION HEIGHT	(METERS)	0.00
STABILIZATION HEIGHT	(METERS)	1525.52
STABILIZATION TIME	(SECS)	352.84
FIRST MIXING LAYER HEIGHT:	(METERS)	TOP = 1046.99
		BASE= $0.00$
SECOND SELECTED LAYER HEIGHT	: (METERS)	TOP = 3048.00
		BASE= 0.00
SIGMAR(AZ) AT THE SURFACE	(DECREEC)	10 (100
SIGMER(EL) AT THE SURFACE	(DEGREES)	13.6138
SIGHER(EL) AT THE SURFACE	(DEGREES)	13.6138
FIGURE A-12. (Continued)		

\*\*\*\*\*

MAXIMUM CENTERLINE CALCULATIONS

\*\*\*\*\*\*

CDAVITATIONAL DEPOSITION -

## FOR AL203 AT GROUND-LEVEL

DOWNWIND FROM A SPACE SHUTTLE NORMAL LAUNCH CALCULATIONS APPLY TO THE LAYER BETWEEN THE SURFACE AND 1046.99 METERS

THE METEOROLOGICAL DATA IS FROM 1015 EST 12 NOV 1981

LAUNCH TIME IS 915 EST 12 NOV 1981

TIME OF EXECUTION IS 359 EST 1 JUL 1982

RANGE (METERS)	BEARING (DEGREES)	- GRAVITATIONAL (MILLIGRAMS/ (SQ. METER)	(PARTICLES/ (SQ. METER)
5000.000	173.289	11.686 160.417	1.11468E+02 1.53011E+03
6000.000	181.659 181.648	378.115	3.60657E+03
7000.000	181.532	472.799	4.50970E+03
8000.000 9000.000	180.799	471.537	4.49766E+03
10000.000	180.799	425.281	4.05645E+03
11000.000	180.032	365.686	3.48802E+03
12000.000	179.463	307.447	2.93252E+03
13000.000	178.982	256.219	2.44389E+03
14000.000	178.569	213.233	2.03388E+03
15000.000	178.656	178.147	1.69922E+03
16000.000	178.350	149.408	1.42509E+03
17000.000	178.080	126.021	1.20203E+03
18000.000	177.840	106.953	1.02015E+03
19000.000	177.625	91.340	8.71225E+02
20000.000	177.432	78.488	7.48638E+02
21000.000	177.258	67.846	6.47138E+02
22000.000	177.099	58.982	5.62586E+02
23000.000	176.954	51.552	4.91721E+02
24000.000	176.821	45.288	4.31973E+02
25000.000	176.699	39.977	3.81309E+02
26000.000	176.586	35.447	3.38108E+02
27000.000	176.482	31.565	3.01073E+02
28000.000	176.875	28.238	2.69345E+02
29000.000	176.786	25.343	2.41728E+02

RANGE BEARING

472.799 IS THE PEAK GRAVITATIONAL DEPOSITION 8000.000 181.532

\* \*\*\*\*\*\* \*\*\*\*\*\* \*\*\*\*\*\* REEDM UPDATE 8213 LOCATION HEC \*\*\*\*\*\* \*\*\*\*\* GRAVITATIONAL DEPOSITION MODEL \*\*\*\*\* \*\*\*\*\*\* \*\*\*\*\* \* \*\*\*\*\*\* MAXIMUM CENTERLINE CALCULATIONS

FOR AL203 AT GROUND-LEVEL DOWNWIND FROM A SPACE SHUTTLE NORMAL LAUNCH CALCULATIONS APPLY TO THE LAYER BETWEEN THE SURFACE AND 3048.00 METERS

THE METEOROLOGICAL DATA IS FROM 1015 EST 12 NOV 1981 LAUNCH TIME IS 915 EST 12 NOV 1981 TIME OF EXECUTION IS 359 EST 1 JUL 1982

RANGE (METERS)	BEARING (DEGREES)	- GRAVITATIONAL (MILLIGRAMS/ (SQ. METER)	DEPOSITION - (PARTICLES/ (SQ. METER)
(METERS) 5000.000 6000.000 7000.000 8000.000 10000.000 11000.000 12000.000 13000.000 14000.000 15000.000 17000.000 18000.000 19000.000 20000.000 21000.000 23000.000 24000.000	(DEGREES)  173.300 181.776 182.153 181.679 180.892 180.034 179.073 178.220 177.449 176.745 175.544 174.652 173.234 171.553 170.166 169.075 168.285 167.795 167.319 166.859	(SQ. METER)  11.690 166.675 435.197 623.862 714.718 735.040 712.055 666.093 610.374 552.705 497.844 448.692 406.801 372.702 345.187 322.420 302.953 285.841 270.477 256.503	1.11500E+02 1.58980E+03 4.15103E+03 5.95058E+03 6.81718E+03 7.01102E+03 6.79178E+03 6.35339E+03 5.82192E+03 5.27186E+03 4.74857E+03 4.27975E+03 3.88018E+03 3.55494E+03 3.29249E+03 3.07534E+03 2.88966E+03 2.72644E+03 2.57989E+03
25000.000 25000.000 26000.000 27000.000 28000.000	166.700 166.260 166.123 165.994 165.876	256.503 243.655 231.796 220.795 210.519 200.897	2.44660E+03 2.32405E+03 2.21093E+03 2.10600E+03 2.00799E+03 1.91621E+03

RANGE BEARING

\*\*\*\*\*\*

735.040 IS THE PEAK GRAVITATIONAL DEPOSITION 10000.000

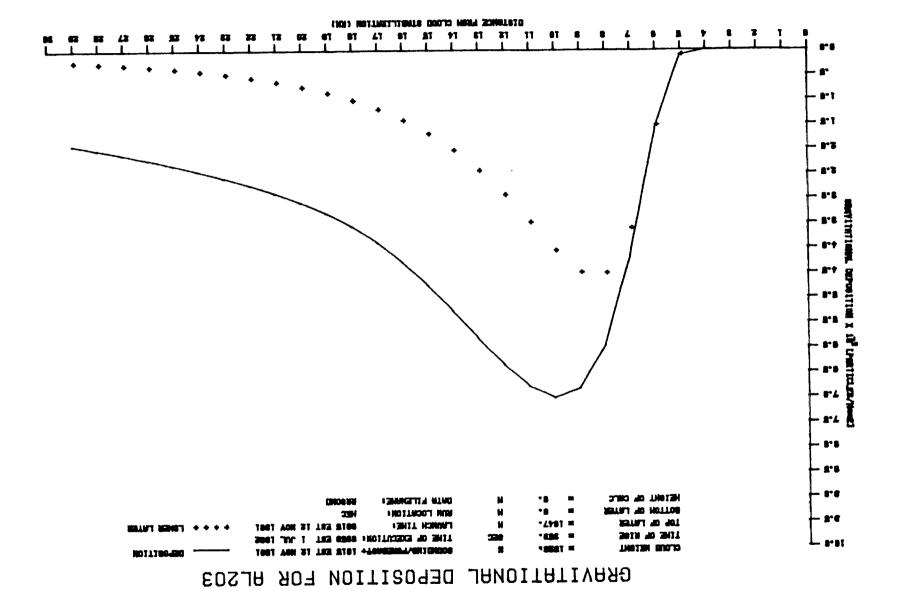


FIGURE A-13. Maximum centerline profile plot of ground level gravitational deposition of  $\text{Al}_2^{0}$ 3.

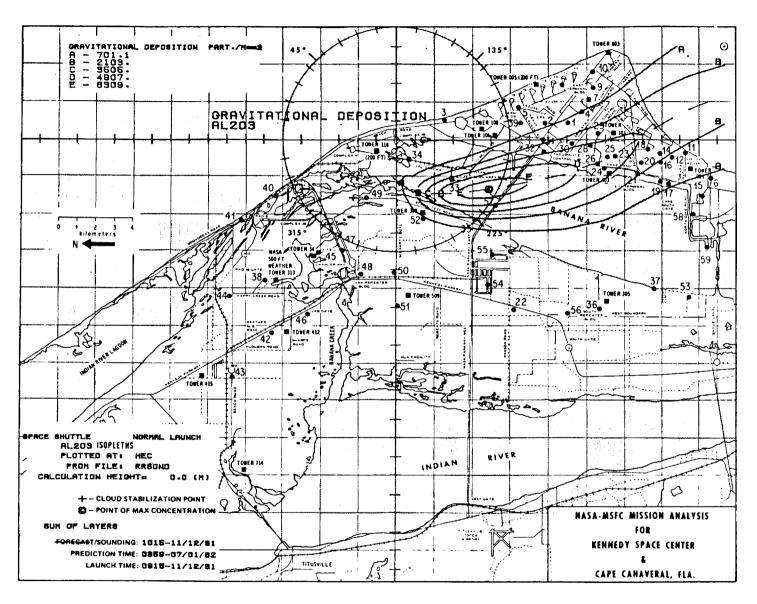


Figure A-14. Ground level  $\mathrm{Al}_2\mathrm{O}_3$  gravitational deposition isopleth plot using the "LAND" map of Kennedy Space Center.

RECORD	COMMAND
NUMBER	(BEGINS IN COL. 1)
01.	PRODUCTION
02.	RRSOND
03.	1
04.	CONCENTRATION
05.	0915 EST 12 NOV 1981
06.	SHUTTLE
07.	NORMAL
08.	22.86
09.	HCL
10.	39A
11.	SURFACE
12.	ELLIPTICAL
17.	YES
18.	YES
18.	NO
20.	NO
23.	NO
24.	NO
26.	NO

FIGURE A-15. REEDM input control data for a batch production run producing ground-level concentration, dosage and 10-minute time mean concentration of HCL.

entries for the input options are completely spelled out for illustration purposes which is not necessary for the actual program operation (normal is a 1 to 2 character abbreviation or default). Record 17 contains "YES" for plotting of the meteorological profile. The program enters the interactive mode for plotting purposes which requires user response and will subsequently enter the batch mode prior to record 18. Record 18 contains "YES" for the modification of the layer structure at which time the program again enters the interactive mode and requires user response. A height of 1047 m was entered for the top of the lower layer and bottom of the upper layer and 3048 m was entered for the top of the upper layer. The program then reenters the batch mode for the duration of the run. Figure A-16 shows the output for this production run. This output listing contains more detail than the interactive run shown in Figure A-3 because production runs default to a detailed listing and operational runs default to a summary listing.

Ī

MET.	TOP	CLOUD	RANGE**	BEARING	LAYER SOURCE STRENGTH (GRAMS)
LAYER	OF LAYER	RISE TIME	FROM PAD	FROM PAD	
NO.	(METERS)	(SECONDS)	(METERS)	(METERS)	
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24	150.3 304.8 590.1 609.6 681.2 914.4 1047.0 1048.8 1133.2 1219.2 1333.5 1524.0 1525.5 1828.8 2029.4 2033.0 2133.6 2263.1 2438.4 2520.4 2559.1 2743.2 2785.9 3048.0	352.8 352.8 352.8 352.8 352.8	* 1817.1 * 1817.1 * 1908.0 * 2089.7 * 2271.4 * 2453.1 * 2634.8 * 2816.5	0.0 0.0 176.5 182.2 184.4 190.6 197.7 200.5 197.2 193.6 192.3 189.8 189.1 171.5 172.0 175.0 181.5 185.5 186.5 186.5 183.0 179.5 176.5	0.0000 0.0000 .40697E+06 .47471E+06 .32251E+07 .24692E+08 .21939E+08 .33505E+06 .16294E+08 .18038E+08 .25703E+08 .45283E+08 .36708E+06 .97955E+08 .56604E+08 .94127E+06 .24345E+08 .26409E+08 .25093E+08 .25093E+08 .27876E+07 .27876E+07 .12960E+08 .29373E+07 .17541E+08

FIGURE A-16. (Continued)

entries for the input options are completely spelled out for illustration purposes which is not necessary for the actual program operation (normal is a 1 to 2 character abbreviation or default). Record 17 contains "YES" for plotting of the meteorological profile. The program enters the interactive mode for plotting purposes which requires user response and will subsequently enter the batch mode prior to record 18. Record 18 contains "YES" for the modification of the layer structure at which time the program again enters the interactive mode and requires user response. A height of 1047 m was entered for the top of the lower layer and bottom of the upper layer and 3048 m was entered for the top of the upper layer. The program then reenters the batch mode for the duration of the run. Figure A-16 shows the output for this production run. This output listing contains more detail than the interactive run shown in Figure A-3 because production runs default to a detailed listing and operational runs default to a summary listing.

Ī

SPACE SHUTTLE

NORMAL LAUNCH

LAUNCH TIME: 915 EST DATE: 12 NOV 1981 TIME OF EXECUTION: 424 EST DATE: 1 JUL 1982

*******	MODEL OPTIONS	******	****
MODEL		CONCENTRATIO	N /DOGACE
METEOROLOGICAL DATA SOUNDING		CONCLITICATIO	RRSOND
RUN TYPE		DΤ	RODUCTION
LAUNCH VEHICLE		- <del>-</del>	
LAUNCH TYPE	\$	SPACE	SHUTTLE
LAUNCH COMPLEX NUMBER			NORMAL
SPECIES			39A
CLOUD SHAPE			HCL
CALCULATION HEIGHT (METERS)		EL	LIPTICAL
PROPELLANT TEMPERATURE (DEG.	<b>a</b> )		0.00
TROTELEANT TEMPERATURE (DEG.	()		22.86
********	MODEL PARAMETERS	******	*****
CONCENTRATION AVERAGING TIME	(SEC.)		600.00
DECAY COEFFICIENT			0.0000
ABSORPTION COEFFICIENT (RNG:	O TO 1,NO ABSORPTION=0)		0.0000
DIFFUSION COEFFICIENTS	, ,	LATERAL	-
		VERTICAL	1.0000
VEHICLE ENTRAINMENT PARAMETER	S	ALONGWIND	
	_	CROSSWIND	• • • • •
DOWNWIND EXPANSION DISTANCE (	мгтгрс\	VERTICAL	
2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	rie i eks j	LATERAL	
*****	METEODOLOGICAL DITA	VERTICAL	
	METEOROLOGICAL DATA	****	******

RUN NUMBER: 1

USING METEOROLOGICAL DATA FILE: RRSOND

RRSOND (VK1215)

TEST NBR 09101 T MINUS 0
RAWINSONDE RUN AN/GMD-1
CAPE CANAVERAL AFS, FLORIDA

ASCENT NBR 0434

TIME: 1015 EST DATE: 12 NOV 1981

FIGURE A-16. REEDM program output listing for a production, batch run producing ground-level concentration, dosage and 10-minite time mean concentration of HCL.

MET LEVEL NO.	AL (FT)	TITUDE (M)	DIR. (DEG)	SPI (M/S)	EED (KTS)	 TEMP	PTEMP (DEG.	DPTEMP C)	PRESS (MB.)	RH (%)	
1	16	4.9	337.0	7.72	15.00	22.4		16.0	1016.9	67.0	
2	493	150.3	337.0	8.75	17.00	20.4	22.28	14.7	1000.0	70.0	
3	1000	304.8	351.0	10.30	20.00	18.5	21.83	14.0	982.3	75.0	
4	1936	590.1	3.0	9.78	19.00	15.4	21.46	13.1	950.0	86.0	
5	2000	609.6	4.0	9.78	19.00	15.2	21.45	13.0	947.9	87.0	
6	2235	681.2	8.0	9.78	19.00	14.4	21.29	12.5	940.0	88.4	
7	3000	914.4	19.0	9.27	18.00	13.2	22.35	11.6	914.4	90.0	
8	3435	1047.0	28.0	8.75	17.00	11.7	22.19	11.7	900.0	100.	
9	3441	1048.8	28.0	8.75	17.00	11.7	22.19	11.7	900.0	100.	
10	3718	1133.2	18.0	8.24	16.00	12.2	22.76	2.2	891.0	50.8	
11	4000	1219.2	16.0	8.24	16.00	12.2	23.42	-2.3	881.9	39.0	
12	4375	1333.5	13.0	8.24	16.00	12.2	24.32	-8.2	870.0	23.7	
13	5000	1524.0	4.0	7.21	14.00	11.7	25.95	-3.4	850.4	35.0	
14	5005	1525.5	4.0	6.69	13.00	11.6	25.88	-3.3	850.0	35.0	
15	6000	1828.8	351.0	5.15	10.00	9.5	26.81	-3.1	819.9	41.0	
16	6658	2029.4	352.0	5.15	10.00	7.8	27.13	-3.3	800.0	45.0	
17	6670	2033.0	352.0	5.15	10.00	7.8	27.14	-3.3	800.0	46.1	
18	7000	2133.6	358.0	5.15	10.00	7.4	27.64	-6.1	790.3	38.0	
19	7425	2263.1	5.0	5.66	11.00	6.8	28.24	-9.7	778.0	30.5	
20	8000	2438.4	6.0	6.18	12.00	6.0	29.28	-8.2	761.5	35.0	
21	8269	2520.4	7.0	6.69	13.00	5.6	29.76	-7.6	754.0	39.0	
22	8396	2559.1	6.0	7.21	14.00	5.7	30.27	-9.4	750.0	34.0	
23	9000	2743.2	0.0	7.72	15.00	6.4	32.74	-16.	733.8	18.0	
24	9140	2785.9	359.0	8.24	16.00	6.5	33.27	-18.	730.0	15.3	
25	10000	3048.0	354.0	8.75	17.00	5.6	35.13	-17.	707.0	17.0	

\*\* - INDICATES THAT DATA IS LINEARLY INTERPOLATED FROM INPUT METEOROLOGY

*****	PLUME RISE DATA	**********

EXHAUST RATE OF MATERIAL:	(GRAMS/SEC)		.1526714E+08
TOTAL MATERIAL OUTPUT:	(GRAMS)		.1251174E+10
HEAT OUTPUT PER GRAM:	(CALORIES)		1479.7000
VEHICLE RISE TIME PARAMETERS:	(TK=(A*Z**B)+C)	A=	.6522
		B=	.4681
		C=	.3750
SPECIFIC HEAT OF AIR:	(K CAL./GRAM)		.2400
VERTICAL GRADIENT OF POTENTIAL TEMP.			
TO STABILIZATION HEIGHT:	(DEG. K/M)		.0024

MET. LAYER NO.	TOP OF LAYER (METERS)	CLOUD RISE TIME (SECONDS)	RANGE** FROM PAD (METERS)	BEARING FROM PAD (METERS)	LAYER SOURCE STRENGTH (GRAMS)
1	150.3	3.9	0.0	0.0	0.0000
2	304.8	13.5	0.0	0.0	0.0000
3	590.1	43.7	3527.3	176.5	.40697E+06
4	609.6	46.3	3442.2	182.2	.47471E+06
5	681.2	56.4	3438.8	184.4	.32251E+07
6	914.4	95.3	3347.8	190.6	.24692E+08
7	1047.0	121.5	3184.5	197.7	.21939E+08
8	1048.8	121.9	3106.7	200.5	.33505E+06
9	1133.2	140.1	3067.8	197.2	.16294E+08
10	1219.2	160.1	3028.1	193.6	.18038E+08
11	1333.5	194.1	3031.5	192.3	.25703E+08
12	1524.0	285.5	2950.9	189.8	.45283E+08
13	1525.5	331.6	2896.9	189.1	.36708E+06
14	1828.8	352.8 *	2891.4	189.1	.97955E+08
15	2029.4	352.8 *	1817.1	171.5	.56604E+08
16	2033.0	352.8 *	1817.1	172.0	.94127E+06
17	2133.6	352.8 *	1817.1	175.0	.24345E+08
18	2263.1	352.8 *	1908.0	181.5	.26409E+08
19	2438.4	352.8 *	2089.7	185.5	.25093E+08
20	2520.4	352.8 *	2271.4	186.5	.69526E+07
21	2559.1	352.8 *	2453.1	186.5	.27876E+07
22	2743.2	352.8 *	2634.8	183.0	.12960E+08
23	2785.9	352.8 *	2816.5	179.5	.29373E+07
24	3048.0	352.8 *	2998.3	176.5	.17541E+08

FIGURE A-16. (Continued)

*****			EXHAUST CLOUD			*********		
HALF- LENGTH	CLOUD HALF- WIDTH (METERS)							
0.0 0.0 198.8 310.4 422.7 650.9 810.2 851.5 874.3 911.7 944.0 971.5 976.3 964.5 889.0 835.2	0.0 0.0 198.8 310.4 422.7 650.9 810.2 851.5 874.3 911.7 944.0 971.5 976.3 964.5 889.0 835.2 801.3	0.0 0.0 92.5 144.4 196.6 302.7 376.8 396.1 406.7 424.1 439.1 451.9 454.1 448.6 413.5 388.5 372.7	0.0 0.0 92.5 144.4 196.6 302.7 376.8 396.1 406.7 424.1 439.1 451.9 454.1 448.6 413.5 388.5 372.7	6.8 6.8 6.8 6.8 6.8 5.0 1.0 1.0 1.0 1.0 1.0	6.8 6.8 6.8 6.8 6.8 5.0 1.0 1.0 1.0 1.0			
521.7 208.2 200.0 200.0 200.0 200.0	707.5 521.7 208.2 200.0 200.0 200.0 200.0	242.7 96.9 93.0 93.0 93.0 93.0	242.7 96.9 93.0 93.0 93.0 93.0	1.0 1.0 1.0 1.0 1.0	1.0 1.0 1.0			

\*\* - RANGE FROM PAD IS AT CLOUD STABILIZATION TIME

FIGURE A-16. (Continued)

*****	CLOUD	STABILIZATION	***********
CALCULATION HEIGHT		(METERS)	0.00
STABILIZATION HEIGHT		(METERS)	1525.52
STABILIZATION TIME		(SECS)	352.84
FIRST MIXING LAYER HEIGHT:		(METERS)	TOP = 1046.99
			BASE= $0.00$
SECOND SELECTED LAYER HEIGHT:	:	(METERS)	TOP = 3048.00
			BASE= 1046.99
SIGMAR(AZ) AT THE SURFACE		(DEGREES)	13.6138
SIGMER(EL) AT THE SURFACE		(DEGREES)	13.6138

******	CALCULATED	INPUT	METEOROLOGICAL	LAYER	PARAMETERS	******
--------	------------	-------	----------------	-------	------------	--------

MET. LAYER NO.	WIND SPEED (M/SEC)	WIND SPEED SHEAR (M/SEC)	WIND DIRECTION (DEG)	WIND DIRECTION SHEAR	SIGMA OF AZI ANG (DEG)	SIGMA OF ELE ANG (DEG)
1	8.48	1.03	337.00	0.00	6.1212	6.1212
2	9.53	1.55	344.00	14.00	6.1212	6.1212
3	10.04	.51	357.00	12.00	6.1212	6.1212
4	9.78	0.00	3.50	1.00	6.1212	6.1212
5 6	9.78	0.00	6.00	4.00	6.1212	6.1212
6	9.53	<b></b> 51	13.50	11.00	6.1212	6.1212
7	9.01	.52	23.50	9.00	6.1212	6.1212
8	8.75	0.00	28.00	0.00	2.7167	2.7167
9	8.50	51	23.00	-10.00	1.0000	1.0000
10	8.24	0.00	17.00	-2.00	1.0000	1.0000
11	8.24	0.00	14.50	-3.00	1.0000	1.0000
12	7.73	-1.03	8.50	-9.00	1.0000	1.0000
13	6.95	.52	4.00	0.00	1.0000	1.0000
14	5.92	-1.55	357.50	13.00	1.0000	1.0000
15	5.15	0.00	351.50	1.00	1.0000	1.0000
16	5.15	0.00	352.00	0.00	1.0000	1.0000
17	5.15	0.00	355.00	6.00	1.0000	1.0000
18	5.41	.52	1.50	7.00	1.0000	1.0000
19	5.92	.52	5.50	1.00	1.0000	1.0000
20	6.44	.51	6.50	1.00	1.0000	1.0000
21	6.95	.52	6.50	-1.00	1.0000	1.0000
22	7.47	.51	3.00	-6.00	1.0000	1.0000
23	7.98	.52	359.50	1.00	1.0000	1.0000
24	8.50	.51	356.50	<b>-5.00</b>	1.0000	1.0000

FIGURE A-16. (Continued)

*****	CALCHLATED	TRANSITION	LAYER	PARAMETERS	**********
	CUTCOTUTED	TICUIDITION		LAMARIETENS	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~

TRANSITION LAYER NUMBER: 1

VALUE AT	HEIGHT (METERS)	TEMP. (DEG K)	WIND SPEED (M/SEC)	WIND SPEED SHEAR	WIND DIR. (DEG)	WIND DIR. SHEAR	SIGMA AZI. (DEG)	SIGMA ELE. (DEG)
TOP: LAYER: BOTTOM:	1046.99 0.00	295.35 296.14	8.75 9.44 7.72	.76	28.00 359.98 337.00	52.60	4.5342 6.1212 6.1212	4.5342 6.1212 6.1212

TRANSITION LAYER NUMBER: 2

VALUE AT	HEIGHT (METERS)	TEMP.	WIND SPEED (M/SEC)	WIND SPEED SHEAR	WIND DIR. (DEG)	WIND DIR. SHEAR	SIGMA AZI. (DEG)	SIGMA ELE. (DEG)
TOP: LAYER: BOTTOM:	3048.00 1046.99	308.29 295.35	8.75 6.85 8.75	99	354.00 2.65 28.00	-23.58	.8993 2.7167 4.5342	.8993 2.7167 4.5342

\* \*\*\*\*\* \*\*\*\*\*\* \*\*\*\*\*\* REEDM UPDATE 8213 LOCATION HEC \*\*\*\*\*\* \*\*\*\*\* CONCENTRATION/DOSAGE MODEL \*\*\*\*\*\*\*\*\*\* \*\*\*\*\* \*\*\*\*\* \*

\*\*\*\*\*

MAXIMUM CENTERLINE CALCULATIONS

\*\*\*\*\*\*\*\*\*

FOR HCL AT A HEIGHT OF 0.00 METERS DOWNWIND FROM A SPACE SHUTTLE NORMAL LA CALCULATIONS APPLY TO THE LAYER BETWEEN 0.00 AND 1046.99 METERS

NORMAL LAUNCH

THE METEOROLOGICAL DATA IS FROM 1015 EST 12 NOV 1981 LAUNCH TIME IS 915 EST 12 NOV 1981 424 EST 1 JUL 1982 TIME OF EXECUTION IS

RANGE FROM PAD (METERS)	BEARING FROM PAD (DEGREES)	PEAK CONCEN- TRATION (PPM)	CLOUD ARRIVAL TIME (MIN)	CLOUD DEPARTURE TIME (MIN)
5003.600	177.805	.027	2.853	7.162
6005.456	182.420	.210	4.510	9.012
7016.485	183.906	.543	6.167	10.862
8017.253	183.738	.783	7.822	12.713
9023.207	184.088	.889	9.477	14.563
10017.361	183.352	.901	11.131	16.415
11020.912	183.508	.861	12.783	18.266
12017.078	183.033	.799	14.435	20.118
13013.943	182.631	.734	16.087	21.970
14011.359	182.285	.673	17.737	23.822
15018.668	182.835	.618	19.387	25.674
16016.621	182.589	.571	21.036	27.527
17014.836	182.371	.530	22.685	29.380
18013.270	182.177	.493	24.333	31.234
19011.887	182.004	.461	25.981	33.087
20010.660	181.848	.433	27.628	34.941
21009.566	181.707	.407	29.275	36.795
22008.594	181.579	.384	30.921	38.650
23007.715	181.462	.363	32.567	40.504
24006.930	181.355	.344	34.213	42.443
25006.219	181.256	.327	35.858	44.430
26005.574	181.165	.311	37.503	46.418
27005.000	181.080	.296	39.148	48.405
28004.469	181.002	.283	40.793	50.393
29003.992	180.929	.270	42.437	52.380

RANGE BEARING 10017.4 183.4

.901 IS THE MAXIMUM PEAK CONCENTRATION

\* \*\*\*\*\* \*\*\*\*\* \*\*\*\*\*\*\* REEDM UPDATE 8213 LOCATION HEC \*\*\*\*\* \*\*\*\*\* \*\*\*\*\*\*\* CONCENTRATION/DOSAGE MODEL \*\*\*\*\* \*\*\*\*\* \*

\*\*\*\*\*\*\*\*\* MAXIMUM CENTERLINE CALCULATIONS \*\*\*\*\*

FOR HCL AT A HEIGHT OF 0.00 METERS DOWNWIND FROM A SPACE SHUTTLE NORMAL LAUNCH CALCULATIONS APPLY TO THE LAYER BETWEEN 0.00 AND 1046.99 METERS

¥

=

THE METEOROLOGICAL DATA IS FROM 1015 EST 12 NOV 1981 LAUNCH TIME IS 915 EST 12 NOV 1981 TIME OF EXECUTION IS 424 EST 1 JUL 1982

RANGE FROM PAD (METERS)	BEARING FROM PAD (DEGREES)	TOTAL DOSAGE (PPM SEC)	CLOUD ARRIVAL TIME (MIN)	CLOUD DEPARTURE TIME (MIN)
5002.480 6017.630 7027.479 8030.907 9023.207 10025.654 11020.912 12017.078 13023.785 14021.031 15018.668 16016.621 17014.836 18013.270 19011.887 20010.660 21009.566 22008.594 23007.715 24006.930 25006.219 26005.574 27005.000	178.174 184.365 185.047 185.007 184.088 184.078 183.508 183.033 183.441 183.117 182.835 182.589 182.371 182.177 182.004 181.848 181.707 181.579 181.462 181.355 181.256 181.165 181.080	.720 12.695 39.661 61.136 71.557 73.605 70.921 66.219 61.114 56.281 51.963 48.187 44.895 42.014 39.477 37.227 35.218 33.414 31.784 30.306 28.959 27.726 26.593	2.853 4.510 6.167 7.822 9.477 11.131 12.783 14.435 16.087 17.737 19.387 21.036 22.685 24.333 25.981 27.628 29.275 30.921 32.567 34.213 35.858 37.503 39.148	7.162 9.012 10.862 12.713 14.563 16.415 18.266 20.118 21.970 23.822 25.674 27.527 29.380 31.234 33.087 34.941 36.795 38.650 40.504 42.443 44.430 46.418 48.405
28004.469 29016.262	181.002 181.896	25.549 24.585	40.793 42.437	50.393 52.380

RANGE BEARING 184.1 10025.7

73.605 IS THE MAXIMUM TOTAL DOSAGE

\* \*\*\*\*\*\* \*\*\*\*\*\*\* REEDM UPDATE 8213 LOCATION HEC \*\*\*\*\*\* \*\*\*\*\*\* CONCENTRATION/DOSAGE MODEL \*\*\*\*\*\* \*\*\*\*\* \*

\*\*\*\*\*\*

MAXIMUM CENTERLINE CALCULATIONS

\*\*\*\*\*\*

⋿

FOR HCL AT A HEIGHT OF DOWNWIND FROM A SPACE SHUTTLE CALCULATIONS APPLY TO THE LAYER BETWEEN 0.00 AND 1046.99 METERS

0.00 METERS NORMAL LAUNCH

THE METEOROLOGICAL DATA IS FROM 1015 EST 12 NOV 1981 LAUNCH TIME IS 915 EST 12 NOV 1981 TIME OF EXECUTION IS 424 EST 1 JUL 1982

RANGE FROM PAD (METERS)	BEARING FROM PAD (DEGREES)	10.0 MIN.  MEAN CONCEN- TRATION (PPM)	CLOUD ARRIVAL TIME (MIN)	CLOUD DEPARTURE TIME (MIN)
5002.480	178.174	.001	2.853	7.162
6017.630	184.365	.021	4.510	9.012
7027.479	185.047	.066	6.167	10.862
8030.907	185.007	.102	7.822	12.713
9023.207	184.088	.119	9.477	14.563
10025.654	184.078	.123	11.131	16.415
11020.912	183.508	.118	12.783	18.266
12017.078	183.033	.110	14.435	20.118
13023.785	183.441	.102	16.087	21.970
14021.031	183.117	.094	17.737	23.822
15018.668	182.835	.087	19.387	25.674
16016.621	182.589	.080	21.036	27.527
17014.836	182.371	.075	22.685	29.380
18013.270	182.177	.070	24.333	31.234
19011.887	182.004	.066	25.981	33.087
20010.660	181.848	.062	27.628	34.941
21009.566	181.707	.059	29.275	36.795
22008.594	181.579	.056	30.921	38.650
23007.715	181.462	.053	32.567	40.504
24006.930	181.355	.051	34.213	42.443
25006.219	181.256	.048	35.858	44.430
26005.574	181.165	.046	37.503	46.418
27005.000	181.080	.044	39.148	48.405
28004.469	181.002	.043	40.793	50.393
29016.262	181.896	.041	42.437	52.380

RANGE BEARING .123 IS THE MAXIMUM 10.0 MIN. MEAN CONCENTRATION 10025.7

.

		<u>,</u>			
1.	REPORT NO.	2. GOVERNMENT ACCESSION NO.	3. RECIPIENT'S C	ATALOG NO.	
<u> </u>	NASA CR- 3646	<u> </u>			
4.	TITLE AND SUBTITLE		5. REPORT DATE	202	
	User's Manual for the REEDM	December 19			
l	Diffusion Model) Computer P	6. PERFORMING OF	RGANIZATION CODE		
7.	AUTHOR(S) J. R. Bjorklund, R.	K. Dumbauld, C. S. Cheney, and		ANIZATION REPORT #	
L	H. V. Geary		TR-82-152-		
9.	PERFORMING ORGANIZATION NAME AND ALL	DDRESS	10. WORK UNIT, NO.		
	H. E. Cramer Company, Inc.		M-392		
1	University of Utah Research	Park	11. CONTRACT OR	RANT NO.	
1	540 Arapeen Drive		NAS8-34132		
	Salt Lake City, UT 84108		13. TYPE OF REPOR	T & PERIOD COVERED	
12.	SPONSORING AGENCY NAME AND ADDRESS	3		<b>.</b>	
l	National Aeronautics and Spa	ace Administration	Contractor	Report	
	Washington, D.C. 20546	ace Administration	Jan. 1981-July 1982		
			14. SPONSORING AGENCY CODE		
			1.4. Si dissolutio A	DENCT CODE	
15	SUPPLEMENTARY NOTES		I		
'`.	OUT CEMENTARY NOTES				
	Marshall Contracting Office:	r's Representative: Joseph C.	Sloan		
	Final Report	of the state of th	510an		
<del>ا ، •</del>	ABSTRACT	,		· · · · · · · · · · · · · · · · · · ·	
'0.	ADSTRACT				
	_				
1	The purpose of this report	is to provide complete document	ation of the R	EEDM	
	Computer Program used to pr	edict concentrations, dosages,	and deposition	s downwind	
	from normal and abnormal la	unches of rocket vehicles at NA	SA's Kennedy S	nace Center.	
	The report consists of:		, -	r	
	_				
	o A mathematical desc	ription of the atmospheric disp	ersion models	cloud_rise	
	models and other for	rmulas used in the REEDM model.	croren moders,	C10uu-113C	
		- market door in the heading model.			
	o Vehicle and source	parameters, other pertinent phy	cical mmomometi	22 25 4kg	
	rocket exhaust cloud	d and meteorological lavoring	tochniques	es of the	
	rocket exhaust cloud, and meteorological layering techniques.				
	O User's instructions for the REFDM computer program				
	o User's instructions for the REEDM computer program.				
	o Worked example problems.				
	o norked example problems.				
	A computer listing of the DEEDM program is asstall to year on accompany				
	A computer listing of the REEDM program is contained in NASA CR-3647.				
17.	KEY WORDS	18. DISTRIBUTION STA	TEMENT		
	Air Pollution	Unclassified			
	Atmospheric Diffusion				
	Atmospheric Models Subject Category 47				
	Rocket Exhaust				
	Missile Plumes				
19.	SECURITY CLASSIF, (of this report)	20. SECURITY CLASSIF. (of this page)	21, NO. OF PAGES	22, PRICE	
	Unclassified	Unclassified	1.5	400	
		Unctassified	165	A08	

-